



ReliaGear® Lighting Panelboards

Knockout Removal

How to Remove Interior Shield KO's

Place screwdriver as shown and tap with hammer.

How to Remove Endwall KO's

First knock center KO inward. Outer rings should be alternately pried up or driven in one at a time.

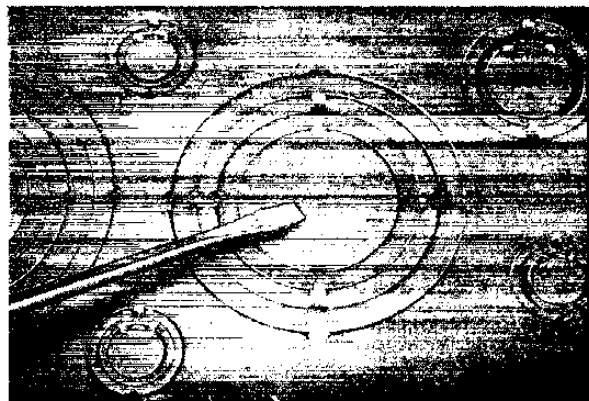
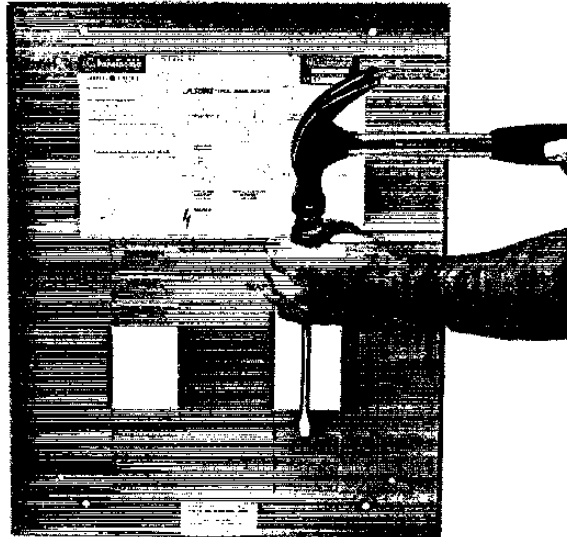


ABB Inc.
305 Gregson Drive
Cary, NC 27511

©Copyright 2020 ABB. All rights reserved.
Information provided is subject to change without notice. Please verify all details with ABB. All values are design or typical values when measured under laboratory conditions, and ABB makes no warranty or guarantee, express or implied, that such performance will be obtained under end-use conditions.
ReliaGear is a registered trademarks of ABB Inc.
GE is a registered trademark used under license from General Electric company.