


**TEST INSTRUCTIONS – 2 POLE ARC FAULT**  
**IMPORTANT: HOMEOWNER SHOULD TEST BREAKER MONTHLY.**  
 ATTACH THIS LABEL TO INSIDE OF PANEL.

1. Turn on power to load center or panelboard.
2. Test 1: Rotate test switch in "Test 1" direction to check ability of breaker to detect arcing from phase to neutral on 1<sup>ST</sup> pole (above levels needed to run appliances) and low-level arcs to ground.
3. Test 2: Rotate test switch in "Test 2" direction to check ability of breaker to detect low-level arcs from phase to neutral on 2<sup>ND</sup> pole and low-level arcs to ground.
4. Breaker is functioning properly when circuit is interrupted, handle moves to "TRIP" and "TRIP" flag appears in window.
5. Reset breaker by moving handle to "OFF" position, then to "ON" position.

***CAUTION: ARC FAULT CIRCUIT BREAKER MUST BE SUPPLIED WITH POWER FROM THE LOAD CENTER DURING TESTING. IF POWER IS ON AND EITHER OF THESE FAIL TO TRIP, THE CIRCUIT BREAKER MAY BE UNABLE TO DETECT ARCS. THE CIRCUIT BREAKER IS DEFECTIVE AND SHOULD BE REPLACED.***

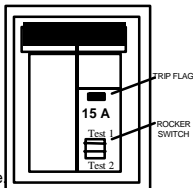

If circuit breaker trips unexpectedly:

1. Reset breaker using instructions above.
2. If tripping continues, a hazardous condition could exist and circuit should be inspected by a qualified electrician (see instruction sheet DEH-40456).

YEAR								
JAN								
FEB								
MAR								
APR								
MAY								
JUN								
JUL								
AUG								
SEP								
OCT								
NOV								
DEC								