

g


ASTAT[®] Plus Solid-State Starters

ASTAT[®] Plus Replacement Notification

WARNING! – If you are replacing an ASTAT-CD or ASTAT-IBP with an ASTAT-CD Plus or ASTAT-IBP Plus, the input and output connections must be changed. Failure to change the terminal connections may result in permanent damage to the logic board.

NOTE: Terminal assignments have changed from ASTAT to ASTAT Plus. Re-wire the terminal leads to correspond with the correct wiring diagram shown in DEH-40397 (ASTAT-CD Plus), or DEH-40396 (ASTAT-IBP Plus).

Top Terminals:

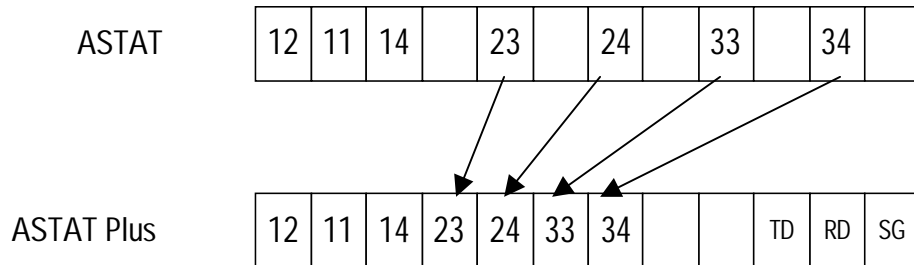

Bottom Terminals:

