

Back Connected Terminations Fixed Envelope 3, 6000A

Terminal assemblies are supplied with the Entelliguard breaker. Fixed breakers have Back or Front Connected Terminations available. This instruction is for Back Connected Terminations

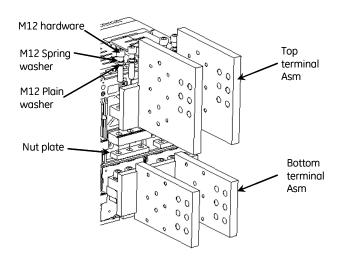


Fig A. Back Connected Terminations, Envelope 3 6000A fixed

Table 1. Back Connected Terminations
Catalog numbers

Envelope Size	Catalog #	Description	TYPE
Envelope 3	GBB360TBB3	Top side	3 pole
	GBB360BBB3	Bottom side	3 pole
	GBB360TBB4	Top side	4 pole
	GBB360BBB4	Bottom side	4 pole

DEH-41445 Installation Instructions

EntelliGuard ® G Circuit Breaker Accessories

Back Connected Terminations for Fixed Breaker



WARNING: Before installing any accessories, turn the breaker OFF, disconnect it from all voltage sources, and discharge the closing spings.



AVERTISSEMENT: Avant d'installer tout accessoire, mettre le disjoncteur en position OFF, le déconnecter de toute tension d'alimentation, et décharger les resorts d'armement

Back Connected Terminations Assembly Procedure:

- 1. Turn the breaker off and discharge the closing springs by depressing the OFF and ON buttons in the sequence OFF-ON-OFF. Verify that the breaker OFF-ON indicator shows OFF on a green background and that the charge indicator shows DISCHARGE on a white background.
- 2. Assemble the outer pole bottom & top Back Connected Termination assemblies first to the breaker rear terminal support & orient as shown in Fig A.
- 3. Terminal assemblies to be tightened with M12 hardware's as shown in Fig A, to 80 Nm (59 ft-lbs) torque.
- 4. Assemble the heat sinks LH & RH as shown in Fig B on the outer poles first, and tightened them to 14 Nm (10.3 ft-lbs) torque.
- 5. Repeat the above mounting procedure for remaining adjacent poles.
- 6. Assemble remaining terminal assemblies similarly on all the poles so as to populate as 3pole / 4 pole breaker fig C & Fig D.
- 7. The bus bars to be supported within 200mm distance and tightened to 80Nm (59 ft-lbs) torque.

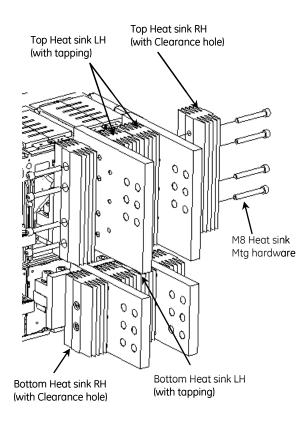


Fig B. Heat sink mounting to terminal assembly

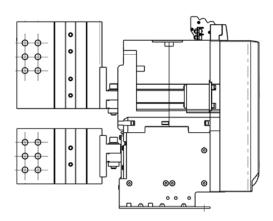


Fig E. Envelope 3, fixed type, Side view

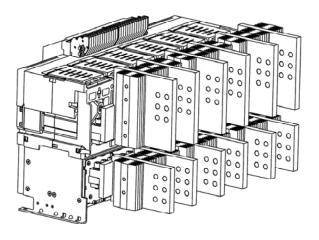


Fig C. Envelope 3, fixed type, 3 Pole Assembly

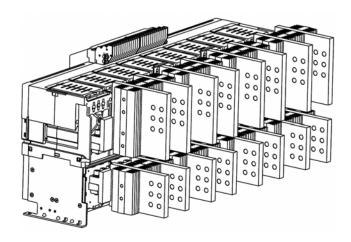


Fig D. Envelope 3, fixed type, 4 Pole Assembly

These instructions do not purport to cover all details or variations in equipment nor, to provide contingency to be met in connection with installation, operation, or maintenance. Should further information be desired, or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to GE.

GE 41 Woodford Ave, Plainville, CT 06062 www.geelectrical.com

© 2009 General Electric Company



DEH-41445 R1 (04/09)