


MULTIPLES OF GROUND FAULT PICKUP SETTING

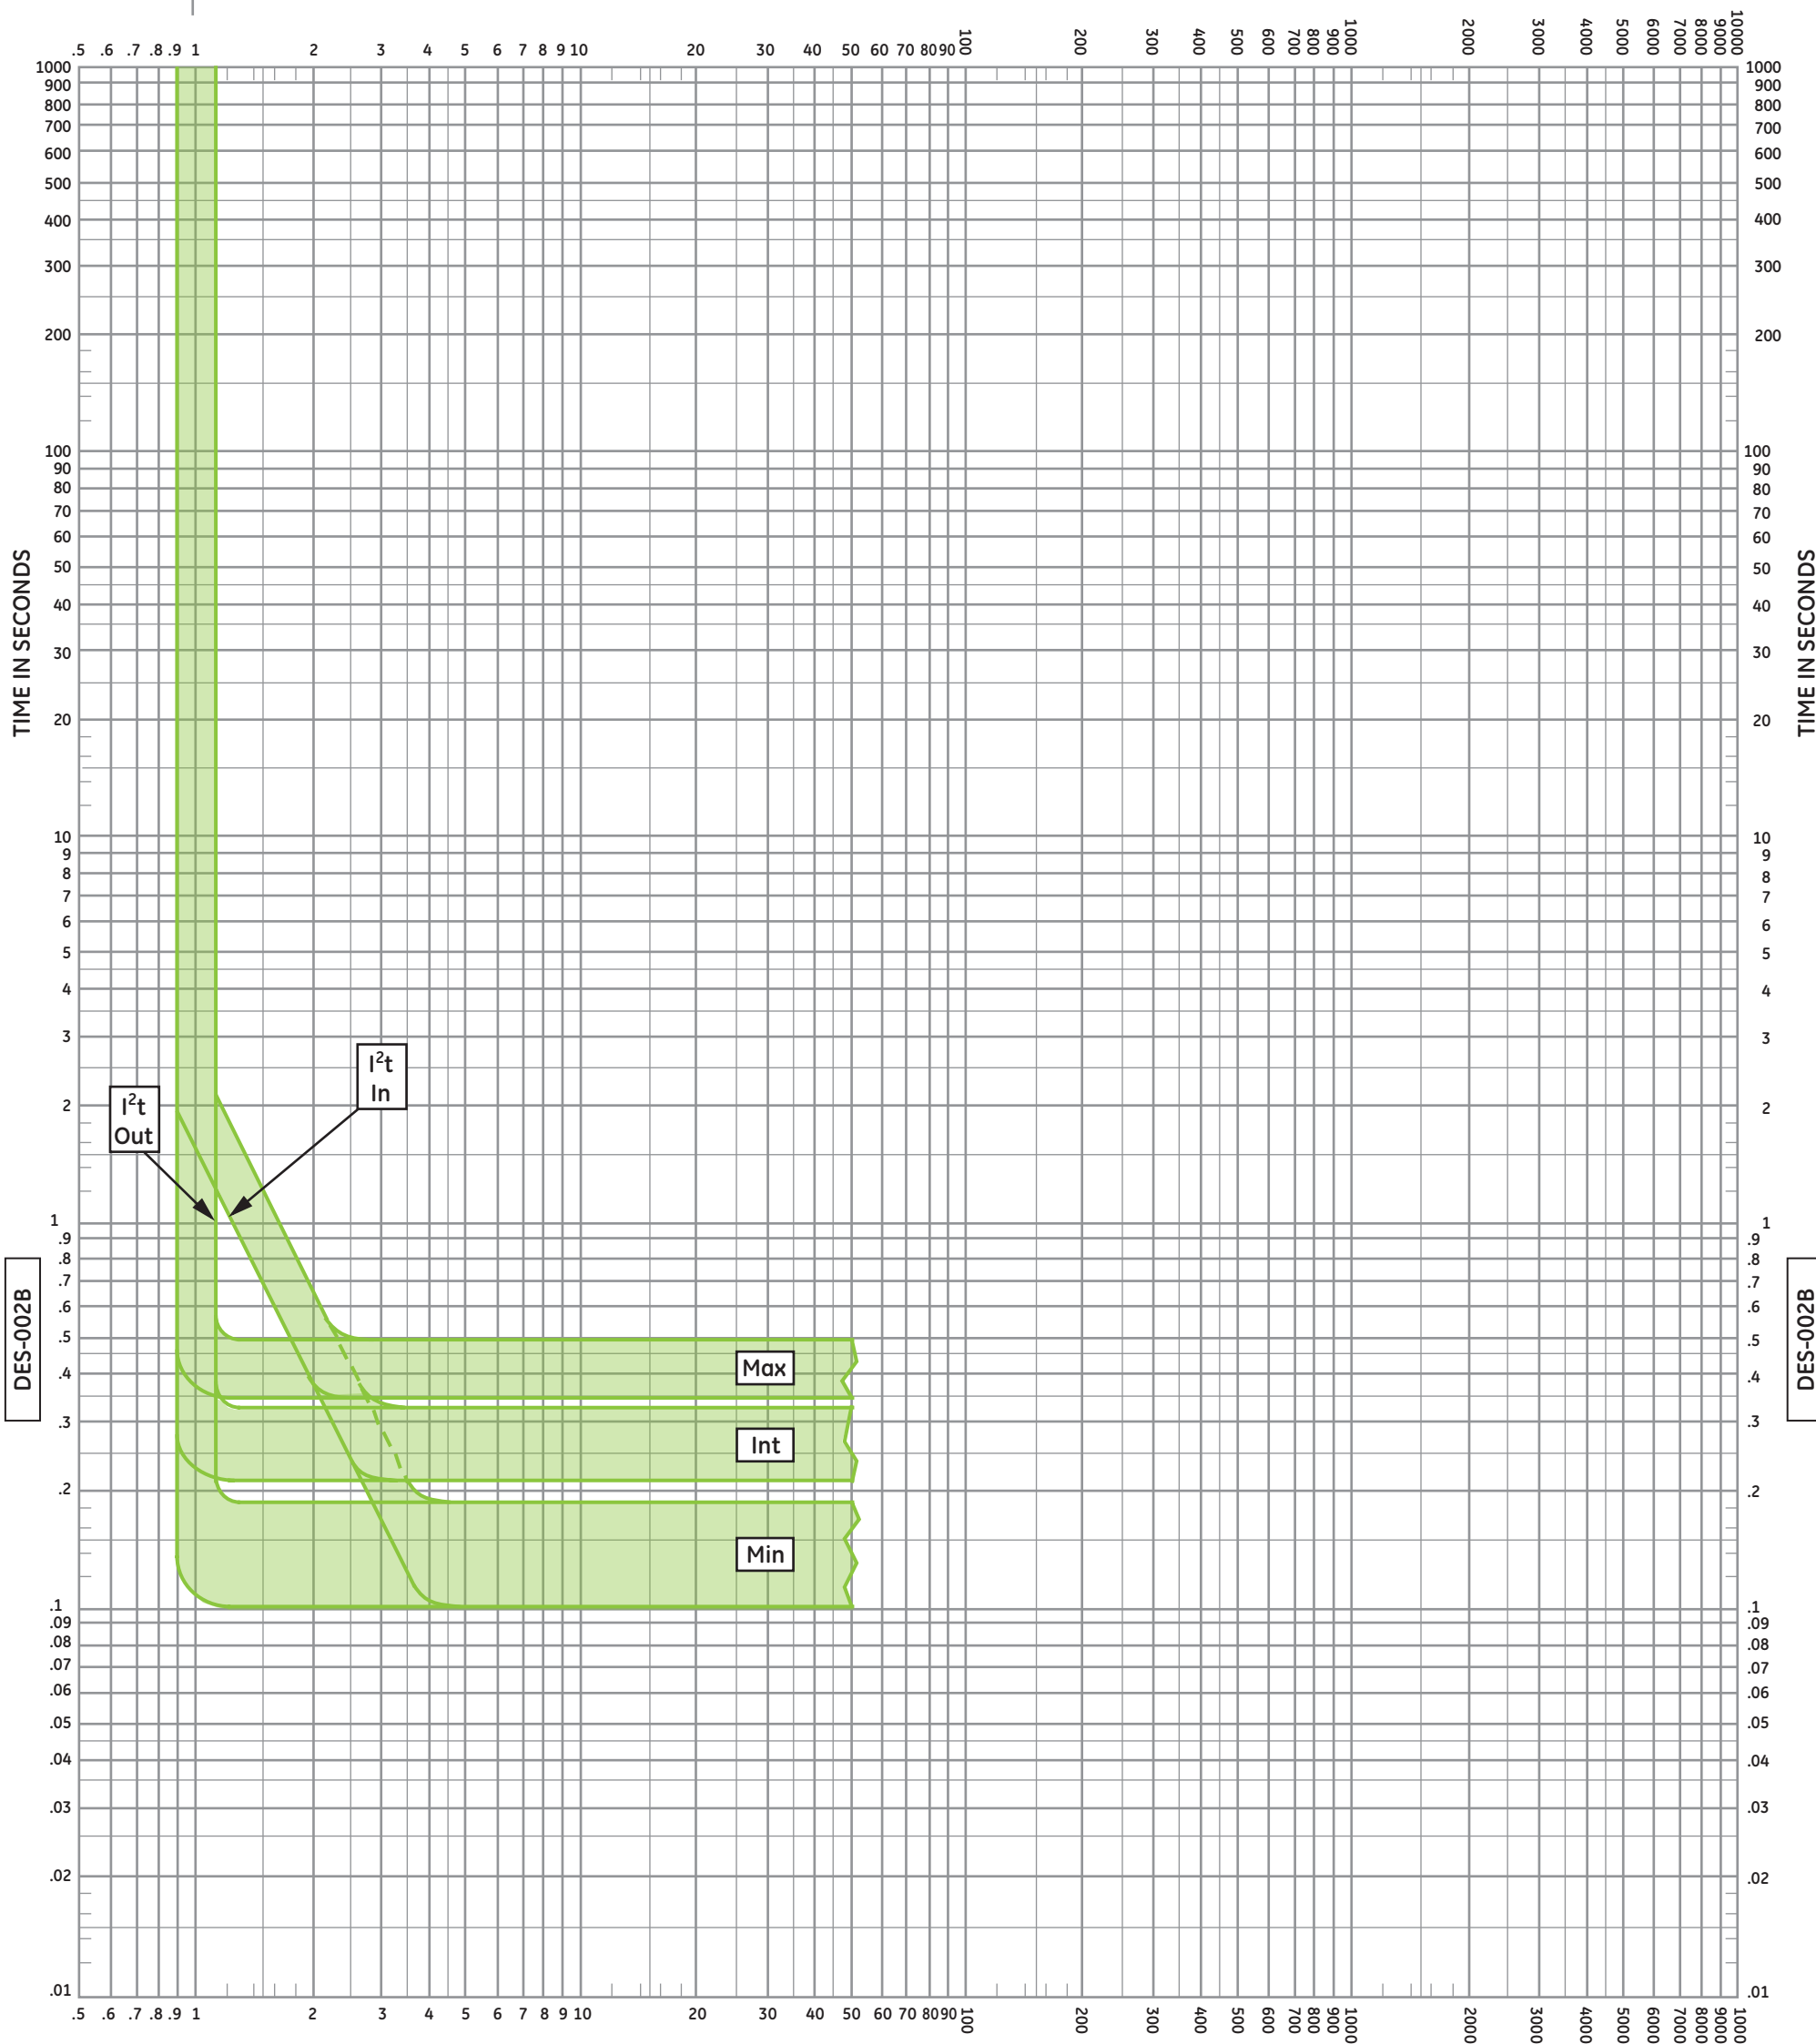

MULTIPLES OF GROUND FAULT PICKUP SETTING



GE Consumer & Industrial - Electrical Distribution

Available Ratings (Amperes)

Type	Breaker		Current Sensor (S) or CT
	Model	Frame	
LVPCB	WP08	800	150, 400, 800
	WP16	1600	800, 1600
	WP20	2000	2000
	WP32	3200	3200
	WP40	4000	4000
	WP50	5000	5000

Voltage Ratings: 600 Vac, nominal

Low-Voltage Power Circuit Breakers

Type WavePro™ with Enhanced MicroVersaTrip Plus™, MicroVersaTrip PM™ (Series RMS-9D), or Power+™ Digital RMS Trip Units

Ground Fault Time-Current Curves

Curves apply at 50 to 60 Hertz and from -20°C to 55°C breaker ambient, -20°C to 70°C trip unit ambient.

Settings Glossary

S or CT = Current Sensor Rating in amps

DES-002B

MicroVersaTrip Plus & PM Adjustments

Ground Fault Function: Pickup settings in multiples of Current Sensor Rating (S)

(S) or CT in Amps	Pickup Setting in Increments of .01
150 - 2000	.2 - .6
3200	.2 - .37
4000	.2 - .3
5000	.2 - .24

Delay Bands (I²t In & Out): 1 = Min, 2 = Int, 3 = Max

Power+ Adjustments

Ground Fault Function: Pickup settings in multiples of (S)

(S) In Amps	Current Sensor Rating
150 - 2000	.2, .25, .3, .35, .4, .45, .5, .6
3200	.2, .22, .24, .26, .28, .3, .34, .37
4000	.2, .22, .24, .26, .28, .30

Delay Bands (I²t In & Out): Min, Int, Max