



GEH4616

R-Class Fuse Kit

TRK22A/TRK26A/TPBRK12A

TPBRK16A/TPBRK22A/TPBRK26A



Hazards of electrical shock or burn! Turn off power before working inside this equipment.

Used with:

60 Amp Heavy Duty Safety Switches

Instructions

1. Remove and discard the Fuse Clips from the Load Base Assembly.
2. Fuse Clip and Bracket Assembly must be positioned in place and assembled to Load Base with one way screw as shown in Figure 2.
3. For satisfactory performance torque requirements for screw should be 22 to 32 in-lbs.

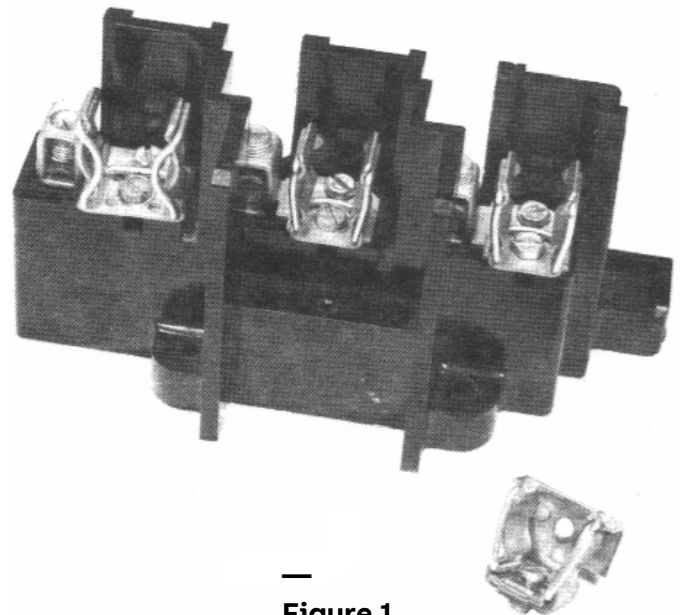


Figure 1

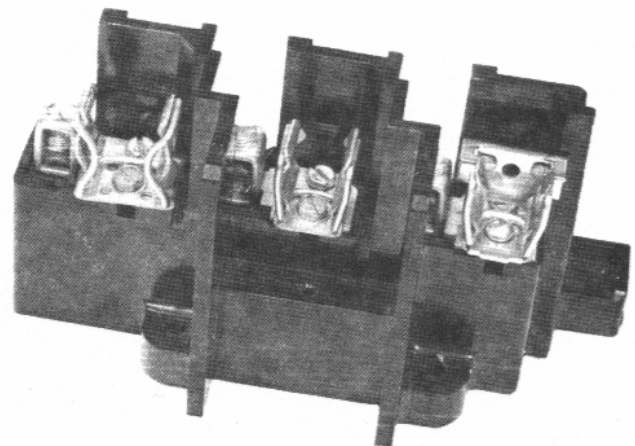


Figure 2

ABB Inc.
305 Gregson Drive
Cary, NC 27511.
electrification.us.abb.com

GE is a trademark of GE. Manufactured by ABB Inc. under license from GE.

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB Inc. does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB Inc. Copyright© 2019 ABB All rights reserved

by ABB