

Catalog No. Qty

TRK56A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class "R"

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the load side of the fuse, insert rejector into the hole in the center leg of the fuse clip. Push rejector into the hole until the compression spring is fully compressed.

CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.


ABB Inc. 305 Gregson Drive Cary, NC 27511
electrification.us.abb.com

GE is a trademark of GE. Manufactured by ABB Inc. under license from GE.

15QC920041M0201, GEJ5152 September 2019



Industrial Solutions

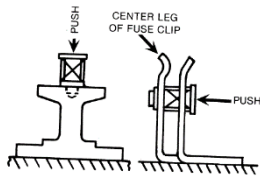

—
by ABB

Catalog No. Qty

TRK56A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class "R"

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the load side of the fuse, insert rejector into the hole in the center leg of the fuse clip. Push rejector into the hole until the compression spring is fully compressed.

CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.


ABB Inc. 305 Gregson Drive Cary, NC 27511
electrification.us.abb.com

GE is a trademark of GE. Manufactured by ABB Inc. under license from GE.

15QC920041M0201, GEJ5152 September 2019



Industrial Solutions

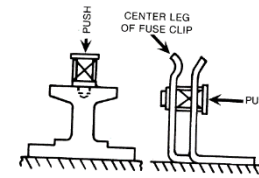

—
by ABB

Catalog No. Qty

TRK56A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class "R"

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the load side of the fuse, insert rejector into the hole in the center leg of the fuse clip. Push rejector into the hole until the compression spring is fully compressed.

CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.


ABB Inc. 305 Gregson Drive Cary, NC 27511
electrification.us.abb.com

GE is a trademark of GE. Manufactured by ABB Inc. under license from GE.

15QC920041M0201, GEJ5152 September 2019



Industrial Solutions

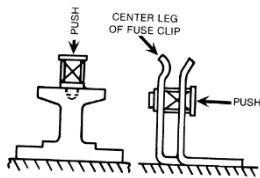

—
by ABB

Catalog No. Qty

TRK56A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class "R"

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the load side of the fuse, insert rejector into the hole in the center leg of the fuse clip. Push rejector into the hole until the compression spring is fully compressed.

CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.


ABB Inc. 305 Gregson Drive Cary, NC 27511
electrification.us.abb.com

GE is a trademark of GE. Manufactured by ABB Inc. under license from GE.

15QC920041M0201, GEJ5152 September 2019



Industrial Solutions

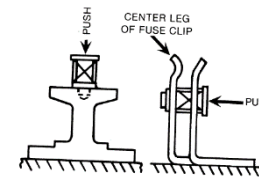

—
by ABB