


MULTIPLES OF CURRENT SENSOR TAP (X)

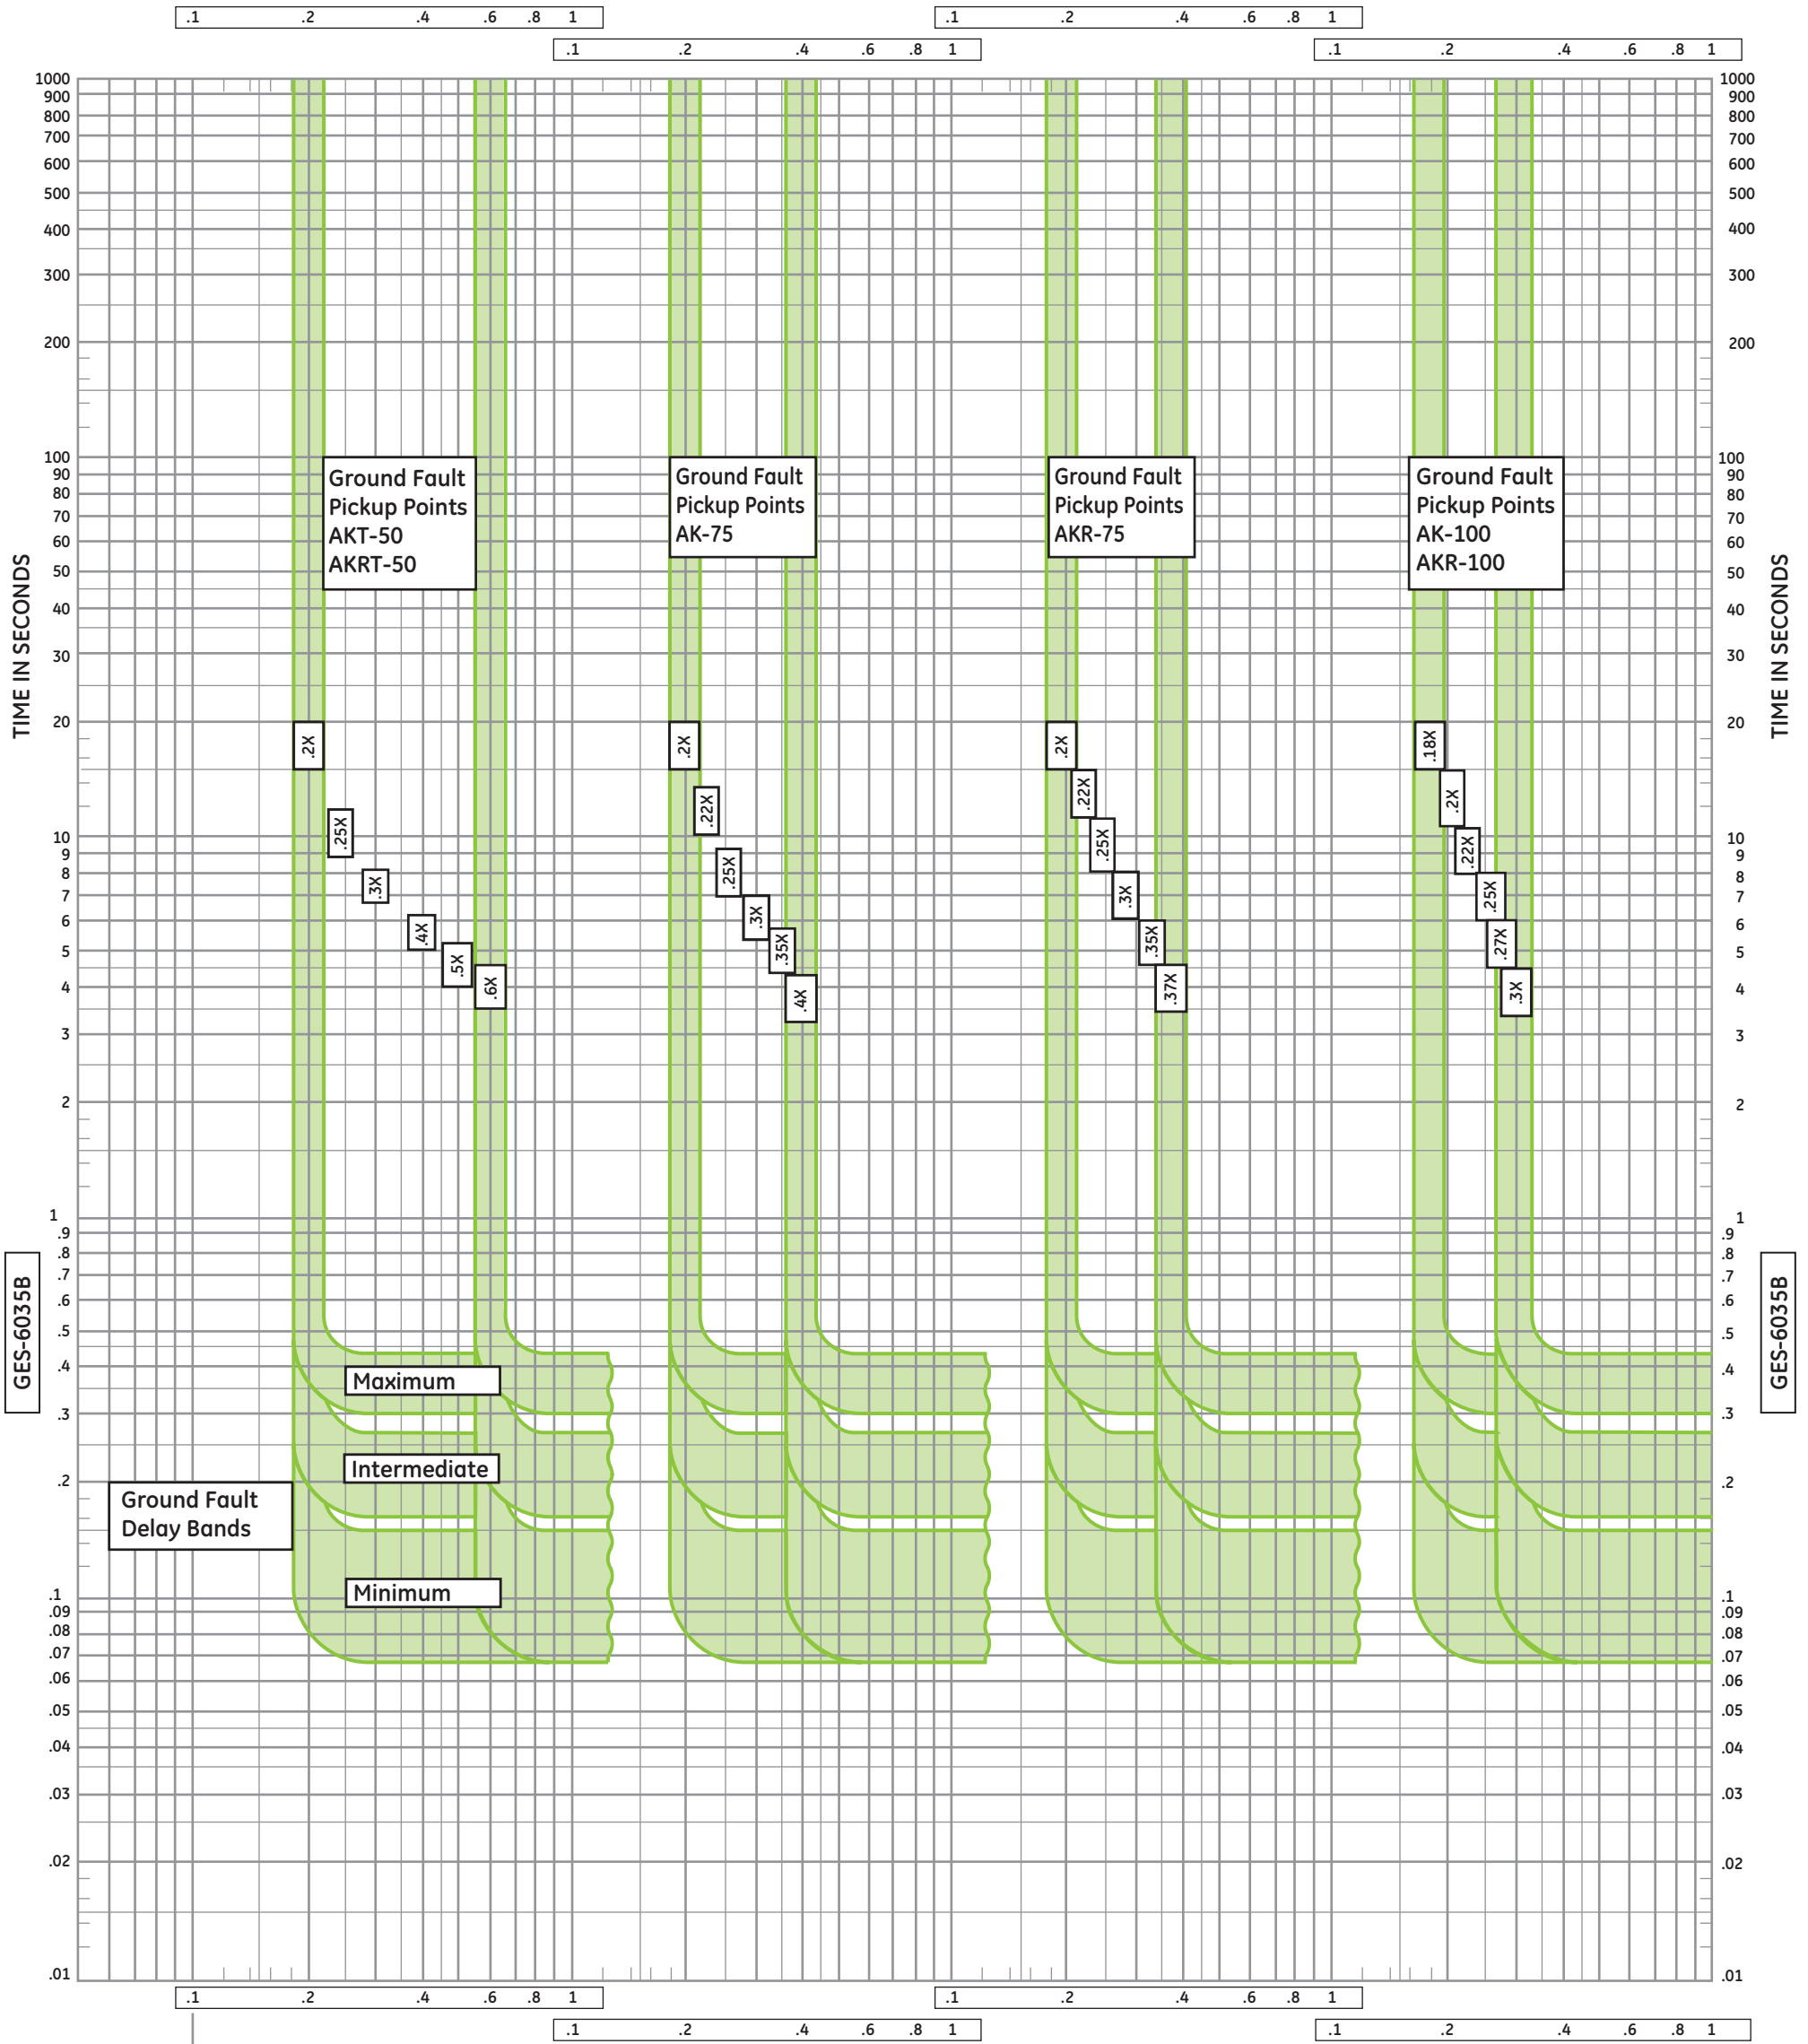

MULTIPLES OF CURRENT SENSOR TAP (X)



GE Consumer & Industrial -  
Electrical Distribution

**Current Sensor Taps (Amperes)**

AKT/AKRT-50	800, 1200, 1600, 2000
AK-75	1200, 1600, 2000, 3000
AKR-75	1200, 1600, 2000, 3200
AK/AKR-100	1600, 2000, 3000, 4000

**Low-Voltage Power Circuit Breakers**

Type AK/AKR  
SST™ Solid-state Overcurrent Trip Device  
Ground Trip Time-current Curves

Curves apply at 50/60 Hertz.  
From -20°C to 70°C Programmer Ambient.

**GES-6035B**

**Programmer Set Points**

**Ground Fault Pickup:**


AK/AKRT-50	.2x, .25x, .3x, .4x, .5x, & 6x
AKR-75	.2x, .22x, .25x, .3x, .35x, & 4x
AKRT-75	.2x, .22x, .25x, .3x, .35x, & .37x
AK/AKR-100	.18x, .2x, .22x, .25x, .27x, & .3x

Where X = Sensor tap setting

**Ground Fault Delay Bands:**

Maximum, Intermediate & Minimum

MULTIPLES OF CURRENT SENSOR TAP (X)

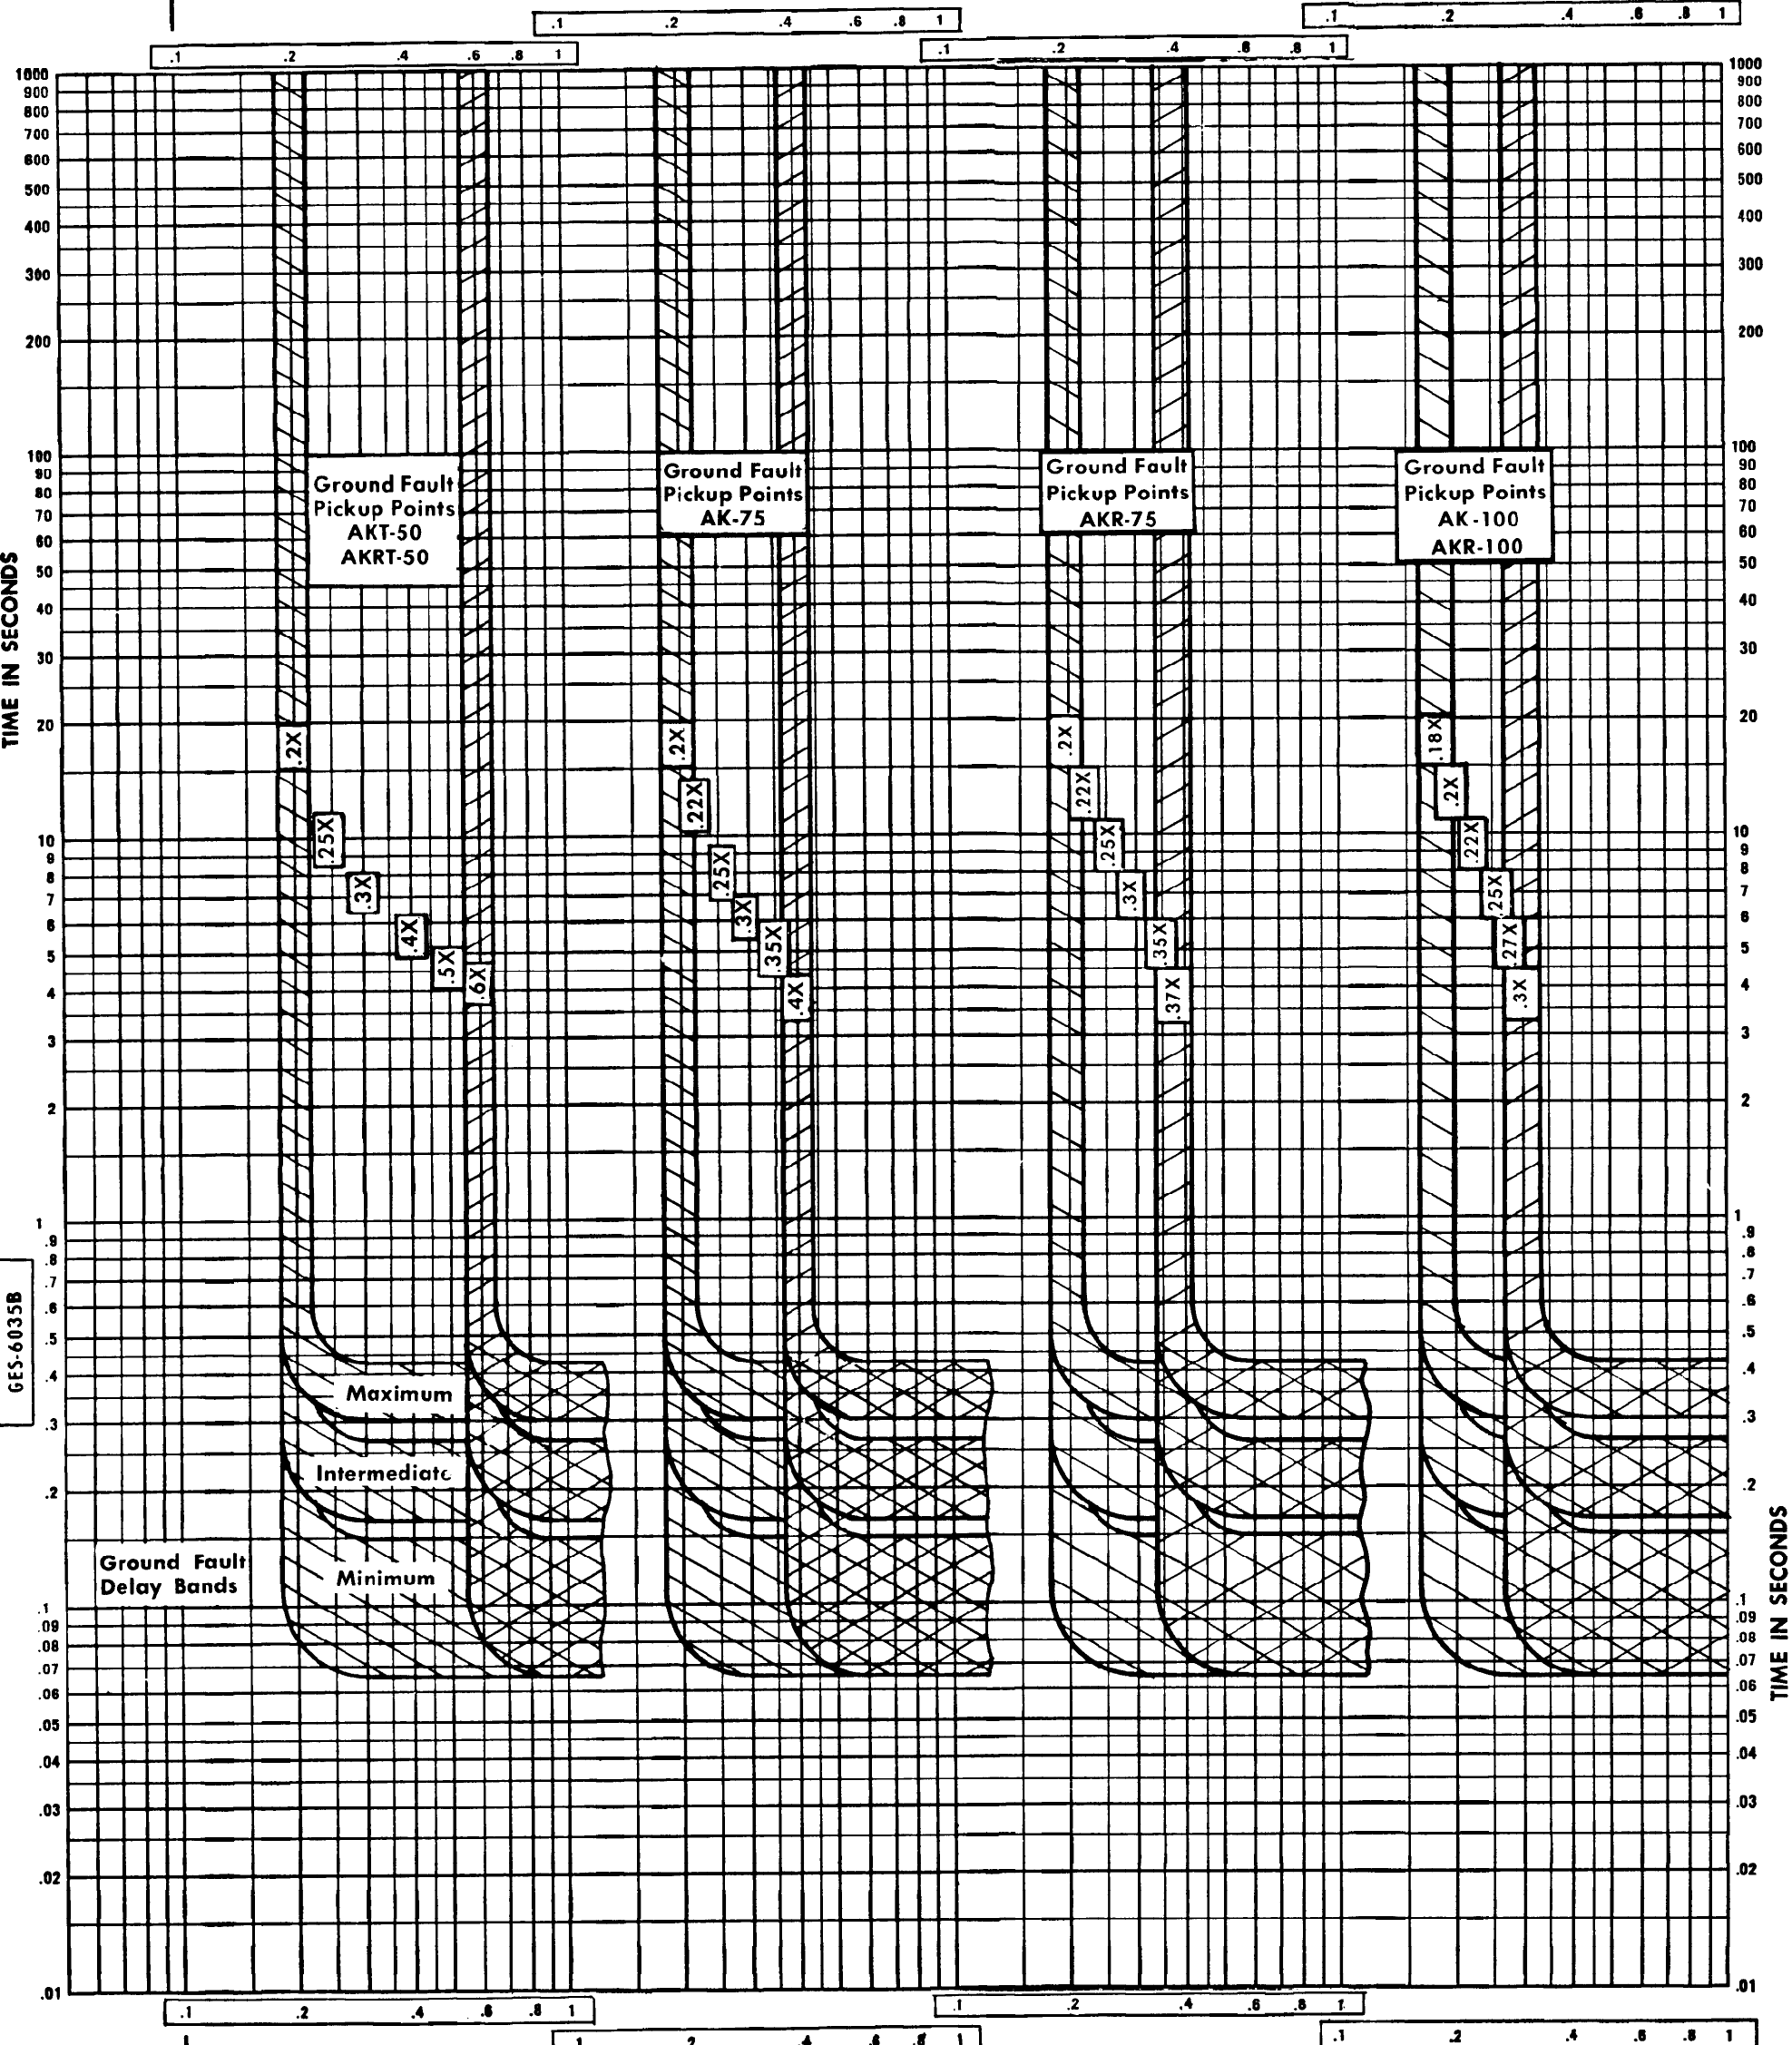

NOTE: 4th wire Ground sensor tap must be set same as phase sensor tap.

<b>GENERAL ELECTRIC</b> X = Current Sensor Taps (Amperes) AKT/AKRT-50      800, 1200, 1600, 2000 AK-75              1200, 1600, 2000, 3000 AKR-75             1200, 1600, 2000, 3200 AK/AKR-100       1600, 2000, 3000, 4000	<b>AK/AKR LOW-VOLTAGE POWER CIRCUIT BREAKERS</b> <b>SST™</b> SOLID-STATE OVERCURRENT TRIP DEVICE <b>Ground Trip Time-current Curves</b> Curves apply at 50/60 Hertz From - 20C to + 70C Programmer Ambient	<b>GES-6035B</b> Programmer Set Points Ground Fault Pickup: AKT/AKRT-50    .2x, .25x, .3x, .4x, .5x, & .6x AK-75            .2x, .22x, .25x, .3x, .35x, & .4x AKR-75           .2x, .22x, .25x, .3x, .35x & .37x AK/AKR-100     .18x, .2x, .22x, .25x, .27x & .3x Where X = sensor tap setting Ground Fault Delay Bands Maximum, Intermediate & Minimum
---	--	--

10/84(1M)

GENERAL ELECTRIC CO., CONSTRUCTION EQUIPMENT BUSINESS OPERATIONS, PLAINVILLE, CONN. 06062