



GE Consumer & Industrial -
Electrical Distribution

X = Current Sensor Tap Setting or Rating

Current Sensor Taps (Amperes) LVPCB		Current Sensor Taps (Amperes) ICCB	
AK-25	70/100/150/225/ or 200/300/400/600	800 Envelope	400/200, 600/300, 800/400
		1600 Envelope	800/400, 1000/500,
			1200/600, 1600/1000
AKR-30	100/150/225/300 or 300/400/600/800	2000 Envelope	2000/1200
		2500 Envelope	600/300, 800/400, 1000/500
			1200/600, 1600/1000,
AKR-50	300/400/600/800 or 600/800/1200/1600		2000/1200, 2500/1800
AKRT-50	800/1200/1600/2000	3000 Envelope	3000/2400
AKR-75	1200/1600/2000/3200	4000 Envelope	4000/3000
AKR-100	1600/2000/3000/4000		
Fixed Current Sensor Ratings (Amperes) LVPCB		Fixed Current Sensor Ratings (Amperes) ICCB & MCCB	
AKR-30	100, 150, 225, 300, 400, 600, 800	150, 200, 300, 400, 500, 600, 800	
AKR-50	300, 400, 600, 800, 1200, 1600	1000, 1200, 1600, 2000, 2500,	
AKRT-50	800, 1200, 1600, 2000	3000, 4000	
AKR-75	1200, 1600, 2000, 3200		
AKR-100	1600, 2000, 3000, 4000		

Voltage Rating: 600 Vac, 50 through 400 Hertz

NOTE: Operation above 60 Hertz requires derating of the continuous current rating of the circuit breaker.

**Low-Voltage Power Circuit Breakers
Insulated Case & Molded Case
Circuit Breaker**

with MicroVersaTrip®
Ground Fault Time-Current Curves

Curves apply at 50 through 400 Hertz
and from -20°C to 55°C breaker ambient

GES-6195B

Ground Fault Unit

Pickup Settings: 0.2, 0.25, 0.3, 0.35, 0.4, 0.45, 0.5, 0.6 multiples of the current sensor tap setting or rating (X) for sensors of 150 to 2000 amperes.

Pickup Settings: 0.2, 0.22, 0.24, 0.26, 0.28, 0.30, 0.34, 0.37 multiples of the current sensor tap setting or rating (X) for sensors of up to 3200 amperes.

Pickup Settings: 0.2, 0.22, 0.24, 0.26, 0.28, 0.30 multiples of the current sensor tap setting or rating (X) for sensors of up to 4000 amperes.

Delay Bands: 3 settings of MIN, INT, MAX for all ratings.