




Spectra RMS™ SK Frame Molded Case Circuit Breakers

Handle Padlock Kit Catalog Number SKPLD

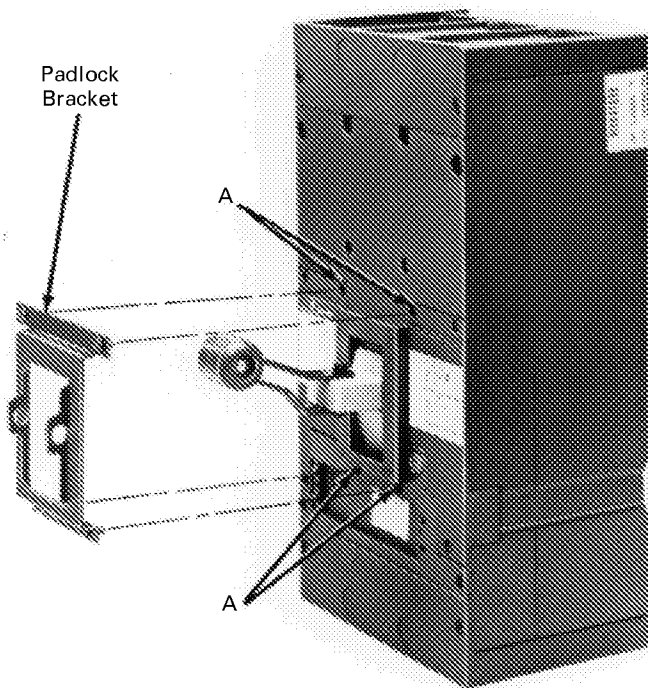

MOUNTING INSTRUCTIONS

1. Remove four (4) screws from locations marked "A" and discard.
2. Assemble padlock bracket in position shown, and fasten with attached screws. Torque to 7-10 in. lbs. when metal inserts are used in circuit breaker.

NOTE: Use alternate screws to mount padlock bracket when no metal inserts are used in circuit breaker.

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the GE Company.



GE Electrical Distribution & Control

General Electric Company
41 Woodford Ave., Plainville, CT 06062