



**GEJ3056** *Installation Instructions*

## **SEPLD Handle- Padlocking Device**


For use on SE150 and SF250 Spectra RMS™ Circuit Breakers

### **DESCRIPTION**

Padlock device fits between breaker and enclosure.

### **ASSEMBLY**

1. Remove enclosure cover.
2. For SF circuit breakers, press padlock device over breaker handle escutcheon, padlock hole to the left, line end up. Secure to breaker with two screws provided.
3. For SE circuit breakers, break tab off of padlock device and press padlock device over breaker handle escutcheon, padlock hole to the left, line end up. Secure to breaker with one of the two screws provided.
4. Replace enclosure cover.

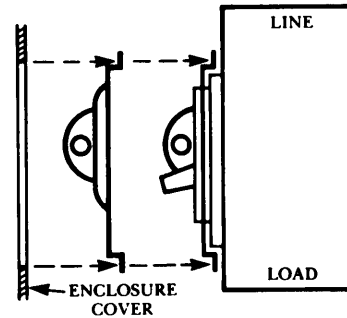

GEJ3056  
Rev. 02 0792 PS

**GE Electrical Distribution & Control**  
General Electric Company, 41 Woodford Ave., Plainville, CT 06062  
© 1992 General Electric Company