




## INSTRUCTIONS

GEJ-4636

### MOUNTING PADLOCKING DEVICES TKMPLD1 TO K 1200 CIRCUIT BREAKERS

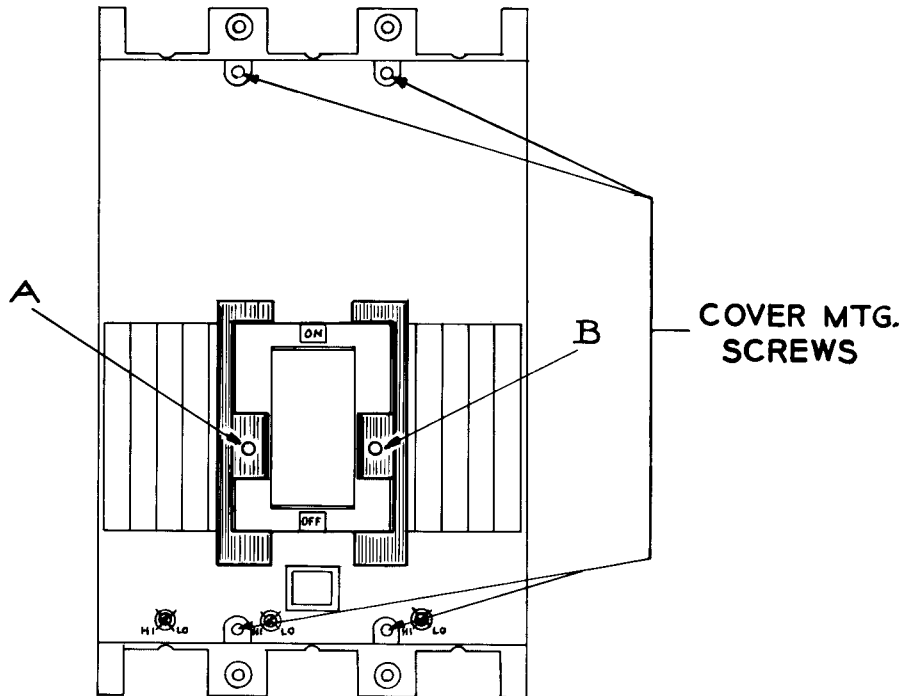

**CAUTION: MAKE SURE BREAKER IS IN OFF POSITION**

- STEP 1:** Remove cover from breaker by unscrewing 4 mounting screws.
- STEP 2:** Place locking shelves on each side of escutcheon.
- STEP 3:** Drill 0.120 diameter hole through escutcheon at A and B. Use locking shelf as template. **DANGEROUS: Do not drill unless cover is removed from breaker.**
- STEP 4:** Secure locking shelf by hammering in supplied drive screws.
- STEP 5:** Install breaker cover.

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company.

DISTRIBUTION EQUIPMENT DIVISION PLAINVILLE, CONNECTICUT

**GENERAL**  **ELECTRIC**

GEJ-4636 R02 0508