



A Series[®] Lighting Control Panel boards




WARNING: Danger of electrical shock or injury. Turn OFF power service to the line side of the Panel board or switchboard before working inside the equipment or removing any component. Equipment is to be installed and maintained by properly trained and qualified personnel only.

Replacement of DB25 Connector cable L /R

Catalog No.	Qty.
ASRCWIREL	1
ASRCWIRER	1

Removal of existing cables:

1. Ensure that the Installer is properly grounded before working with controller box connections.
2. Remove the front cover & dead front of the Panel board / Integrated Switch board.
3. Remove cable connectors by unscrewing the self-retaining securing screws (2 per connector). Remove controller connector first and then the back plane connector second. Procedure typical to both right & left sides.
4. Make sure threaded stud on mating controller connector stays in place. If stud comes off with removal, remove from the connector screw and re-insert and screw hand tight into controller DB25 terminal located inside the controller box.

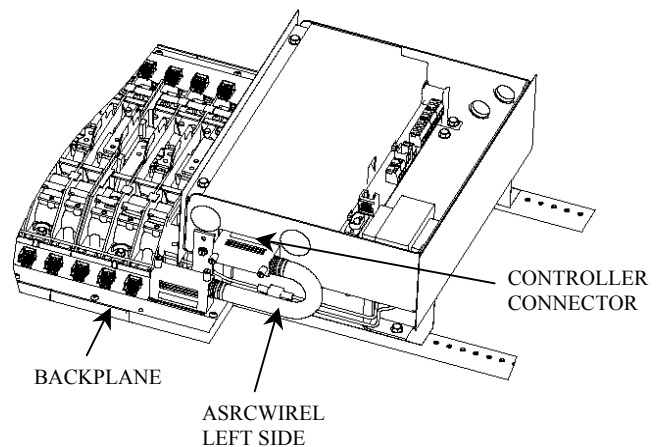

Reinstallation instructions:

1. Cable connector ends have embossed lettering on them defining LH (left Hand) or RH (Right Hand)
2. Connect one end on the DB25 connector cable to DB25 pin connector on back plane first and other end of the cable to controller box DB25 pin connector as shown
3. Press the ends of the cables firmly and tighten four knurled screws of cable connector ends to torque of 5-10 lb-inch.
4. Install the dead front & front cover of the Panel board / Integrated Switch Board

