

## <u>Back Connected Terminations</u> Envelope 2, 3200A ANSI, Fixed type

Terminal assemblies are supplied with the Entelliguard breaker. Fixed breakers have Back or Front Connected Terminations available. This instruction is for Back Connected Terminations

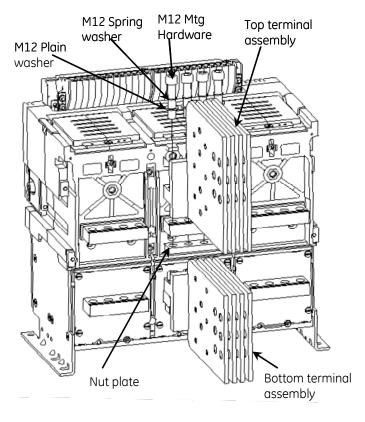


Fig A. Back Connected Terminations assembly, (Middle pole)  $_{5.}$  For 3200 Amperes (ANSI) 3 pole, fixed type

Table 1. Back Connected Terminations
Catalog numbers

Envelope Size	Catalog #	Description	TYPE
Envelope 2	GBB232TBB3	Top side	3 pole
	GBB232BBB3	Bottom side	3 pole
	GBB232TBB4	Top side	4 pole
	GBB232BBB3	Bottom side	4 pole

## EntelliGuard ® G Circuit Breaker Accessories Back Connected Terminations for Fixed Breaker



WARNING: Before installing any accessories, turn the breaker OFF, disconnect it from all voltage sources, and discharge the closing spings.




AVERTISSEMENT: Avant d'installer tout accessoire, mettre le disjoncteur en position OFF, le déconnecter de toute tension d'alimentation, et décharger les resorts d'armement

## Back Connected Terminations Assembly (3 Pole) Procedure:

- 1. Turn the breaker off and discharge the closing springs by depressing the OFF and ON buttons in the sequence OFF-ON-OFF. Verify that the breaker OFF-ON indicator shows OFF on a green background and that the charge indicator shows DISCHARGE on a white background.
- 2. First assemble & orient the middle terminations assemblies on to the breaker rear terminals as shown in Fig A.
- 3. Middle top & bottom terminal assemblies to be tightened with M12 hardware's as shown in Fig A, to 80 Nm (59 ft-lbs) torque.
- 4. Assemble the heat sinks LH & RH with spacers introduced in between the multiple pads of terminal assemblies as shown in Fig B for bottom & top sides. Tightened them with M8 mounting hardware's to 16 Nm (11.8 ft-lbs) torque.
- 5. Assemble the outer terminal assemblies on bottom and top side with M12 hardware tightened to 80 Nm (59 ft-lbs) torque as shown in Fig C.
- 6. Assemble the heat sinks RH with clearance holes & spacers introduced in between the multiple pads of outer terminal assemblies as shown in fig D, for bottom & top sides and tightened them with M8 mounting hardware's to 16 Nm (11.8 ft-lbs) torque.

- 7. Assemble remaining terminal assemblies similarly on all poles so as to populate as 3pole / 4 pole breaker.
- 8. The bus bars to be supported within 200mm distance and tightened to 80Nm (59 ft-lbs) torque.

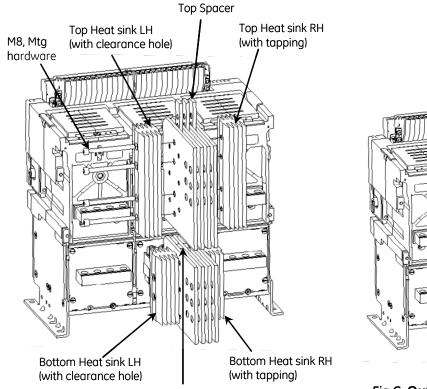

**Bottom Spacer** 

Fig B. Heat sink Asm with spacers (Middle pole) For 3200A, (ANSI) 3 pole, fixed type

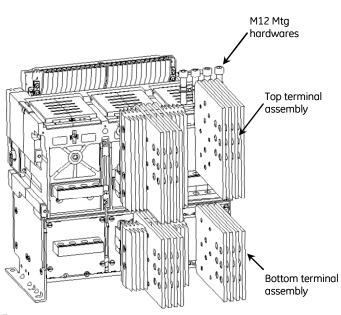


Fig C. Outer pole, Back Connected Terminations asm For 3200 A, (ANSI) 3 Pole, fixed type

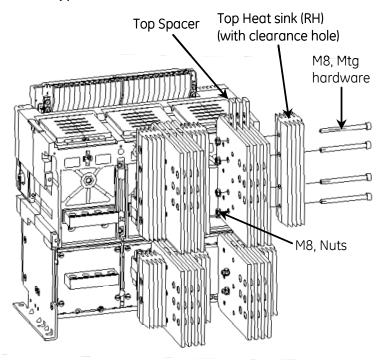


Fig D. Outer pole Heat Sink with spacer assembly For 3200 Amperes (ANSI), 3 Pole, Fixed type

\*\* For 3 Pole , L2 Phase to have two heat sinks, While outer poles L1 & L3 to have only one outer heat sinks assembled

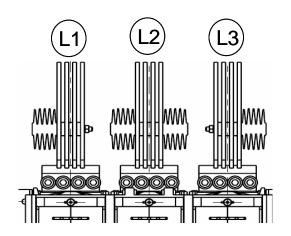


Fig E. Envelope 2, 3200A ANSI 3 Pole, fixed type, Top view

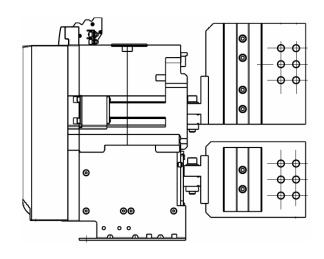


Fig F. Envelope 2 , 3200A ANSI 3 Pole, fixed type, Side view

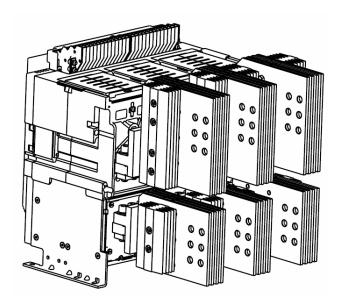


Fig G. Envelope 2, 3200A ANSI 3 Pole, fixed type

## Back Connected Terminations Assembly (4 Pole) Procedure:

- 1. Similar Procedure to be followed for 4 pole breaker with neutral on right or left.
- 2. For 4 Pole breaker, assemble the L2 pole with two heat sinks first. Then assemble the adjacent poles with only one outer heat sinks. Refer Fig H Fig L.

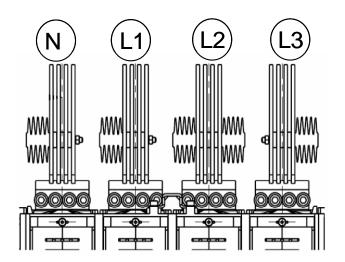


Fig H. Envelope 2, 3200A ANSI 4 Pole, Neutral Left, Top view

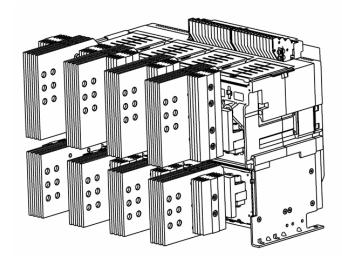


Fig I. Envelope 2, 3200A ANSI 4 Pole, Neutral left, fixed type

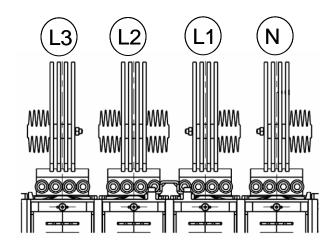


Fig J. Envelope 2 , 3200A ANSI 4 Pole ,Neutral Right, Top view

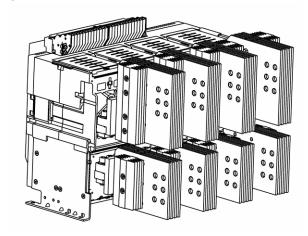


Fig K. Envelope 2, 3200A ANSI 4 Pole, Neutral Right, fixed type

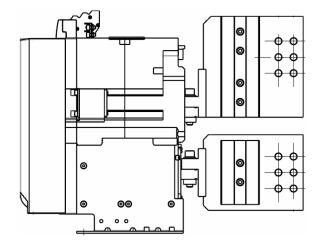


Fig L . Envelope 2, 3200A 4 Pole, fixed type, Side view

These instructions do not purport to cover all details or variations in equipment nor, to provide contingency to be met in connection with installation, operation, or maintenance. Should further information be desired, or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to GE.

GE 41 Woodford Ave, Plainville, CT 06062 www.geelectrical.com

© 2009 General Electric Company



DEH- 41443 R1 (04/09)