


Operating manual

Conceptpower DPA 120 UL

208V 20 – 120kW

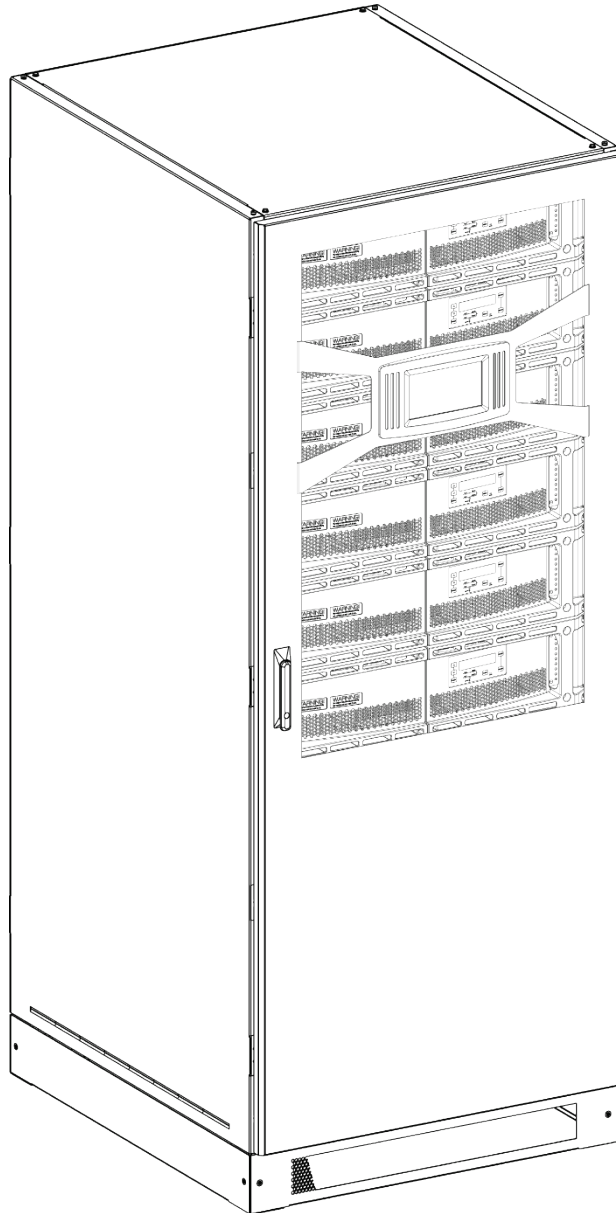

Document information

File name : 4NWP101862R0001_OPM_ABB_CP_DPA_120_UL_REV-B.docx
UPS model : Conceptpower DPA 120 UL
Date of issue : 06.04.2016
Article number : 4NWP101862R0001
Document number : 4NWD003003
Revision : B

Foreword

**CAREFULLY READ THE SAFETY INSTRUCTIONS
BEFORE READ THIS OPERATING MANUAL.**

The UPS System operates with mains, battery or bypass power. It contains components that carry high currents and voltages. The properly installed UPS System is grounded to earth and IP 20 rated against electrical shock and foreign objects. Installation and service have to be done by the manufacturer's qualified service engineers or their certified service partners.

**OPERATIONS INSIDE THE UPS MUST BE
PERFORMED BY A SERVICE ENGINEER FROM THE
MANUFACTURER OR FROM AN AGENT CERTIFIED
BY THE MANUFACTURER.**

This user manual contains guidelines to check delivery, installing and commissioning of the UPS and is intended for people who plan the installation, install, commission and use or service the UPS. The reader is expected to know the fundamentals of electricity, wiring, electrical components and electrical schematic symbols.

**CAREFULLY READ THE USER MANUAL BEFORE
OPERATING OR WORKING ON THE UPS.**

Contents

| | |
|---|-----------|
| Safety instructions | 7 |
| 1 Important safety instructions | 8 |
| 1.1 Save these instructions | 8 |
| 1.2 Safety rules..... | 8 |
| 1.3 Safety symbols and warnings..... | 11 |
| | |
| User manual | 13 |
| 2 General information | 14 |
| 2.1 Declaration of safety conformity and CE marking | 14 |
| 2.2 Nameplate and identification..... | 15 |
| 3 System description | 16 |
| 3.1 System architecture | 17 |
| 3.2 Basic Module | 17 |
| 3.3 Main elements description | 18 |
| 3.3.1 Single line diagram | 18 |
| 3.3.2 Functional description | 18 |
| 3.3.3 Control & monitoring | 20 |
| 3.4 Multi cabinet configuration..... | 21 |
| 3.5 Operating modes | 22 |
| 3.5.1 Mode "ON-LINE"..... | 22 |
| 3.5.2 Mode "OFF-LINE" (Eco or bypass mode)..... | 23 |
| 3.5.3 Mode "ON-BATTERY" (Battery mode) | 24 |
| 3.5.4 Maintenance bypass | 25 |
| 4 Control & monitoring | 26 |
| 4.1 Control panel module | 26 |
| 4.1.1 Status & alarm indication | 26 |
| 4.1.2 Buttons | 27 |
| 4.2 LCD description | 28 |
| 4.2.1 Status | 28 |
| 4.2.2 Main menu | 29 |
| 4.2.3 Commands | 29 |
| 4.3 Metering | 29 |
| 4.3.1 Measurements | 29 |
| 4.3.2 Event log | 30 |
| 4.3.3 UPS Data | 30 |
| 4.3.4 Set-up user | 31 |
| 4.3.5 Set-up service | 31 |
| 5 Options | 32 |
| 6 Maintenance & troubleshooting | 33 |
| 6.1 General maintenance | 33 |

| | | |
|------------|---|-----------|
| 6.1.1 | User responsibilities | 33 |
| 6.1.2 | Preventative maintenance | 33 |
| 6.1.3 | Deep battery test | 34 |
| 6.1.4 | Battery maintenance, disposal and recycling | 34 |
| 6.2 | Troubleshooting | 34 |
| 6.2.1 | Alarms | 34 |
| 6.2.2 | Menu, commands, event log and measurements | 34 |
| 6.2.3 | Fault identification and rectification | 35 |

Installation guide37

7 Packing, transportation & storage 38

7.1 Packing & transportation.....38

7.2 Unpacking.....39

7.2.1 Standard package (film)39

7.2.2 Sea freight light package (cartboard box)40

7.2.3 Sea freight cases (wooden box)41

7.3 Storage42

7.3.1 UPS42

7.3.2 Batteries.....42

8 Installation 43

8.1 Environmental condition43

8.1.1 Climatic conditions43

8.1.2 Biological conditions.....43

8.1.3 Mechanical active substance43

8.1.4 Chemical active substance43

8.1.5 Mechanical conditions43

8.2 Environmental condition for UPS with inside battery modules or external battery cabinet43

8.2.1 Climatic conditions43

8.3 UPS location44

8.3.1 Battery cabinet location45

8.3.2 Fixing of the UPS to the building structure45

8.4 UPS connections46

8.4.1 Input connections.....47

8.4.2 Output connections.....49

8.5 Electrical wirings50

8.5.1 Terminals overview50

8.5.2 Single input feed and separate batteries configuration.....51

8.5.3 Dual input feed and common battery configuration53

8.5.4 External battery cabinet54

9 Communication interfaces 55

9.1.1 Customer Interface and DRY PORTs55

9.1.2 JD1 / RS232 smart port computer interface.....57

9.1.3 USB computer interface57

10 Commissioning 58

10.1 LED colors legend58

10.2 Start-up procedure58

10.3 Shut-down procedure61


10.3.1 Remote shutdown62

| | | |
|-------------|--|-----------|
| 10.3.2 | Generator ON facilities..... | 62 |
| 10.4 | Manual bypass | 63 |
| 10.4.1 | From inverter to bypass..... | 63 |
| 10.4.2 | From bypass to inverter..... | 64 |
| 10.5 | Adding & replacement of a power module..... | 65 |
| 10.5.1 | In a single-module system..... | 65 |
| 10.5.2 | In a redundant multi-module system..... | 68 |
| 10.5.3 | In capacity multi-module system..... | 71 |
| 10.6 | Multi cabinet configuration (option) | 74 |
| 10.6.1 | NW28140 configuration..... | 74 |
| 10.6.2 | Parallel adapter setting..... | 75 |
| 10.6.3 | Parallel cable connection..... | 76 |
| 10.7 | Multidrop configuration | 76 |
| 10.7.1 | Customer interface board Input-output contacts | 77 |
| 10.7.2 | Customer interface configuration | 77 |
| 10.7.3 | Led Blinking status | 78 |
| 10.7.4 | Multidrop cable connection | 78 |
| 10.7.5 | Interface board parameters | 79 |
| 11 | Options | 80 |
| 11.1 | Field installable kits | 80 |
| 11.1.1 | Additional Module..... | 80 |
| 11.1.2 | Parallel kit..... | 80 |
| 11.1.3 | Network interface cards (SNMP)..... | 80 |
| 11.1.4 | Battery Temperature Sensor..... | 84 |
| 11.1.5 | Synchronization kit | 85 |
| 11.1.6 | Synchronization kit method 1 | 86 |
| 11.1.7 | Synchronization kit method 2 | 87 |
| 11.1.8 | Synchronization kit method 3 | 89 |
| 12 | Revision History..... | 91 |
| 13 | Attachments | 91 |
| 13.1 | Technical data sheet..... | 91 |

Safety instructions

Conceptpower DPA 120 UL

208V 20 – 120kW

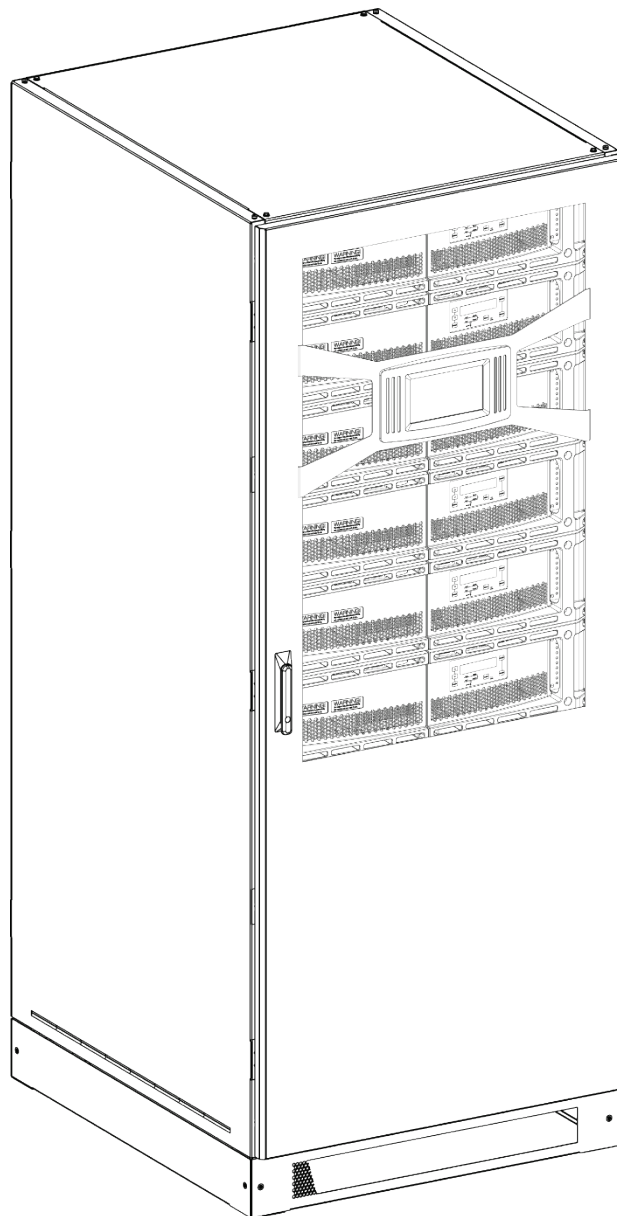

1 Important safety instructions

1.1 Save these instructions

This manual contains important instructions for models Conceptpower DPA 120 UL that should be followed during installation and maintenance of the UPS.

It also gives guidelines to check delivery and is intended for people who plan the installation, install, commission and use or service the UPS system and/or the battery cabinet. The reader is expected to know the fundamentals of electricity, wiring, electrical components and electrical schematic symbols

READ ALL SAFETY AND OPERATING INSTRUCTIONS BEFORE OPERATING THE UPS SYSTEM AND/OR THE BATTERY CABINET. ADHERE TO ALL WARNINGS ON THE UNIT AND IN THIS MANUAL.

The UPS system and the battery cabinet operates with mains, batteries or bypass power that carry high currents and voltages. The properly installed UPS system and battery cabinet is grounded to earth and IP 20 rated against electrical shock and foreign objects when all dead fronts are in place. Installation and service have to be done by the manufacturer's qualified technicians or their certified service partners

OPERATIONS INSIDE THE UPS AND/OR THE BATTERY CABINET MUST BE PERFORMED BY A SERVICE ENGINEER FROM THE MANUFACTURER OR FROM AN AGENT CERTIFIED BY THE MANUFACTURER.



NOTE!

INSTALLATION SHALL BE IN COMPLIANCE WITH ALL APPLICABLE NATIONAL, STATE, AND LOCAL CODES

1.2 Safety rules




WARNING!


- SERVICING THE UNIT SHOULD BE PERFORMED OR SUPERVISED BY PERSONNEL KNOWLEDGEABLE ABOUT BATTERIES AND REQUIRED PRECAUTIONS.
- RISK OF ELECTRIC SHOCK - THIS UNIT RECEIVES POWER FROM MORE THAN ONE SOURCE - DISCONNECTION OF AC SOURCE(S) (AND THE DC SOURCE) IS REQUIRED TO DE-ENERGIZE THIS UNIT BEFORE SERVICING
- THERE IS DANGER OF AN ELECTRICAL IMPACT.
- RISK OF EXPLOSION IF USING AN INCORRECT BATTERY TYPE.
- WHEN REPLACING BATTERIES, REPLACE WITH THE SAME TYPE AND NUMBER OF BATTERIES OR BATTERY TRAY.
- DO NOT DISPOSE OF BATTERIES IN A FIRE. THE BATTERY MAY EXPLODE
- DO NOT OPEN OR MUTILATE BATTERIES. RELEASED ELECTROLYTE IS HARMFUL TO THE SKIN AND EYES. IT MAY BE TOXIC.


Do not exceed UPS and/or battery cabinets rating labels.


As the battery life depends on the ambient temperature, for the UPS system it is recommended to have a location with climate-controlling system to maintain the conditions as follow:

Follow all operating and user instructions.

| | |
|---|--|
|  NOTE! | READ THE INFORMATION, IN ORDER TO AVOID EQUIPMENT DAMAGES |
|---|--|

| | |
|---|--|
|  WARNING! | <p>KEEP OUT OF BATTERY POLES WHICH CONTAIN DANGEROUS DC-VOLTAGES CAUSING FATAL ACCIDENTS. NOTE: MANIPULATION ON THE BATTERY SYSTEM SHOULD ONLY BE DONE BY TRAINED SERVICE AND MAINTENANCE PERSONEL OF THE MANUFACTURER OR HIS CERTIFIED SERVICE PARTNERS. INAPPROPRIATE MANIPULATIONS OF THE BATTERIES CAN CAUSE LIGHTNING SPARKS.</p> <p>A BATTERY CAN PRESENT A RISK OF ELECTRICAL SHOCK AND HIGH SHORT CIRCUIT CURRENT. THE FOLLOWING PRECAUTIONS SHOULD BE OBSERVED WHEN WORKING ON BATTERIES:</p> <ul style="list-style-type: none">a) REMOVE WATCHES, RINGS OR OTHER METAL OBJECTS.b) USE TOOLS WITH INSULATED HANDLES.c) WEAR RUBBER GLOVES AND BOOTS.d) DO NOT LAY TOOLS OR METAL PARTS ON TOP OF BATTERIES.e) DISCONNECT THE CHARGING SOURCE PRIOR TO CONNECTING OR DISCONNECTING BATTERY TERMINALS.f) DETERMINE IF BATTERY IS INADVERTENTLY GROUNDED. IF INADVERTENTLY GROUNDED, REMOVE SOURCE FROM GROUND. CONTACT WITH ANY PART OF A GROUNDED BATTERY CAN RESULT IN ELECTRICAL SHOCK. THE LIKELIHOOD OF SUCH SHOCK CAN BE REDUCED IF SUCH GROUNDS ARE REMOVED DURING INSTALLATION AND MAINTENANCE (APPLICABLE TO EQUIPMENT AND REMOTE BATTERY SUPPLIES NOT HAVING GROUNDED SUPPLY CIRCUIT). |
|---|--|

| | |
|---|--|
|  NOTE! | THE UNIT IS NOT PROVIDED WITH AN INTERNAL INPUT SWITCH. TO SHUTDOWN THE UNIT YOU MUST PROVIDE A BREAKER IN THE INSTALLATION BUILDING. |
|---|--|

| | |
|---|---|
|  NOTE! | THE EQUIPMENT IS PROVIDED WITHOUT INPUT AND OUTPUT BREAKERS, A READILY ACCESSIBLE DISCONNECT DEVICE SHALL BE INCORPORATED EXTERNAL TO THE EQUIPMENT. |
|---|---|



THE UNIT, THE BATTERY CABINET AND THE BATTERIES ARE HEAVY AND MAY TIP DURING TRANSPORTATION CAUSING SERIOUS INJURY IF UNPACKING INSTRUCTIONS ARE NOT CLOSELY FOLLOWED.

NOTE!



**SEALED BATTERIES MUST NEVER BE STORED IN A DISCHARGED OR PARTIALLY DISCHARGED STATE.
EXTREME TEMPERATURE, UNDER- AND OVERCHARGE AND OVERDISCHARGE WILL DESTROY BATTERIES.**

NOTE!

The only user operations permitted are:

- Use of the LCD control panel (DPA Display) and of the Maintenance Bypass
- Start up and shut down of the UPS of the user field (excluding the commissioning start up)
- Operation of additional connectivity modules:
 - SNMP adapters and their software
 - Modem/GSM or Modem/Ethernet adapters and their software

The user must follow the precautions and only perform the described operations. Also in these measures the operator of the UPS System must adhere to the instructions in this manual. Any deviations from the instructions could be dangerous to the user or cause accidental load loss.

THE MANUFACTURER DOES NOT TAKE ANY RESPONSIBILITY FOR DAMAGES CAUSED THROUGH WRONG MANIPULATIONS OF THE UPS SYSTEM.



IT IS PROHIBITED TO REMOVE ANY SCREWS FROM THE UPS SYSTEM OR FROM ANY OPTIONAL PART (E.G. BATTERY CABINET). THERE IS A DANGER OF ELECTRICAL SHOCK!

WARNING!



**HIGH FAULT CURRENTS (LEAKAGE CURRENTS):
BEFORE CONNECTING THE MAINS YOU MUST ENSURE THAT THERE IS A PROPER EARTH CONNECTION!**

WARNING!



THE USER MUST DISPLAY A WARNING SHIELD ON ALL PRIMARY UPS CIRCUIT BREAKERS. THE SERVICE PERSONNEL HAS TO BE INFORMED ABOUT DANGEROUS VOLTAGES. THE WARNING PANELS MUST CONTAIN THE FOLLOWING TEXT (OR SIMILAR): "BEFORE STARTING WITH THE MAINTENANCE WORK ON THE CIRCUIT BREAKERS MAKE SURE THE UPS IS ISOLATED".

WARNING!



ALL THE INPUT/OUTPUT PORTS ARE CLASS 2 (SELV CIRCUITS). PLEASE MAINTAIN SECURITY WHEN CONNECTING TO OTHER DEVICES.

WARNING!

1.3 Safety symbols and warnings


| | | |
|--|--|---|
| | | PROTECTIVE GROUNDING TERMINAL A terminal which must be connected to earth ground prior to making any other connection to the equipment. |
| | | A terminal to which or from which a direct current or voltage may be applied or supplied. |
| | | WARNING: REFER TO MANUAL Refer to the Operator's Manual for more information |
| | | DANGER: RISK OF ELECTRIC SHOCK There is a risk of electric shock present, and you should observe associated warnings. The UPS contains high voltages. |

CAREFULLY READ THE USER MANUAL AND THE INSTALLATION GUIDE BEFORE OPERATING OR WORKING ON THE UPS.


User manual

Conceptpower DPA 120 UL

208V 20 – 120kW

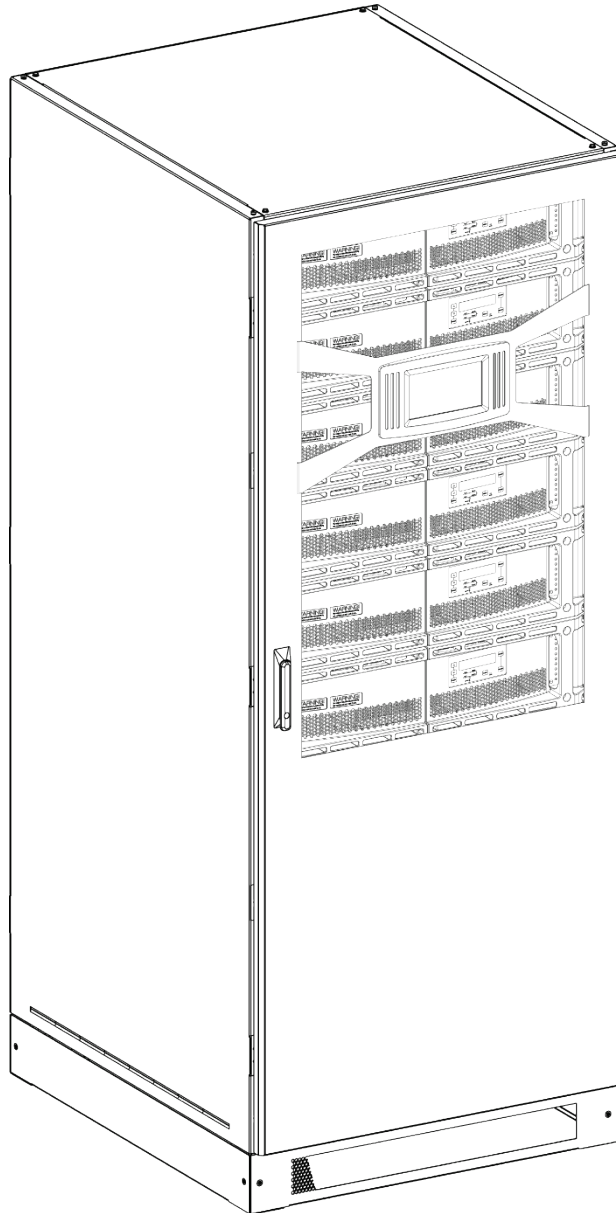

2 General information

| | |
|--|--|
|  WARNING! | <p>THIS IS A PRODUCT FOR COMMERCIAL AND INDUSTRIAL APPLICATION IN THE SECOND ENVIRONMENT AS DEFINED IN IEC/EN 62040-2 CHAPTER 4 – INSTALLATION RESTRICTIONS OR ADDITIONAL MEASURES MAY BE NEEDED TO PREVENT DISTURBANCES.</p> |
|--|--|

The UPS must be installed according to the recommendations in this manual. To operate the UPS at peak efficiency, your installation site should meet the environmental parameters outlined in this manual. Excessive amount of dust in the operating environment of UPS may cause damage or lead to malfunction. The UPS should be always protected from the outside weather and sunshine. If you intend to operate the system at an altitude higher than 1000 meters above sea level, contact your local sales or service office for important information about high altitude operation. The operating environment must meet the weight, airflow, size and clearance requirements specified in the technical datasheet.

Under no circumstances the UPS should be installed in an airtight room, in the presence of flammable gases, or in an environment exceeding the specification.

The basic environmental requirements of the UPS system are:

- Ambient Temperature Range: 0 to +40°C (32 – 104°F)
- Recommended Operating Range: +20 to +25°C (68 – 77°F)
- Maximum Relative Humidity: 95% (non-condensing)

The UPS cabinet uses forced air cooling to regulate internal component temperature. Air inlets are in the bottom sides and front of the cabinet, and outlets in the rear of the cabinet. You must allow clearance in back of the cabinet for proper air circulation. Refer to the chapter 8.3: UPS and battery location.

2.1 Declaration of safety conformity and CE marking

The product has the CE marking in compliance with the following European directives:

- Low Voltage Directive: 2006/95/EC
- EMC Directive: 2004/108/EC

Declaration of conformity with UPS harmonized standards and directives EN 62040-1-1 (Safety) and EN 62040-2 (EMC) are available in the annex 1



| | Product Standards | Standards |
|---|--|--|
| Safety Standard: | IEC/EN 62040-1 | IEC/EN 60950-1 UL 60950-1 UL 1778-5, 5 th edition |
| Electromagnetic Compatibility Standard (EMC): | IEC/EN 62040-2 Emission cat. C3 Immunity cat. C3 | IEC/EN 61000-6-2 IEC/EN 61000-6-4 IEC/EN 61000-4-2 IEC/EN 61000-4-3 IEC/EN 61000-4-4 IEC/EN 61000-4-5 IEC/EN 61000-4-6 |
| Performance Standard: | IEC/EN 62040-3 | |

The Conceptpower DPA will provide your critical equipment with a steady and reliable power supply for many years.

The unique and modular UPS Conceptpower DPA belongs to the newest generation of midrange 3-phase UPS-Systems. High reliability, low operating cost and excellent electrical performance are only some of the highlights of this innovative UPS solution.

The criteria and methods implemented at ABB for the design and manufacture correspond to the most stringent quality standards.

The manufacturer is certified successfully in every areas according to the model of the International Standard:

ISO 9001/EN 29001. The Certification of UPS with the operating performance according to the standard IEC 62040-3 and VDE 0558 Part 530 is accomplished.

With it the ABB UPS has the **Classification Code VFI-SS-111**.

2.2 Nameplate and identification

The technical specifications of the Equipment are provided on the nameplate, which is situated at the front of the UPS. Check if it corresponds to the purchased material mentioned in the delivery note.


| ABB Conceptpower DPA 120 UL | |  | |
|------------------------------------|--------------|---|--------------|
| Output Apparent Power: | kVA | Puissance Apparente Sortie: | kVA |
| Output Active Power: | kW | Puissance Active Sortie: | kW |
| System Frequency: | Hz | Système Fréquence: | Hz |
| System Input/Output: | | Système Entrée/Sortie: | |
| Input/Output Voltage: | V | Tension Entrée/Sortie: | V |
| Input Current: | A | Courant Entrée: | A |
| Output Current: | A | Courant Sortie: | A |
| Battery Voltage: | --- V | Tension Batterie: | --- V |
| Battery Current: | --- A | Courant Batterie: | --- A |
| Icw (Manual Bypass): | kA | Icw (Bypass Manuel): | kA |

Fig. 2.2-1: Nameplate of the Conceptpower DPA 120 UL


| TYPE | PRODUCT DESCRIPTION | DIMENSIONS (width x height x depth) |
|-------------|----------------------------|--|
| CPLXXXX | Conceptpower DPA 120 UL | 791x1975x923 in mm |

3 System description

The Conceptpower DPA 120 UL is a 3 phases transformerless Uninterruptible Power System (UPS). It is a true modular on-line double conversion UPS providing quality power for sensitive equipment. It is a modular UPS system consisting of:

- DPA UPS modules, rated power 20 kW
- Maintenance bypass switch (optional)
- Incoming, outcoming and battery terminals
- System graphical display (only on the master frame)
- Parallel interface and customer interfaces
- Various options (see chapter 5 for details)

The Conceptpower DPA

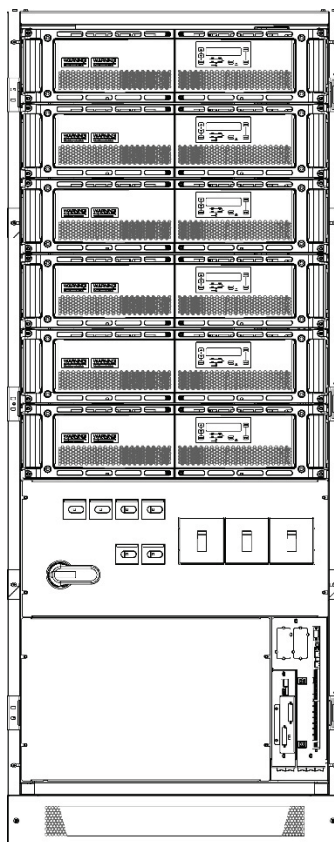

| | |
|--------------------------------------|---|
| Model | Conceptpower DPA 120 UL |
| Rated power | 120 kW / 120 kVA |
| Max number of DPA UPS modules | 6 |
| Weight | empty frame 672 Lbs.(305 kg) frame + 6 modules 1466 Lbs.(665 kg) |
| Dimensions (WxHxD) | 791 x 1975 x 923 (mm) |

The two frames are identical, only the product nameplate changes.

3.1 System architecture

The Conceptpower DPA 120 UL UPS system has a decentralized parallel architecture (DPA). Each DPA module has its own:

- Power converters (rectifier and inverter)
- DC booster
- Static bypass
- Battery charger & connection (for separate battery connection))
- Control logic
- LCD control panel

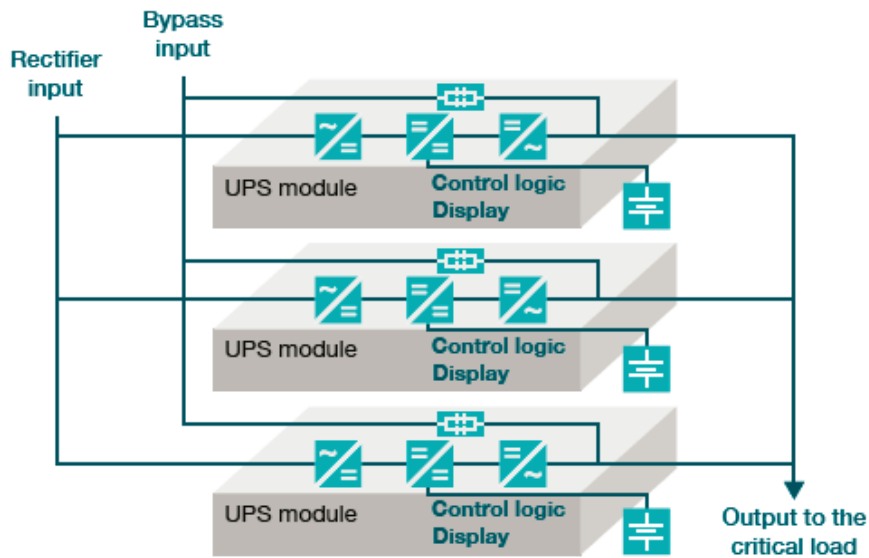


Fig. 3.1-1: System architecture

Therefore the UPS system doesn't have common components offering high availability and no single point of failure.

3.2 Basic Module

There the basis data of the DPA modules are as follows:

| | |
|---------------------------|------------------|
| Module type | 20 kW |
| Rated output power | 20 kW |
| Weight | 132 Lbs.(60 kg) |
| Dimensions (WxHxD) | 710x178x750 (mm) |

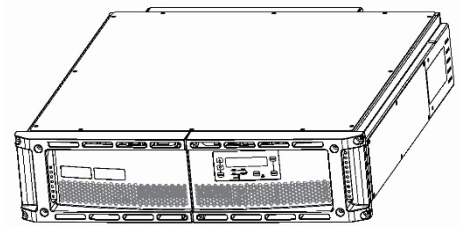


Fig. 3.2.1-1: Front view of the module

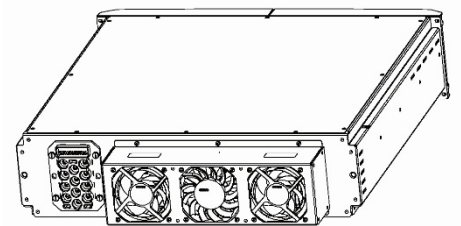


Fig. 3.2.1-2: Rear view of the module

The DPA Modules are "online-swappable" causing any no disturbance to the operation of the load by inserting or extracting the power from a system while it is powered (hot).

3.3 Main elements description

3.3.1 Single line diagram

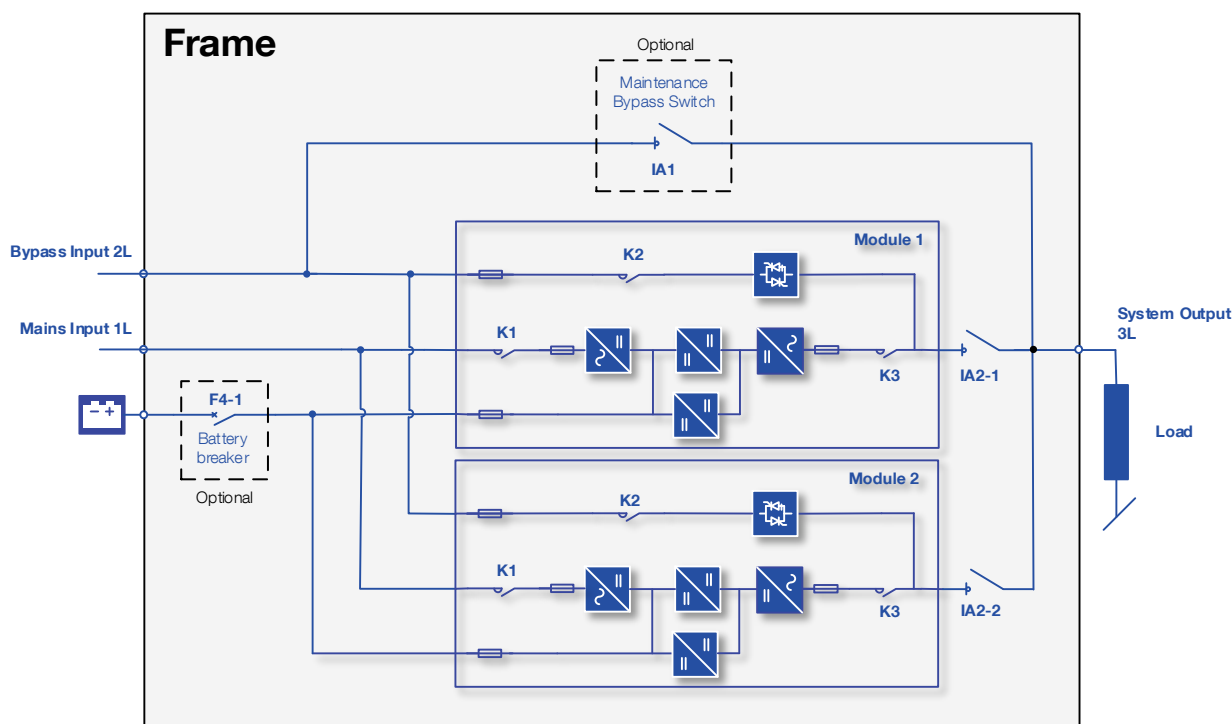


Fig. 3.3.1-1: Single line diagram

3.3.2 Functional description

| Section | Component | Functional Description |
|--------------------------------|-----------------------------------|--|
| Main input terminals | | |
| 1-L1 | Rectifier input terminal, phase 1 | Provides a connection between the utility supply and the rectifier input |
| 1-L2 | Rectifier input terminal, phase 2 | |
| 1-L3 | Rectifier input terminal, phase 3 | |
| 1-N | Neutral terminal | |
| GND (PE) | Ground (earth) terminal | |
| Bypass input terminals | | |
| 2-L1 | Bypass input terminal, phase 1 | Provides a connection between the bypass supply and UPS bypass input |
| 2-L2 | Bypass input terminal, phase 2 | |
| 2-L3 | Bypass input terminal, phase 3 | |
| 2-N | Neutral terminal | |
| System output terminals | | |
| 3-L1 | System output terminal, phase 1 | Provide a connection between the UPS system and the load |
| 3-L2 | System output terminal, phase 2 | |
| 3-L3 | System output terminal, phase 3 | |
| 3-N | Neutral terminal | |
| GND (PE) | Ground (earth) terminal | |

Battery terminals

| | | |
|--------|---|--|
| + BATT | Positive pole (+) of the battery terminal | Provides a connection between the external battery and the UPS system. |
| - BATT | Negative pole (-) of the battery terminal | |

Battery circuit breaker

| | | |
|------|---|--|
| F3-1 | Battery circuit breaker modules 1 and 2 | Battery overcurrent-protective device (MCB). Each couple of modules has a battery breaker |
| F3-2 | Battery circuit breaker modules 3 and 4 | |
| F3-3 | Battery circuit breaker modules 5 and 6 | |

Maintenance bypass switch

| | | |
|-----|---------------------------|---|
| IA1 | Maintenance bypass switch | The manual bypass switch connects the load direct to the bypass input supply when it is closed (ON). The UPS is isolated for services or maintenance work |
|-----|---------------------------|---|

Power Modules

| | | |
|------|--------------|---|
| A001 | UPS module 1 | The UPS module has a rated power of 20 kW. It has a decentralized parallel architecture (DPA) as described in chapter 3.1 |
| A002 | UPS module 2 | |
| A003 | UPS module 3 | |
| A004 | UPS module 4 | |
| A005 | UPS module 5 | |
| A006 | UPS module 6 | |

Parallel isolator

| | | |
|-------|----------------------------|--|
| IA2-1 | Parallel isolator module 1 | Allows to isolate the corresponding module (UPS) from the parallel system and hence from the load. Especially useful when swapping modules or inserting new modules into the system because with the switch open it is possible to power the modules, configure it and perform functional tests before connecting it to the rest of the system and to the load. The module parallel isolator is a mechanical 3-pole switch of the same rating as the module. |
| IA2-2 | Parallel isolator module 2 | |
| IA2-3 | Parallel isolator module 3 | |
| IA2-4 | Parallel isolator module 4 | |
| IA2-5 | Parallel isolator module 5 | |
| IA2-6 | Parallel isolator module 6 | |

Backfeed protection

| | | |
|----|---------------------------|--|
| K1 | Mains backfeed contactor | Prevents the occurrence of any hazard voltage at the rectifier mains terminal in the case the AC failure due to the backfeed from the rectifier modules sourced by the battery |
| K2 | Bypass backfeed contactor | Prevents the occurrence of any hazard voltage at the bypass input terminal in the case the AC failure due to the backfeed from the inverter modules sourced by the battery |

3.3.3 Control & monitoring

Customers and parallel interfaces. For more detail see the Technical datasheet (Attachment).

| Section | Component | Functional Description |
|---------------------------|-------------------------------------|--|
| Customer interface | | |
| X1 | Interlock function | This function allows a secure transfer from inverter (normal operation) to external maintenance bypass and vice-versa. |
| X2 | Customer output dry ports | Up to 5 output dry contacts used for signalization of the status of the UPS system (e.g. Mains failure, load on inverter, battery low, etc) |
| X3 | Customer input dry ports | Up to 5 input dry contacts used for remote Shut Down and Generator Operation facilities, battery temperature sensor or customer function. |
| JD1 | RS232 Smart Port Computer Interface | RS-232 serial port to monitor the UPS system by using the Wavemon software |
| JR2 | Multidrop | Connections for connectivity signals between cabinets |
| JR3 | Remote panel / Graphical display | Connection for graphical display or remote panel. |
| USB | Computer Interface | USB port to monitor the UPS by using the Wavemon software |
| SLOT1 | SNMP | Optional slot for SNMP card |
| SLOT2 | Modem | Optional slot for Modem/Ethernet card |
| SW2 | Multi cabinet configuration switch | Determine if the cabinet is “master” or “slave” in a Multi-Cabinet configuration. (information needed for multi-drop) |
| Parallel interface | | |
| JD8 | Parallel Interface | The parallel interface is used to connect frames in parallel (see 10.6 Multi cabinet configuration). |
| SW1-6 | Multi cabinet configuration switch | Determine the “position of the cabinet” in a Multi-Cabinet Chain. |

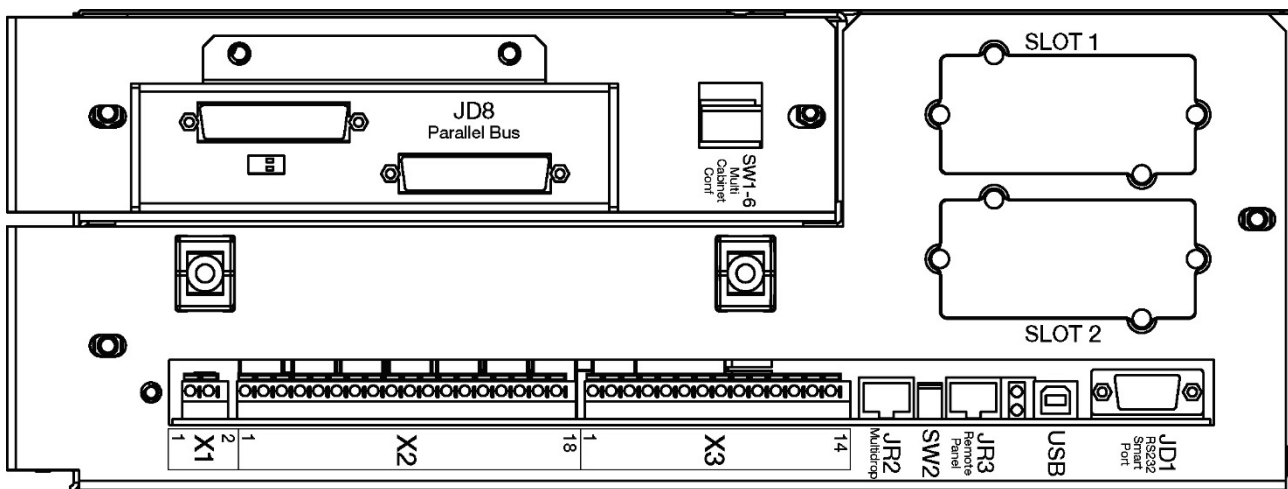


Fig. 3.3.3-1: Customer and Parallel interfaces

3.4 Multi cabinet configuration

The Conceptpower DPA may be paralleled to increase the power capacity up to 600 kW. A maximum of 6 cabinets (30 modules) can be paralleled.

Multiple cabinet system, with N cabinets requires:

- N UPS cabinets with at least 1 module in each cabinet. Only the Master (first) cabinet will have the System graphical display.
- N parallel interfaces (included as basic configuration on each frame)
- N parallel adapters (this is an option and must be ordered separately)

| | |
|---------|------------------|
| 00-2907 | Parallel adapter |
|---------|------------------|

- N-1 parallel cable kits. The kit includes parallel and Multidrop cables (this is an option and must be ordered separately)

| | |
|---------|------------------------|
| 04-3630 | Parallel Cable Kit 5m |
| 04-3631 | Parallel Cable Kit 10m |
| 04-3632 | Parallel Cable Kit 15m |
| 04-3633 | Parallel Cable Kit 20m |
| 04-3634 | Parallel Cable Kit 25m |

| | FRAME 1 | FRAME 2 | ... | FRAME N-1 | FRAME N |
|---------------------------------|---------|---------|-----|-----------|---------|
| System graphical display | ● | - | | - | - |
| Parallel interface | ● | ● | | ● | ● |
| Parallel adapter | ● | ● | | ● | ● |
| Parallel Cable Kit | ● | ● | | ● | - |

The start-up of a multiple cabinet systems is an operation which can be performed by a service engineer from the manufacturer or by a service engineer from an agent certified by the manufacturer. Please refer to the service manual to perform this operation.

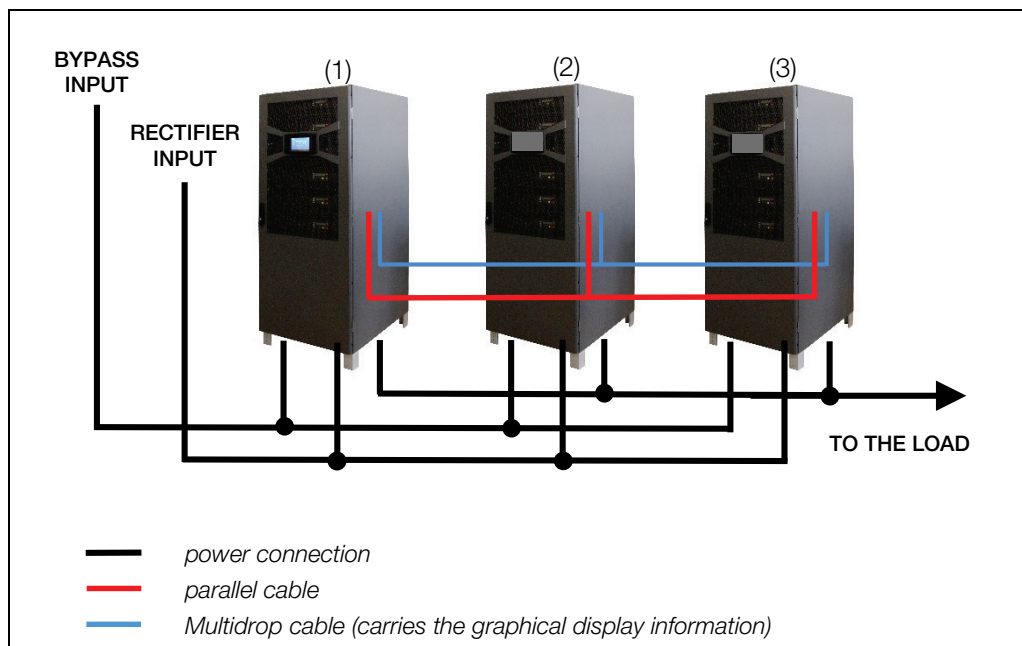


Fig. 3.4-1: Multi cabinet configuration example

3.5 Operating modes

3.5.1 Mode "ON-LINE"

In On-Line Mode, the load is connected to the Inverter (INV) and the rectifier (Line1) is supplied by the main utility supply. The On-Line mode protect the load from any utility main disturbance or failure.

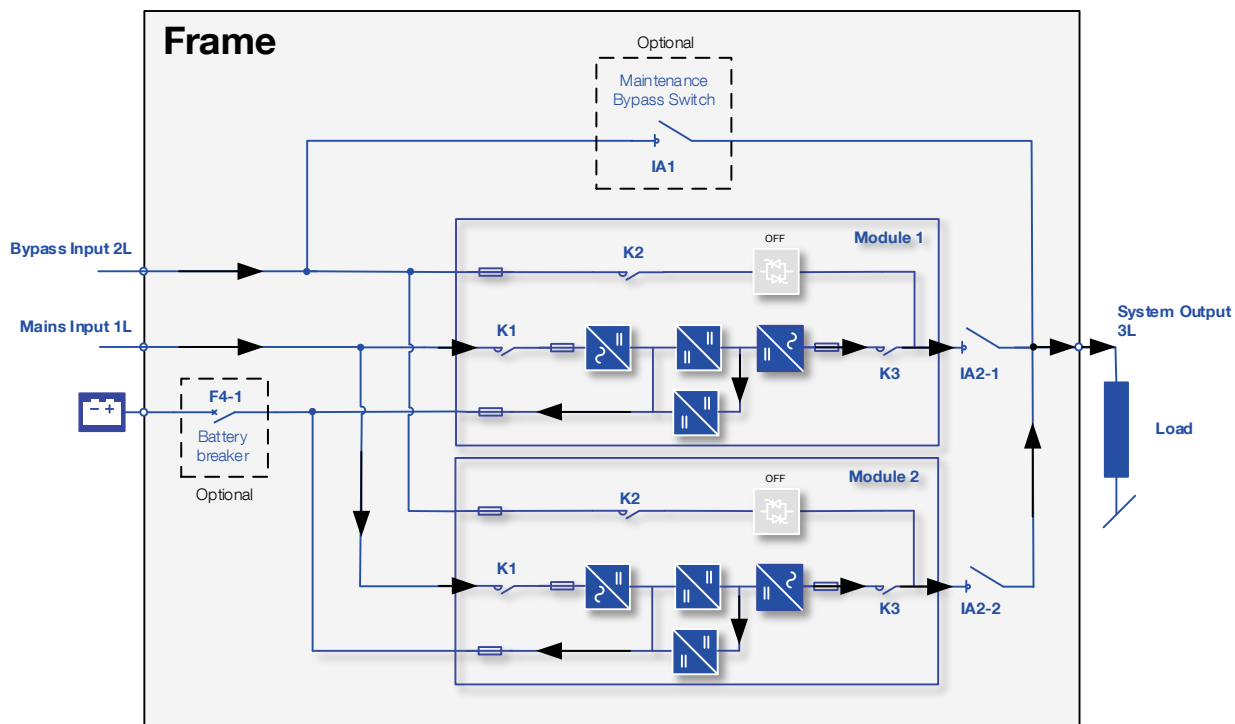


Fig. 3.5.1-1: "ON LINE" operating mode

The On-Line mode status is shown in the mimic of control panel per module as follow:

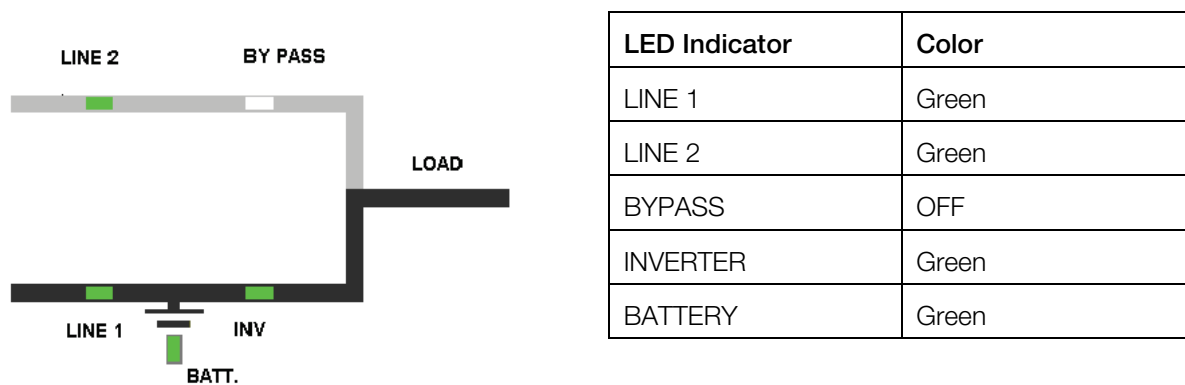


Fig. 3.5.1-2: "ON LINE" control panel mimic

In the unlikely event of an inverter fault or overload condition the UPS will transfer the load automatically and without interruption to the static bypass (transfer time = 0).

3.5.2 Mode "OFF-LINE" (Eco or bypass mode)

In "OFF-Line Mode", the load is supplied from the bypass mains (LINE 2) through the static bypass (BY PASS). The Inverter is OFF.

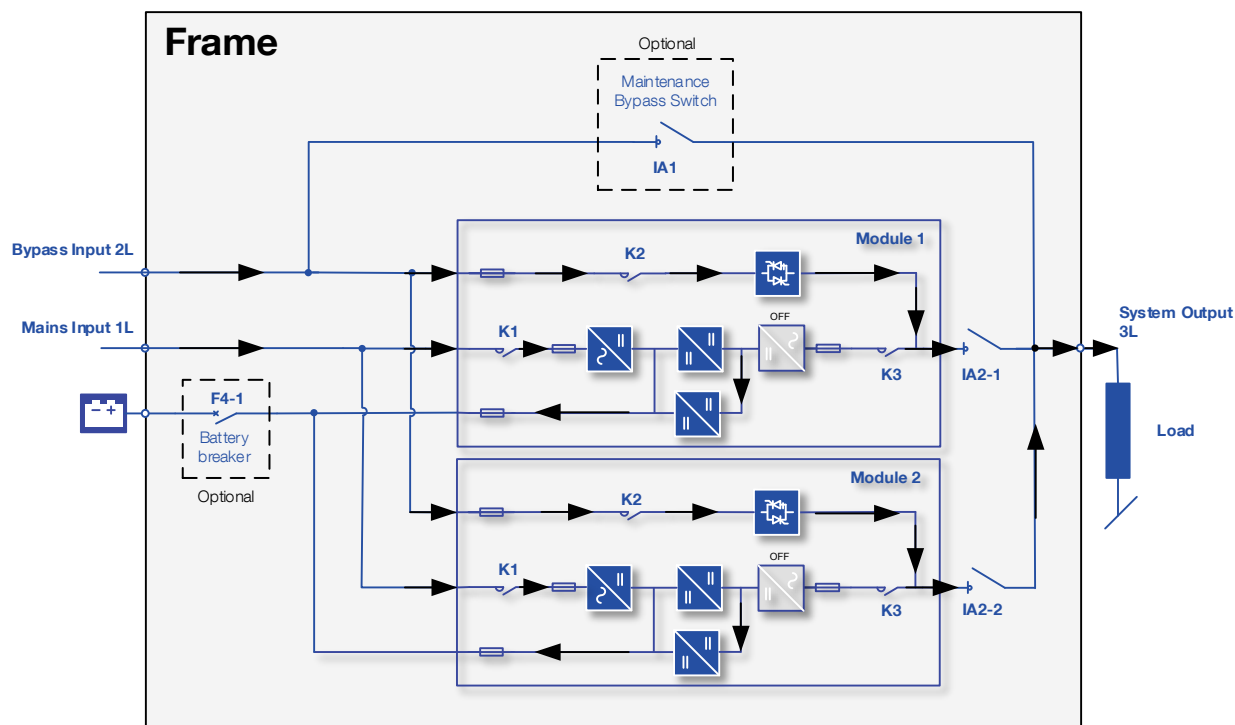


Fig. 3.5.2-1: "OFF LINE" operating mode

The OFF-Line mode status is shown in the mimic of the control panel per module as follow:

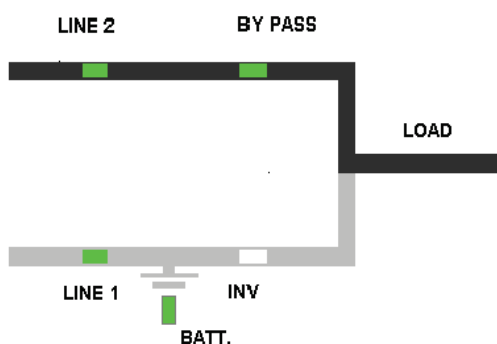



Fig. 3.5.2-2: "OFF LINE" control panel mimic

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | Green |
| INVERTER | OFF |
| BATTERY | Green |

In OFF Line Mode the battery charger remains active. In the event of a bypass mains (LINE 2) failure, the load will automatically be transferred from mains to inverter within 5 ms (this is valid for single and parallel systems). If the Utility Mains supply (LINE 1) is not available, the energy is supplied by the battery.

The "Bypass-Mode", is recommended only if the loads can tolerate interruptions of 3-5 ms (transfer time from Bypass Mode to ON-LINE Mode)



TO HAVE TO MOST ESSENTIAL SECURITY LEVEL, WE RECOMMEND TO RUN THE UPS ON NORMAL OPERATION MODE, MEANS UPS MODE (MODE "ON-LINE")

NOTE!

3.5.3 Mode “ON-BATTERY” (Battery mode)

In ON-Battery Mode, the load is connected to the inverter (INV) and the inverter is supplied by the battery. The utility main supply is not available (LINE 1)

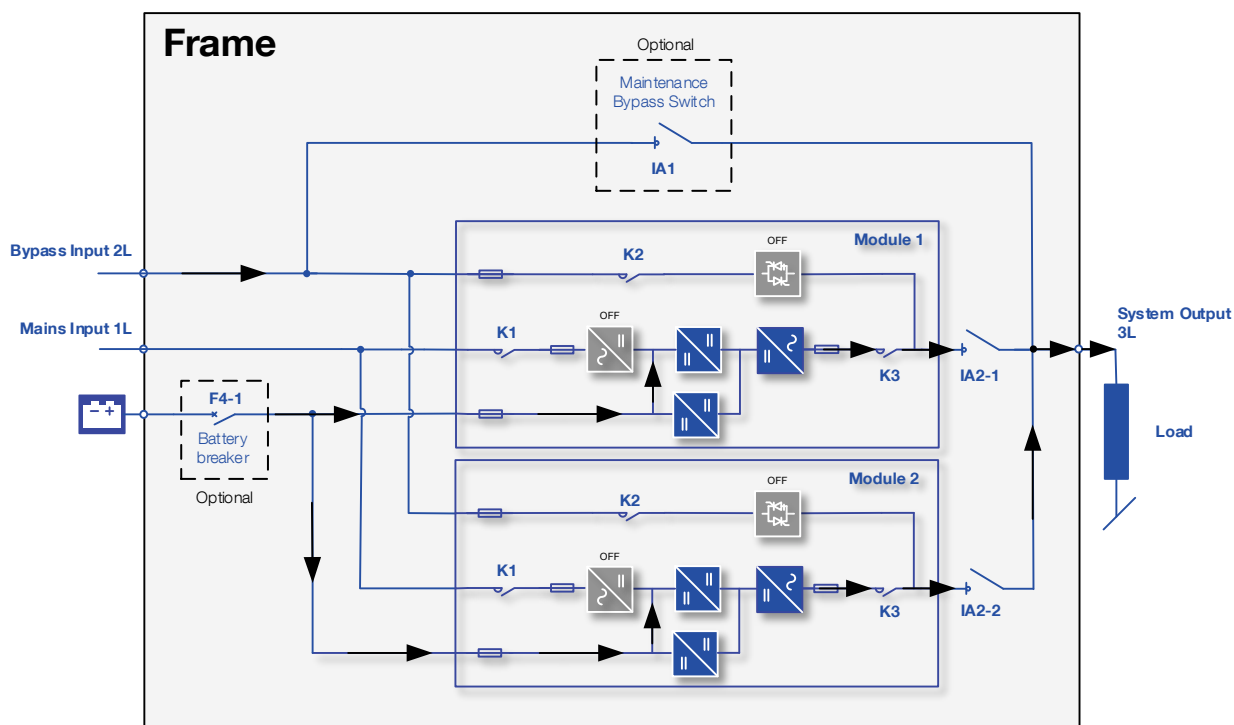


Fig. 3.5.3-1: “ON BATTERY” operating mode

The ON-Battery Mode status is shown in the mimic of the control panel per module as follow:

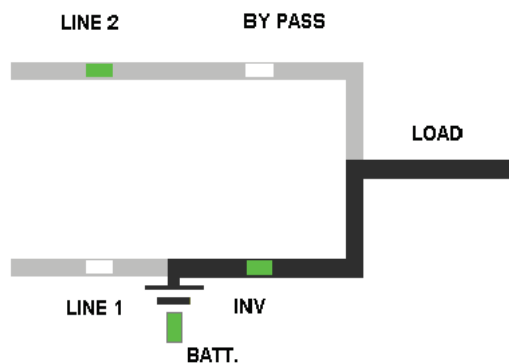


Fig. 3.5.3-2: “ON BATTERY” control panel mimic

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | OFF |
| LINE 2 | Green |
| BYPASS | OFF |
| INVERTER | Green |
| BATTERY | Green |

3.5.4 Maintenance bypass

The Maintenance Bypass Mode is performed by means of the IA1 BYPASS SWITCH on the front of the UPS:

| POSITION OF SWITCH | EFFECT |
|--------------------|---|
| ON | Bypass-Switch Closed (Load supplied directly from bypass mains) |
| OFF | Bypass-Switch Open – Normal operating condition (Load supplied by inverter) |

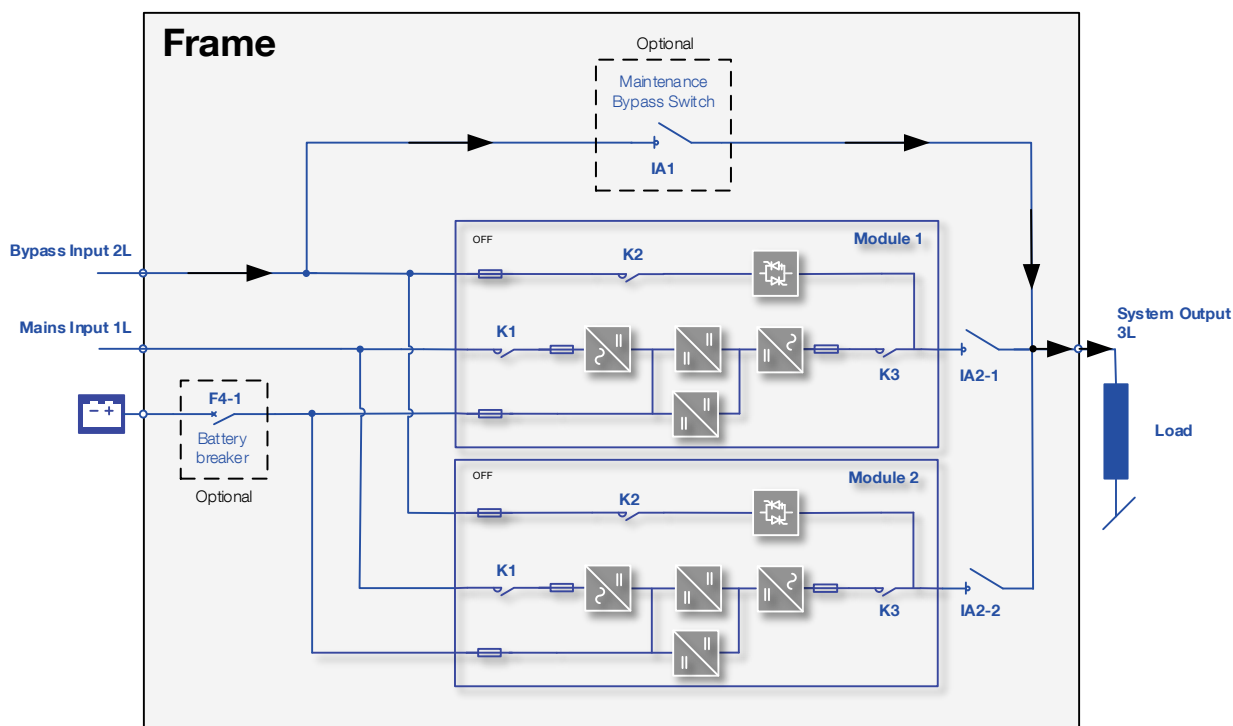



Fig. 3.5.4-1: "Maintenance bypass" operating mode



ON OPERATION MODE „MANUAL BYPASS“ THE LOAD IS NOT PROTECTED AGAINST ANY MAINS FAILURES OR MAINS DISTURBANCES.

NOTE!

4 Control & monitoring

4.1 Control panel module



WARNING!

ONLY PERSONS WHICH HAVE BEEN TRAINED BY SERVICE TECHNICIANS OF THE MANUFACTURER OR HIS CERTIFIED SERVICE PARTNERS ARE ALLOWED TO OPERATE ON THE CONTROL PANEL WITH CLOSED DOORS. ALL OTHER INTERVENTIONS ON THE UPS SYSTEM HAVE TO BE DONE ONLY BY SERVICE TECHNICIANS OF THE MANUFACTURE

The user-friendly control panel is composed of three parts:

- Power management LCD display (PMD);
- Led indicators;
- Keys.

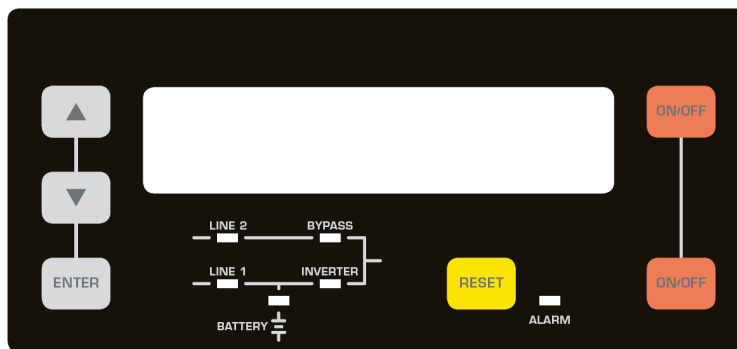


Fig. 4.1-1: Control Panel

The 2 x 20 character LCD simplifies the communication with the UPS and provides the necessary monitoring information about the UPS. The menu driven LCD enables the access to the:

- Event register;
- Monitor the input and output U, I, F, P,
- Battery runtime;
- To perform commands like start-up and shut-down of ups and
- Load transfer from inverter to bypass and vice-versa;
- Diagnosis (service mode);
- Adjustments and testing.

4.1.1 Status & alarm indication

The mimic diagram serves to indicate the general status of the UPS. The LED-indicators show the power flow status and in the event of mains failure or load transfer from inverter to bypass and vice-versa. The corresponding LED-indicators will change colors from green (normal) to red (warning).

The LED's LINE 1 (rectifier) and LINE 2 (bypass) indicate the availability of the mains power supply.

The LED's INVERTER and BYPASS if green indicate which of the two is supplying power to the critical load. When the battery is supplying the load due to mains failure the LED-indicator BATTERY is flashing.

The LED-indicator ALARM is a visual indication of any internal or external alarm condition. At the same time an audible alarm will be activated.

| INDICATOR | INDICATOR STATUS | MEANING |
|-----------|------------------|---|
| ALARM | OFF | No alarm condition |
| | RED | Alarm condition |
| LINE 1 | GREEN | Mains rectifier available |
| | RED | Mains rectifier not available |
| LINE 2 | GREEN | Mains bypass available |
| | RED | Mains bypass not OK or not available |
| | OFF | UPS is turned off |
| BYPASS | GREEN | Load on bypass (Bypass-or Eco-Mode) |
| | OFF | Bypass not operating (switched-off) |
| INV | GREEN | Load on inverter |
| | RED | Inverter fault or load not transferable to inverter |
| | OFF | Inverter not operating (switched-off) |
| BATTERY | GREEN | Battery OK |
| | RED | Battery fault or battery is discharged |
| | Flashing GREEN | Battery in discharge or battery fuse open |

4.1.2 Buttons

The keys allow the user to operate the UPS to perform settings and adjustments, to start-up and shutdown the UPS, to monitor on the LCD display the voltages, currents, frequencies and other values.

| KEYS | FUNCTION |
|------------------|--|
| ON/OFF ON/OFF | Serve to switch-on (press both keys simultaneously), or shutdown the UPS (press both keys simultaneously) |
| UP (↑) | Move upwards through the menu |
| DOWN (↓) | Move downwards through the menu. |
| RESET | Cancel the audible alarm. If the alarm condition was only transient the LED-indicator ALARM would also extinguish otherwise it will remain on (red). |
| ENTER | Confirms a chosen menu item. |



NOTE

IN THE CASE THAT THE PARALLEL UPS SYSTEM HAS TO BE TURNED OFF, THEN BOTH ON/OFF BUTTONS ON ALL UPS MODULES HAVE TO BE PUSHED. IN THIS CASE THE POWER SUPPLY TO THE LOAD WILL BE INTERRUPTED

4.2 LCD description

4.2.1 Status

DESCRIPTION

LCD-DISPLAY

| | | | |
|---|---|----------------------------|----|
| 1 | Load is protected by UPS power. Load is supplied by inverter (Normal Operation) and the batteries are connected and o.k. | LOAD PROTECTED | S |
| 2 | Load is not protected by UPS power. Load is supplied by mains power (load on bypass) or it is supplied by the inverter (Normal operation) and the batteries are not o.k. | LOAD NOT PROTECTED | P1 |
| 3 | Load not supplied. UPS is switched off To start the UPS press the two ON/OFF push buttons simultaneously | LOAD OFF SUPPLY FAILURE | P4 |
| 4 | The UPS is not supplying load anymore. | LOAD DISCONNECTED | P6 |

NOTE:

- On the right hand side of the LCD there is the indication of single /parallel UPS.
- If the UPS is configured as single the indication will be "S"
- If the UPS is configured as parallel the indication will be "P" followed by the UPS number
- The max no. of module units are 6 per system.

EXAMPLES:

- S** stands for Single UPS. The system consists of ONLY one UPS
- P1** stands for Parallel UPS in a Multi-UPS system and 01 stands for the first Module (MASTER) in the Multi-UPS system.
- P4** stands for Parallel UPS in a Multi-UPS system and 04 stands for the forth Module (SLAVE) in the Multi- UPS system.
- P6** stands for Parallel UPS in a Multi-UPS system and 06 stands for the sixed Module (SLAVE) in the Multi- UPS system.

The configuration of the single / parallel UPS is achieved in the Menu "SET UP SERVICE". See Service Manual section E

4.2.2 Main menu

DESCRIPTION

- 1 Logging Control. A log of the last 64 events is stored in the Power Management Display.
- 2 In Menu Measurements: monitor voltages, power, frequencies, currents, autonomy etc.
- 3 The Command Menu enables to perform the commands "Load to inverter", Load to bypass, battery test.
- 4 The UPS Data are the UPS personalized information "serial number"
- 5 Various settings can be performed by the user: Date/Time, automatic battery test, etc.
- 6 Various adjustments can be performed by the service staff

LCD-DISPLAY

| |
|----------------------------------|
| → EVENT LOG MEASUREMENTS |
| → MEASUREMENTS COMMANDS |
| → COMMANDS UPS DATA |
| → UPS DATA SET-UP USER |
| → SET-UP USER SET-UP SERVICE |
| → SET-UP SERVICE NO MORE MENU |

4.2.3 Commands

DESCRIPTION

- 1 Transfer Load to inverter
- 2 Transfer Load to bypass.
- 3 Battery Test

LCD-DISPLAY

| |
|---|
| → LOAD TO INVERTER LOAD TO BYPASS |
| → LOAD TO BYPASS PERFORM BATT.TEST |
| → PERFORM BATT.TEST NO MORE COMMANDS |

4.3 Metering

4.3.1 Measurements

DESCRIPTION

- 1 Battery Runtime
- 2 UPS-Output Frequency
- 3 Bypass Frequency.
- 4 Battery Voltage
- 5 Battery Charger Current

LCD-DISPLAY

| |
|---|
| BATT. RUN TIME (MIN) 00h 00m |
| OUTPUT FREQUENCY (HZ) 50.00 |
| BYPASS FREQUENCY (HZ) 50.00 |
| BATTERY VOLTAGE (V) + 0.0 - 0.0 |
| BATT. CHARGE CUR. (A) + 0.0 - 0.0 |

- 6 Discharge Current
(when working on battery mode)
- 7 Rectifier Voltage
(Phases L1 ,L2, L3)
- 8 Bypass Voltage
(Phases L1 ,L2, L3)
- 9 Output Voltage
(Phases L1 ,L2, L3)
- 10 Output Current
(Phases L1 ,L2, L3)
- 11 Active Output Power
(Phases L1 ,L2, L3)
- 12 Reactive Output Power
(Phases L1 ,L2, L3)
- 13 Apparent Output Power
(Phases L1 ,L2, L3)
- 14 Output Power
(Phases L1 ,L2, L3)
- 15 Battery capacity
- 16 Battery temperature
(only when the option battery probe is connected.)
- 17 Module temperature
Booster (°C), Inverter (°C), fans speed duty cycle
- 18 End of measurements

| | | |
|---------------------------------------|-------|-------|
| DISCHARGE CURRENT (A) 00.00 | | |
| RECTIFIER VOLTAGE (V) 230 | 230 | 230 |
| BYPASS VOLTAGE (V) 230 | 230 | 230 |
| OUTPUT VOLTAGE (V) 230 | 230 | 230 |
| OUTPUT CURRENT (A) 00.00 | 00.00 | 00.00 |
| ACTIVE POWER (KW) 00.00 | 00.00 | 00.00 |
| REACTIVE POWER (kVAr) 00.00 | 00.00 | 00.00 |
| APPARENT POWER (KVA) 00.00 | 00.00 | 00.00 |
| OUTPUT POWER (%) 00.00 | 00.00 | 00.00 |
| BATT. CAPACITY (%) 00.00 | | |
| BATT. CAPACITY (%) 00.00 | | |
| MODULE TEMP. BST/INV 24.5 | 28.3 | 13.8 |
| NO MORE MEASUREMENTS | | |

4.3.2 Event log

DESCRIPTION

- 1 Logging Control; a log of the last 64 events is stored in the Power Management Display.
- 2 Every stored event is identified with a sequential number and time stamp.
- 3 All events and alarms are indicated with their date and time of appearance.

LCD-DISPLAY

| | | |
|--------------|----------|----------|
| 01 | 05-10-00 | 14-38-59 |
| LOAD TO INV. | | |
| 02 | 05-10-00 | 14-38-56 |
| LOAD TO BYP. | | |
| 03 | 05-10-00 | 14-37-14 |
| LOAD OFF | | |

4.3.3 UPS Data

DESCRIPTION

- 1 These general UPS Data are installed at the manufacturing plant

LCD-DISPLAY

| |
|--------------------------------------|
| UPS SERIAL NUMBER NW-nnnnn |
|--------------------------------------|

| | | |
|---|----------------------|--|
| 2 | Manufacturing date | DATE OF MANUFACTURE 15-01-2003 |
| 3 | EPROM Version | EPROM VERSION V-000 |
| 4 | Actual Date and Time | DATE TIME dd-mm-yyyy hh:mm:ss |

4.3.4 Set-up user

| DESCRIPTION | LCD-DISPLAY |
|---------------------------------|--|
| 1 Set-up Language | → SET LANGUAGE SET DATE AND TIME ENGLISH FRANCAIS ... |
| 2 Set-up Date and Time | → SET-UP DATE/TIME SET-UP BATT. TEST DD-MM-YY HH-MM-SS |
| 3 Set-up battery test | → SET BATTERY TEST SET GENERATOR OP. DAY OF MONTH (1-31) HOUR OF DAY (1-24) REPETITIVE (Y/N) YES/NO |
| 4 Set-up operation with Gen-Set | → SET GENERATOR OP. NO MORE SETTINGS BATT.CHARGE LOCK YES/NO BYPASS LOCK YES/NO |

4.3.5 Set-up service

| DESCRIPTION | LCD-DISPLAY |
|------------------------|---------------------------------|
| 1 Battery Runtime | BATT. RUN TIME (MIN) 00h 00m |
| 2 UPS-Output Frequency | OUTPUT FREQUENCY (HZ) 50.00 |

Password is necessary to enter: Service Manual

5 Options

| ARTICLE | DESCRIPTION | DETAIL |
|---|--|--|
| PRODUCT OPTIONS OR FEATURES – MODULE | | |
| 4NWP101921R0001 | Cold start DPA Module UL | Available for 20kW and 40kW modules |
| 4NWP102254R0001 | Sync Feature CP DPA 120-240 mod. - SP102 | Available for 20kW and 40kW modules |
| PRODUCT OPTIONS OR FEATURES – ELECTRONICS & SOFTWARE | | |
| 00-2907 | Parallel adapter | For 1 UPS frame. |
| 04-3630 | Parallel Cable Kit 5m | Includes multidrop cable. |
| 04-3631 | Parallel Cable Kit 10m | Includes multidrop cable. |
| 04-3632 | Parallel Cable Kit 15m | Includes multidrop cable. |
| 04-3633 | Parallel Cable Kit 20m | Includes multidrop cable. |
| 04-3634 | Parallel Cable Kit 25m | Includes multidrop cable. |
| 4NWP101937R0001 | Maintenance Bypass Switch | 3-phase switch, rated 400A 600VAC. Factory mounted only. |
| 4NWP101929R0001 | Battery Breaker for CP DPA 120UL | Factory mounted only. |
| 4NWP101946R0001 | Transient Voltage Surge Suppressor 120V | Factory mounted only. |
| PRODUCT OPTIONS OR FEATURES – EXTERNAL BATTERIES | | |
| 00-3563 | Temperature probe for batteries | Cable length 1.3m. |
| PACKAGING | | |
| 4NWP100585R0001 | Carton box for 1 module of 710x178x750mm | Only needed if modules are shipped outside the racks. Stackable up to 2. |
| 4NWP101978R0001 | Sea freight case CP DPA 120-240 UL | |
| DOCUMENTATION | | |
| 00-2976 | Certificate of origin | Legalized invoice is also available. |
| 04-0160 | Duplicate of the commissioning report | |
| 04-0161 | Duplicate of archived commissioning rep. | |
| OTHER | | |
| 4NWP102309R0001 | 1y. extra warranty for 1 20-40kW module | Available for 20kW and 40kW modules |

6 Maintenance & troubleshooting



THE OPERATIONS DESCRIBED IN THIS CHAPTER MUST BE PERFORMED BY A SERVICE ENGINEER FROM THE MANUFACTURER OR FROM AN AGENT CERTIFIED BY THE MANUFACTURER.

WARNING!

6.1 General maintenance

6.1.1 User responsibilities

There are no parts within the UPS which need to be serviced by the user, so the maintenance responsibilities of the user are zero. To maximize the useful working life and reliability of the UPS and its batteries, the environment in which the UPS operates should be kept cool (20°C - 25°C), dry, dust free and vibration free. The batteries should be hold fully charged.

6.1.2 Preventative maintenance

The UPS system needs a regular and constant maintenance (preventative inspections) at least once a year, even during the warranty period.

These preventative maintenance inspections are essential to ensure a correct functionality and reliability of the UPS system. When the UPS is commissioned, the commissioning field service engineer will attach a service record book to the front of the UPS and this will be used to record the full service history of the UPS.

During a preventative maintenance the field service engineer might carry out some or all of following checks:

- Status and function check of UPS and batteries
- UPS and batteries visual inspection (dust, mechanical damages, ..)
- Visual inspection of screws and cable connections
- Check of air ventilation and room temperature
- Check the operation and function (commutations, remote monitoring and Signaling)
- Current, voltage and frequencies measures
- Measure and record the current load conditions
- Check the load sharing (only in parallel systems)
- Battery voltage check
- Battery discharge test
- Check transfer of the load from UPS to mains operation via static bypass
- Unit cleaning

6.1.3 Deep battery test

The battery test takes approx. 3 minutes and should be performed only if:

- There are no alarm conditions
- The battery is fully charged
- Mains is present.

The battery testing can be carried out independently of the operation mode (OFF-LINE or ON-LINE) and whether or not the load is connected. The battery test procedure can be performed from the UPS display, in the service setup mode.

6.1.4 Battery maintenance, disposal and recycling

The battery maintenance shall be done by a certified Service Partner.

To ensure an optimum operation of the UPS system and a continuous and efficient protection of the connected load it is recommended to check the batteries every 12 months.

Batteries contain dangerous substances that will harm the environment if thrown away. If you change the batteries yourself, call qualified organizations for battery disposal and recycling.

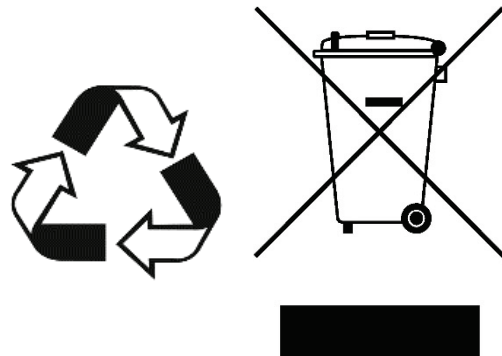


Fig. 6.1.4-1: Battery maintenance, disposal and recycling

6.2 Troubleshooting

6.2.1 Alarms

In the event of an alarm condition the red LED-Indicator "Alarm" and the audible alarm will turn on. In this case proceed as follows:

1. Silence the audible alarm by pressing the button "Reset".
2. Identify the cause of the alarm condition by means of the EVENT LOG in the MAIN menu.
3. In case of doubts please contact the nearest Service center.
4. Fault identification and rectification information is given on the following pages.

6.2.2 Menu, commands, event log and measurements

In section 4 there is a detailed description of the Menu, Commands, Event Log and Measurements that can be operated and displayed on the LCD. The List of Alarms and Messages are shown below.

6.2.3 Fault identification and rectification


The major alarm conditions that will be encountered are:

| ALARM CONDITION | MEANING | SUGGESTED SOLUTION |
|-----------------------------|--|--|
| MAINS RECT. FAULT | <i>Mains power supply is outside prescribed tolerance.</i> | The input power to UPS is too low or missing. If site power appears to be OK, check the input circuit breakers etc. supplying the UPS. |
| MAINS BYP FAULT | <i>Mains power supply is outside prescribed tolerance.</i> | The input power to UPS is too low or missing. If site power appears to be OK, check the input circuit breakers etc. supplying the UPS. |
| OUTPUT SHORT | <i>There is a short circuit at the output of UPS (on load side).</i> | Check all output connections and repair as required. |
| OVERLOAD | <i>Load exceeds the UPS rated power.</i> | Identify which piece of equipment is causing the overload and remove it from the UPS. Do not connect laser printers, photocopiers, electric heaters, kettles etc. to the UPS. |
| TEMPERATURE HIGH | <i>UPS temperature has exceeded the allowed value.</i> | Check that the ambient temperature of the UPS is less than 40° C. If the ambient temperature is normal call the certified service center for assistance. |
| INV. PHASE FAULT | <i>Inverter is faulty.</i> | Call the certified service center for assistance. |
| SYNCHRON. FAULT | <i>The inverter and mains are not synchronized.</i> | The frequency of the input voltage to the UPS is outside operational limits and the UPS static bypass has been temporarily disabled. |
| BATTERY IN DISCHARGE | <i>Battery is near end of autonomy.</i> | Shutdown load connected to UPS before the UPS switches itself off to protect its batteries. |
| MANUAL BYP IS CLOSED | <i>Maintenance Bypass closed. Load supplied by mains.</i> | This alarm is only displayed if the UPS is on Maintenance Bypass. |

In case of alarms not included in the list above, please contact the nearest certified service center for assistance.

Conceptpower DPA 120 UL

208V 20 – 120kW

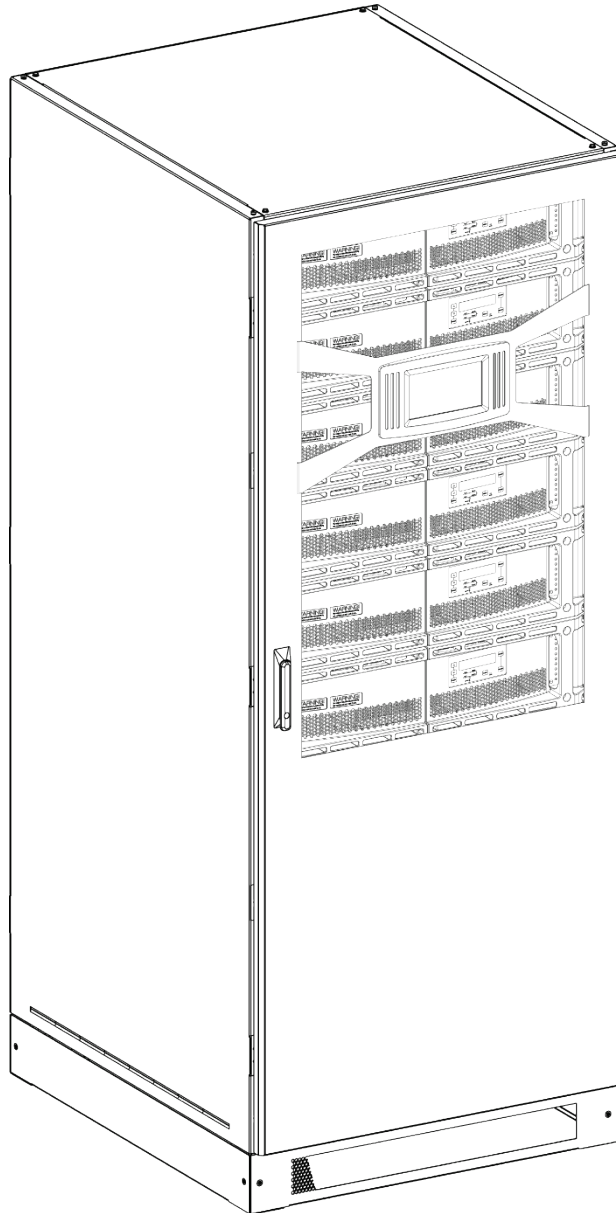

7 Packing, transportation & storage

This chapter contains all the necessary information for the correct packing, transportation and unpacking of the UPS.

IF THE UPS IS NOT IMMEDIATELY INSTALLED THE FOLLOWING GUIDELINES MUST BE FOLLOWED:

TRANSPORT:

UPS CABINETS AND/OR BATTERY CABINET CAN FALL OVER. USE THE SHIPPING BRACKETS ON THE REAR AND FRONT TO SECURE THE CABINETS. DO NOT TILT THEM MORE THAN 10° FROM VERTICAL, OTHERWISE CABINETS MAY TIP OVER.

POTENTIAL DANGERS:

- TILTING THE CABINET MIGHT DAMAGE THE SYSTEM AND THEREFORE SHOULD NO LONGER BE CONNECTED TO THE MAINS.
- WEIGHT OF THE UPS SYSTEM COULD CAUSE SERIOUS INJURIES TO PERSONS OR ANYTHING IN THE SURROUNDING AREA.



NOTE!

STORAGE:

- THE UPS SHOULD BE STORED IN THE ORIGINAL PACKING AND SHIPPING CARTON
- THE RECOMMENDED STORING TEMPERATURE FOR THE UPS SYSTEM AND BATTERIES IS BETWEEN +20 °C AND +25°C. INDOOR AREA THAT IS RELATIVELY FREE OF CONDUCTIVE CONTAMINANTS
- THE UPS SYSTEM AND THE BATTERIE SETS MUST BE PROTECTED FROM HUMIDITY < 95% (NON-CONDENSING)

7.1 Packing & transportation

The UPS and accessories are delivered on a specifically designed pallet that is easy to move with a forklift or a pallet jack. Keep the UPS always in upright position and do not drop the equipment. Do not either stack the pallets because of high-energy batteries involved and the heavy weight.

Check before transporting the surface loading and use an adequate forklift to move the equipment to the final position.

For the weights refer to the technical data sheet



Fig. 7.1-1: Forklift for transportation



BE CAREFULL OF THE HEAVY WEIGHT OF THE UNIT

HEAVY!


7.2 Unpacking

Upon receiving the goods, make sure that they corresponds to the material indicated in the delivery note.

Carefully examine the packed unit(s) for any sign of physical damage. Two TiltWatch indicators (see Figure 7.2-1) are placed on two sides of the packed unit, in a well visible position. They should both be intact and not red color. If tipping has occurred the white arrow becomes red, like shown on the Figure 7.2-1 below.

In case of damaged unit(s) or even only suspect of damaged (TiltWatch is red) inform immediately:

- The carrier
- The manufacturer



NOTE!

VISIBLE TRANSPORT DAMAGES MUST BE CLAIMED TO THE CARRIER IMMEDIATELY AFTER RECEIPT. OTHER CLAIM FOR SHIPPING DAMAGE MUST BE FILED IMMEDIATELY TOO AND THE CARRIER MUST BE INFORMED WITHIN 7 DAYS OF RECEIPT OF THE EQUIPMENT. THE PACKING MATERIALS SHOULD BE STORED FOR FURTHER INVESTIGATION.



Fig. 7.2-1: Tiltwatch

7.2.1 Standard package (film)

Perform the following steps to unpack the UPS equipment from the standard packaging:

1. Remove the plastic film from the UPS, by cutting it where there is the cardboard underneath (on one edge),
2. Remove the 4x cardboard edges carefully by paying attention that the accessory box placed on top of the UPS does not fall down. Lower the accessory box with the help of a stool or ladder; make sure you are safe by doing that. The std. content of the accessory box is: user manual, 2x painted sockets, screws, 4x feet and keys.
3. Remove the bubble-film by removing the small type pieces by hand.
4. Remove pallet from the UPS.
5. Open the UPS-door and make sure that all the UPS-Modules are appropriately fitted in their UPS-Compartment and if the UPS system is provided

Without a UPS-module make sure that the empty UPS-compartment is correctly covered with the UPS compartment protection cover

7.2.2 Sea freight light package (cartboard box)

Perform the following steps to unpack the UPS equipment from the light packaging:

1. Cut the two green straps that are locking down the carton bow. Remove the carton box by pulling up the upper part of it, and then slide up the rest of the carton box starting from the bottom to the top.
2. Cut the tape from the four pieces of polystyrene, and then remove them from the unit.
3. By paying extreme attention and without damage the cabinet, unwrap the plastic film and remove by pulling up the upper part of the bag that cover the unit, the edges are not protected.
4. Mount the 4x adjustable feet (feet are in the accessory box, or at the bottom of the unit).
5. After having placed the UPS in its final position, disassemble the left and right socket and mount the front and back painted sockets.
6. Keep the packaging materials to ship the unit back.



Fig. 7.2.2-1: Sea freight light package unpacking sequence

7.2.3 Sea freight cases (wooden box)

Perform the following steps to unpack the UPS equipment from the sea freight package:

1. Disassemble the wooden box by removing all screws.
2. Remove the plastic film and bag from the UPS, by cutting it without causing damage to the cabinet; the edges are not protected.
3. Remove the accessories from its location. The std. set of accessories is: user manual, 2x painted sockets, screws, 4x feet and keys.
4. Tear out the 2x humidity-absorber. One is inside the front part of the UPS: open the door using the keys and then tear out the absorber. The other one is at the back.

1)



2)



Fig. 7.2.3-1: Sea freight cases unpacking sequence (Wooden box)

7.3 Storage

7.3.1 UPS

If you plan to store the UPS prior to use, keep the UPS unpacked in a dry, clean and cool storage room with an ambient temperature between (-25°C to +70°C) and humidity of less than 95% non-condensing.

If the packing container is removed protect the UPS from dust.



THE UPS SYSTEM, THE BATTERY CABINET AND THE BATTERIES ARE HEAVY AND MAY TIP DURING TRANSPORTATION CAUSING SERIOUS INJURY IF UNPACKING INSTRUCTIONS ARE NOT CLOSELY FOLLOWED.

NOTE!

7.3.2 Batteries

The battery life depends very much on the ambient temperature. It is therefore important to follow the storage instructions/recommendations of the battery manufacturer. For long-term storage make sure that the battery is fully recharged every 6 months. Before and after storing, charge the battery. Always store the batteries in a dry, clean, cool environment in their original packaging. If the packing container is removed protect the batteries from dust and humidity.



SEALED BATTERIES MUST NEVER BE STORED IN A DISCHARGED OR PARTIALLY DISCHARGED STATE. EXTREME TEMPERATURE, UNDER- AND OVERCHARGE AND OVERDISCHARGE WILL DESTROY BATTERIES

NOTE!



BE CAREFULL OF THE HEAVY WEIGHT OF THE BATTERIES

HEAVY!



Fig. 7.3.2-1: Batteries

8 Installation

8.1 Environmental condition

The UPS is designed to be installed indoor, in temperature-controlled rooms and in restricted access locations. Heating, cooling, forced ventilation and humidification are used to maintain the conditions as follow in the next subchapters:

8.1.1 Climatic conditions

| | | |
|--|----|----------|
| Ambient temperature | °C | 0 to +40 |
| Relative Humidity | % | 95 |
| Conditions of condensation | | no |
| Condition of wind-driven rain, snow, hail, etc. | | no |
| Conditions of water from sources other than rain | | no |
| Condition of icing | | no |

The climate-controlling system could be periodically switched on or off but extremely high or low temperature shall be prevented.

8.1.2 Biological conditions

| | |
|---|----|
| Flora (presence of mould, fungus) | no |
| Fauna (presence of rodents and other animals) | no |

The location shall not have a particular risks of biological attacks.

8.1.3 Mechanical active substance

The UPS shall not be placed in proximity to source of sand or dust

8.1.4 Chemical active substance

Location with normal level of contaminants experienced in urban areas over the whole area

8.1.5 Mechanical conditions

The UPS shall be placed in location with insignificant vibration and shock

8.2 Environmental condition for UPS with inside battery modules or external battery cabinet

As VRLA batteries need air-exchange for exhausting gases and their life-time depends on the ambient temperature, for the UPS system with inside battery modules it is recommended to exchange the air and to have a location with climate-controlling system to maintain the conditions as follow.

8.2.1 Climatic conditions

| | | |
|---------------------|----|----|
| Ambient temperature | °C | 20 |
|---------------------|----|----|

8.3 UPS location

The minimum needed clearances to allow proper airflow on the UPS system and to allow proper service and maintenance shall be respected as reported below:

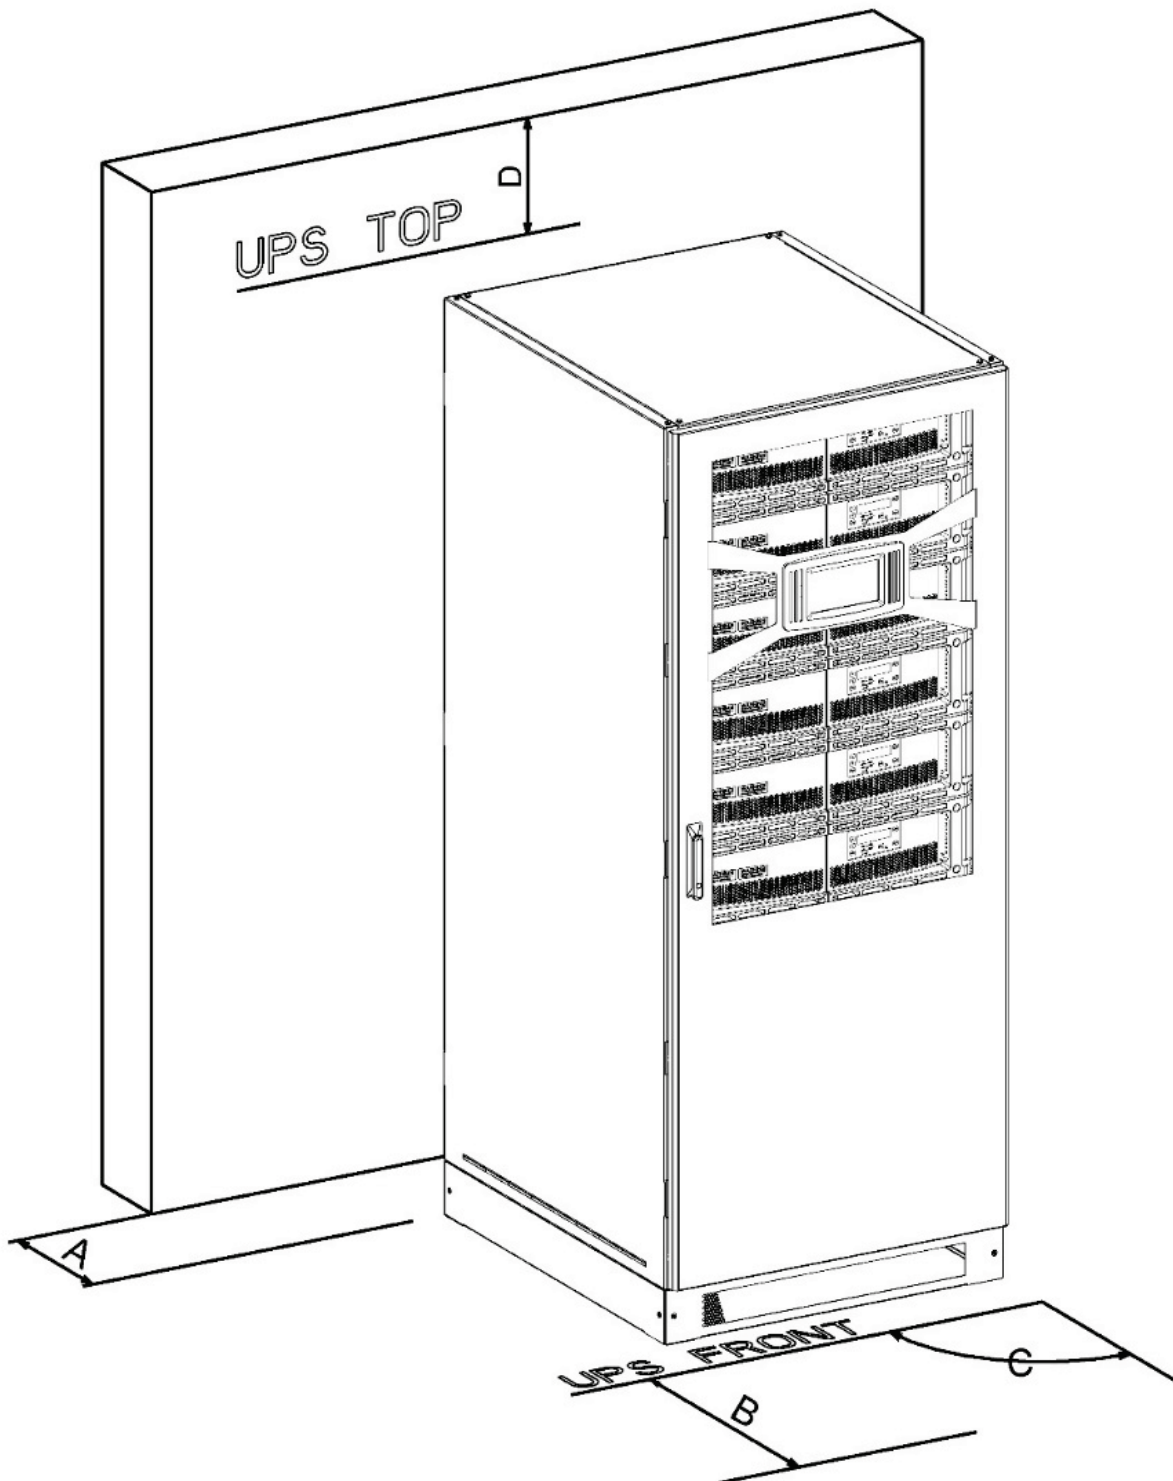



Fig. 8.3-1: UPS and battery location (Clearances)

| | | |
|---|--|---------|
| A | Back clearance for ventilation (forced air outlet) | 300 mm |
| B | Front clearance needed to allow a correct door opening | 1000 mm |
| C | Maximum door opening angle | 115° |
| D | Top Clearance (Top clearance is only needed if there is no side clearance) | 400 mm |

8.3.1 Battery cabinet location

In most of the cases the battery cabinet is positioned at the side of the UPS cabinet (unless the UPS cabinet required side access) and takes advantage of the seam clearances. The minimum needed clearances of the battery cabinet depend on the design of the cabinet (especially the openings). As VRLA batteries need natural ventilation, it is always recommended to keep a certain clearance from the openings. How much that clearance needs to be is highly depended on the installation, a good rule is to keep a minimum of 100mm clearance at the walls with opening.

8.3.2 Fixing of the UPS to the building structure



THE EQUIPMENT IS INTENDED TO BE SECURED TO THE BUILDING STRUCTURE BEFORE OPERATION.

NOTE!

To fix the unit on the floor use the hole on each foot as shown on the drawing below. The quotes are in inches and [mm].

The fixing elements must be chosen in relation to the type of floor/support where the unit will be fixed.

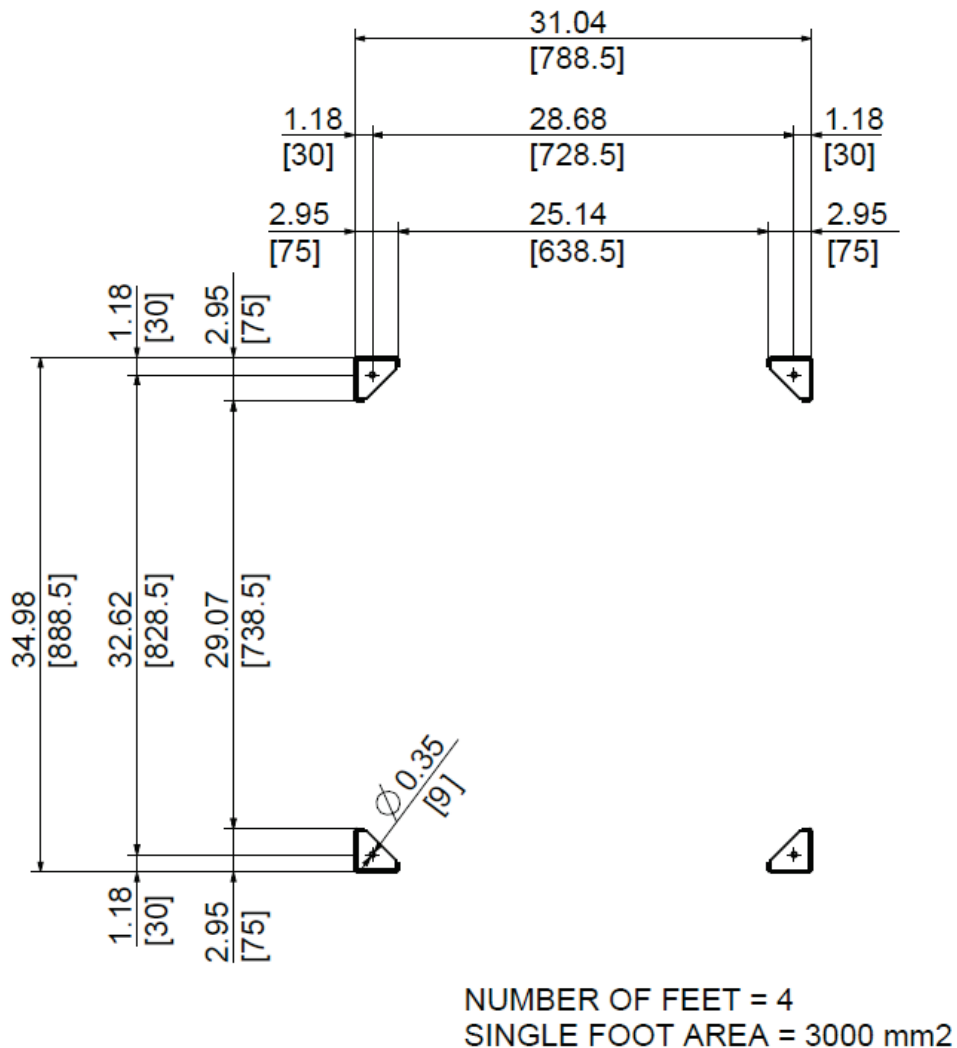


Fig. 8.3.2-1: Fixing of the UPS to the building structure

8.4 UPS connections

The customer has to supply the wiring to connect the UPS to the local power source see the chapter 8.5.4. The electrical installation procedure is described in the following text. The installation inspection and initial start-up of the UPS and extra battery cabinet must be carried out by a qualified service personnel such as a licensed service engineer from the manufacturer or from an agent certified by the manufacturer.



WARNING!

INSTALLATION SHALL COMPLY WITH ALL APPLICABLE NATIONAL, STATE, AND LOCAL CODES

THE INSTRUCTION IN THIS USER MANUAL HAVE ALWAYS TO BE FOLLOWED IN ORDER TO AVOID INJURIES FROM ELECTRICAL IMPACTS

ALL THE OPERATIONS IN THIS MANUAL MUST BE PERFORMED BY CERTIFIED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL. DO NOT OPERATE IN CASE OF PRESENCE OF WATER OR MOISTURE. BY OPENING OR REMOVING THE UPS-COVERS YOU RUN RISK OF EXPOSURE TO DANGEROUS VOLTAGES

PHYSICAL INJURY OR DEATH MAY FOLLOW, OR DAMAGE MAY OCCUR TO THE UPS, OR THE LOAD EQUIPMENT IF THESE INSTRUCTIONS ARE IGNORED

THE EQUIPMENT IS PROVIDED WITHOUT INPUT AND OUTPUT BREAKERS, A READILY ACCESSIBLE DISCONNECT DEVICE SHALL BE INCORPORATED EXTERNAL TO THE EQUIPMENT.

To ensure correct operation of the UPS and its ancillary equipment it is necessary to provide the mains cables with appropriate fuse protection. See chapter 8.5.4.

The UPS unit has the following power connections:

- Rectifier (In):** Three-phase (1-L1, 1-L2, 1-L3), Neutral (1N) and ground (GND) or protective earth (PE) connection for the rectifier input
- Bypass (In):** Three-phase (2-L1, 2-L2, 2-L3), Neutral (2N) connection for the bypass if used as Dual Feed input
- Load (Out):** Three-phase (3-L1, 3-L2, 3-L3), Neutral (3N) and ground (GND) or protective earth (PE) connection for the load output
- External Battery:** Plus (+) and Minus (-) and ground (GND) or protective earth (PE) connection for the external batteries

INPUT NEUTRAL IS REQUIRED TO OPERATE THE RECTIFIER.

In TN-S Systems, no 4-pole input switches or circuit breakers should be used. If you have to use for other reason a 4-pole switch, you have to be aware that, when open, the system - UPS and all downstream equipment - are floating against the PE.

i
IMPORTANT NOTE


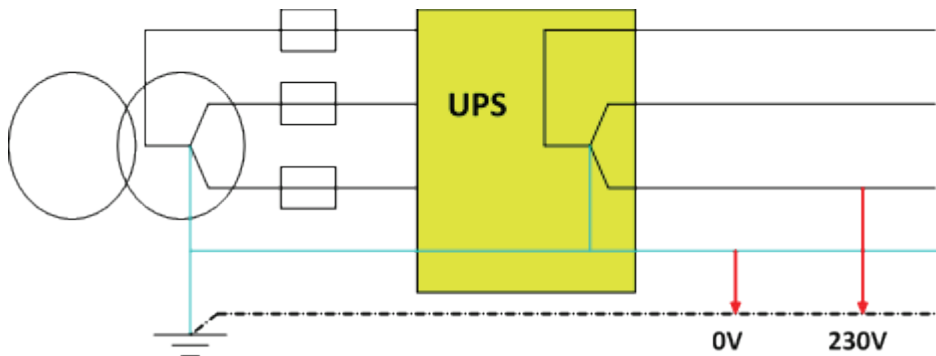


Fig. 8.4-1: Wiring scheme showing the Neutral connection at input and output sides of the UPS.

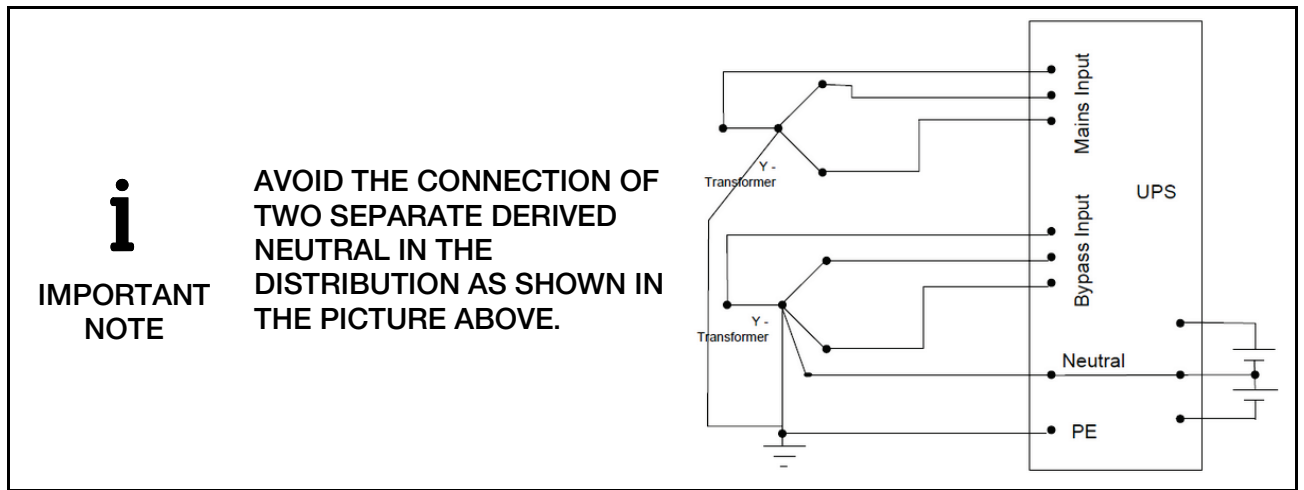

8.4.1 Input connections

BEFORE PROCEEDING READ THE CHAPTER ELECTRICAL INSTALLATION (CHAPTER 5.4) AND INSURE BEFORE STARTING CONNECTING THE CABLE TO THE UPS THAT

NOTE

- Mains voltage (INPUT VOLTS) and frequency (FREQUENCY) correspond to the values indicated on the Nameplate of the UPS.
- Earth connection is performed in accordance with the prescribed US Standards or with local regulations;
- UPS is connected to the mains through a Low Voltage (LV)-Distribution Board with a separate mains line (protected with a circuit breaker or fuse) for the UPS.

Provide input fuses and cables according to the chapter 5.7.1 or in accordance with the prescribed US Standards or with the local regulations.

The input of the UPS must be fitted with circuit breakers or other kind of protection. The circuit breakers will be connected between the mains supply and the UPS and will provide additional protection to the UPS in the event of overloads and short circuits.

8.4.1.1 Mains supply and earth connection

To ensure protection of personnel during the installation of UPS make sure that the connections are performed under the following conditions:

- No mains voltage is present
- All Loads are shut down and disconnected
- UPS is shut down and voltage-free
- UPS-Module is fitted in its correct position
- Maintenance Bypass IA1 is open and in position OFF;
- Remove Terminal cover of the UPS
- Connect first the ground-wire coming from the Low Voltage-Distribution Board to the terminal GND (PE).
- Connect the input power cable coming from the Low Voltage-Distribution Board to the terminals of the UPS showed in the chapter 5.7.1
- Keep the phase rotation in clock-wise sense.



INPUT NEUTRAL IS REQUIRED TO OPERATE THE RECTIFIER

NOTE

Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly.

NOTE: The UPS is provided with facilities for both single feed (one common input cable for rectifier and bypass) and dual feed (separate input cable for rectifier and bypass).

8.4.1.2 Single input feed

To achieve correct Input Cabling see Drawing refer to the chapter 8.5.1.

For single input feed connect the mains input cable to UPS terminal block according to the following table:

| MAINS INPUT CABLE | UPS TERMINAL |
|-------------------|--------------|
| Phase L1 | 1-L1 |
| Phase L2 | 1-L2 |
| Phase L3 | 1-L3 |
| NEUTRAL | 1-N |
| GROUND (EARTH) | GND (PE) |

For minimum recommended Input Cable Sections and Fuse Ratings refer to the chapter 8.5.1. Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly.

8.4.1.3 Dual input feed

To achieve correct input cabling see Terminal Block refer to the chapter 8.5.1.

NOTE: The UPS is supplied (as standard version) with facilities for a single cable feed (for rectifier and bypass). If dual feed is required remove the terminal bridges between L1,L2 and L3.

| UPS TERMINAL Rectifier | | UPS TERMINAL Bypass |
|------------------------|---|---------------------|
| 1L1 | ● | ● 2-L1 |
| 1L2 | ● | ● 2-L2 |
| 1L3 | ● | ● 2-L3 |
| 1N | ● | ● 2-N |
| GND (PE) | ● | |

For dual input feed connect the mains input cables to UPS Terminal, and the according to following tables:

| MAINS INPUT CABLE | UPS TERMINAL Rectifier |
|-------------------|------------------------|
| Phase L1 | 1-L1 |
| Phase L2 | 1-L2 |
| Phase L3 | 1-L3 |
| GROUND (EARTH) | GND (PE) |

| BYPASS INPUT CABLE | UPS TERMINAL Bypass |
|--------------------|---------------------|
| Phase L1 | 2-L1 |
| Phase L2 | 2-L2 |
| Phase L3 | 2-L3 |
| NEUTRAL | 1-N / 2-N |

For minimum recommended Input Cable Sections and Fuse Ratings refer to the chapter 8.5.4. Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly.

8.4.2 Output connections

Before you start connecting the loads, ensure that the sum of the indicated UPS-module rated powers (OUTPUT POWER) on the nameplates (on the side of the UPS-modules) is equal to or larger than the total load requirements.

The output of the UPS must be fitted with circuit breakers or other kind of protection. These circuit breakers will be connected between the loads and the UPS and will provide additional protection to the UPS in the event of overloads and short circuits.

These circuit breakers will enable the protection of each load separately.

The size of the circuit breakers depends on the load rating of the load sockets.

The circuit breakers must comply with the prescribed US Standards. It is recommended to provide a separate output distribution board for the load.

The following values should be indicated on the output distribution board:

Maximum total load rating;

Maximum load rating of the load sockets.

If a common distribution board is used (sockets for Mains and UPS voltage), ensure that on each socket there is an indication of the applied voltage ("Mains" or "UPS").

Output power cable ratings should be in accordance with the recommended cable sections and fuses ratings or in accordance with the prescribed US Standards or with the local regulations.

Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly.

Ensure that the earthing is performed in accordance with the prescribed US Standards or with the local regulations.

8.4.2.1 Load connection

To ensure protection of the personnel during the installation of the UPS make sure that the connections are performed under the following conditions:

No mains voltage is present;

All loads are shut down and disconnected;

PMC is shut down and voltage-free.

Before connecting the output power cables make sure that:

UPS-Module is fitted in its correct position;

Maintenance bypass is in position OFF;

Remove the terminal cover of the UPS.

Connect the output power cable coming from the LV-Distribution Board to the terminals of the UPS.

8.5 Electrical wirings

The customer has to supply the wiring to connect the UPS to the local power source. The installation inspection and initial start-up of the UPS and extra battery cabinet must be carried out by a qualified service personnel such as a licensed service engineer from the manufacturer or from an agent certified by the manufacturer.



NOTE

USE ONLY LISTED TERMINAL LUGS FOR CONNECTION!

THOMAS & BETSS TERMINALS PART NUMBER 54113 or 54114 ARE SUGGESTED FOR WIRING:

8.5.1 Terminals overview

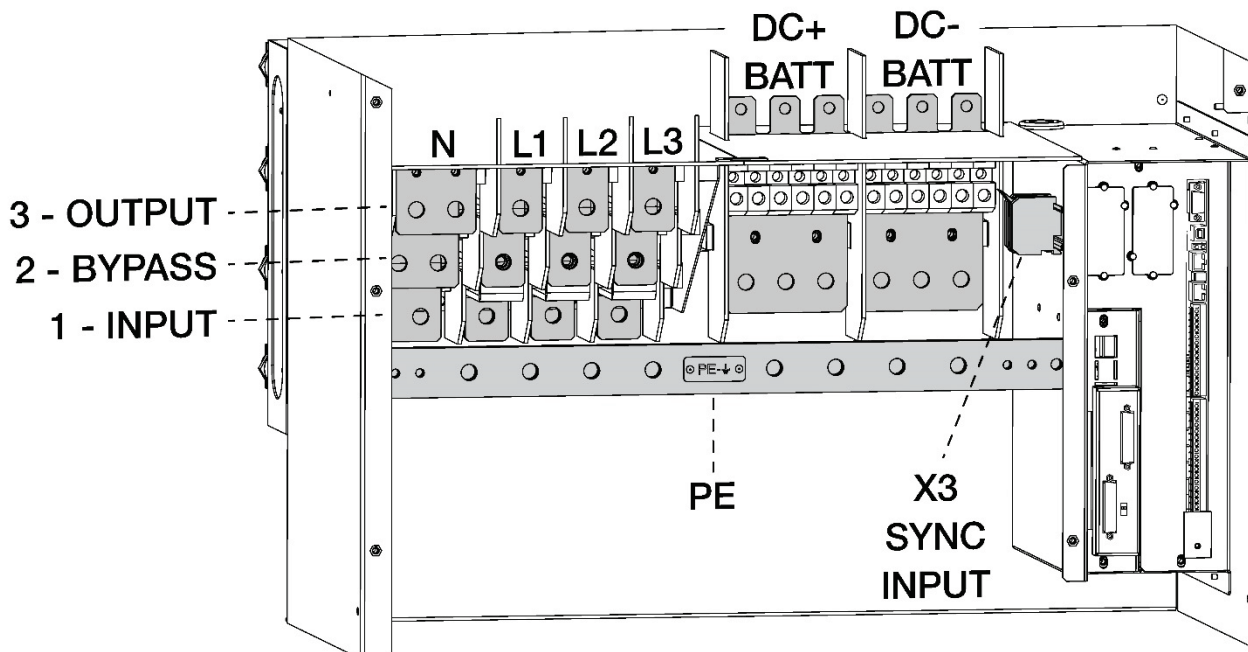


Fig. 8.5.1-1: Terminal overview

SYNC INPUT

THE "X3" SYNC INPUT ALLOWS TO SYNCHRONIZE THE CABINET (OUTPUT) WITH ANY OTHER SYSTEM.



NOTE

FOR A CORRECT WIRING CONNECTION , REFER TO THE CHAPTER "CABLE SECTIONS & FUSE RATINGS".

8.5.2 Single input feed and separate batteries configuration

8.5.2.1 Block diagram

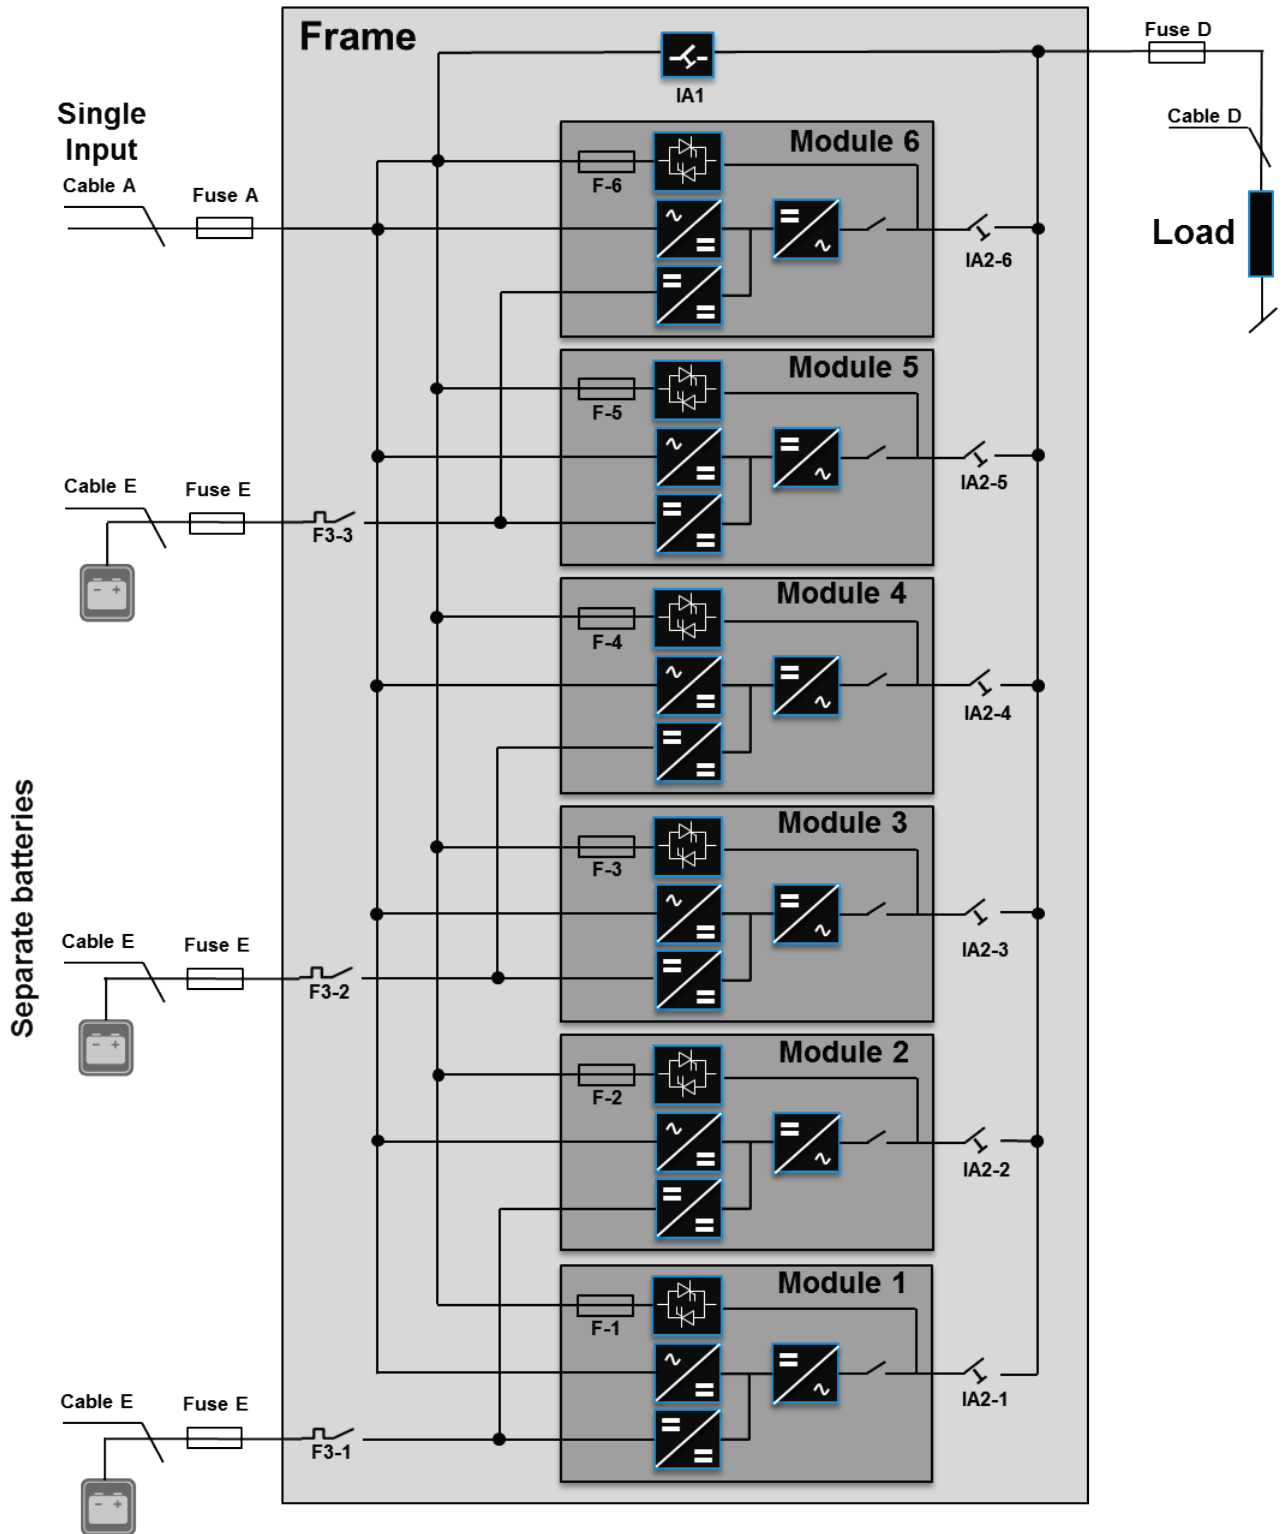



Fig. 8.5.2.1-1: Block diagram for single input feed and separate batteries

8.5.2.2 Cable sections & fuse ratings


Cable sections and fuse ratings recommended according to UL 60950-1. Alternatively, local standards to be respected!



250 Kcmils MINIMUM WIRE GAUGE IS RECOMMENDED

75°C COPPER CONDUCTORS OR HIGHER IS RECOMMENDED

NOTE



TO REDUCE THE RISK OF FIRE, CONNECT ONLY TO A CIRCUIT PROVIDED WITH A MAXIMUM BRANCH CIRCUIT OVERCURRENT PROTECTION IN ACCORDANCE WITH THE BELOW TABLE AND THE NATIONAL ELECTRICAL CODE, ANSI/NFPA 70 AND THE CANADIAN ELECTRICAL CODE, PART I, C22.1

CAUTION

Recommended AC wiring (copper wires) according to current normative, recommended fuse ratings for slow line fuses (gL) or circuit breakers (CB), connection terminal size and max. tightening torque.

| Rated power (kW) | Single input Max. rectifier input current with charging batt. 363A at 120V | | Output Rated output current in normal conditions 333A at 120V | |
|------------------|--|--|---|--------------------------------------|
| | Fuse A Type: gL or CB (quantity x A) | Cable A (quantity x Kcmils) | Fuse D Type: gL or CB (only needed in parallel system) (quantity x Kcmils) | Cable D (quantity x Kcmils) |
| 120 | 3 x 450A (3 pole, bolded N) | 3x(2x250) PH + 4x250 N ¹⁾ + 2x250 PE | 3 x 450A (3 pole, bolded N) | 3x(2x250) PH + 4x250 N + 2x250 PE |
| | All connection points are bus-bar, M12. Max. tightening torque 84.8 Nm | | | |

Recommended DC wiring (copper wires) according to current normative, recommended fuse ratings for fast acting fuses (gR) or circuit breakers (CB), connection terminal size and max. tightening torque.

| Separate batteries | | |
|----------------------------|--|-----------------------------|
| Rated power (kW) | Fuse E Type: gR or CB (quantity x A) | Cable E (quantity x AWG) |
| 20 (one module) | 3 x 125A (3 pole) | 2x(1x1) + 1x1 PE |
| | All connection points are terminal blocks, Max. tightening torque 5 Nm | |

¹⁾ Four neutral cables are required for full non-linear load operation only

8.5.3 Dual input feed and common battery configuration

8.5.3.1 Block diagram

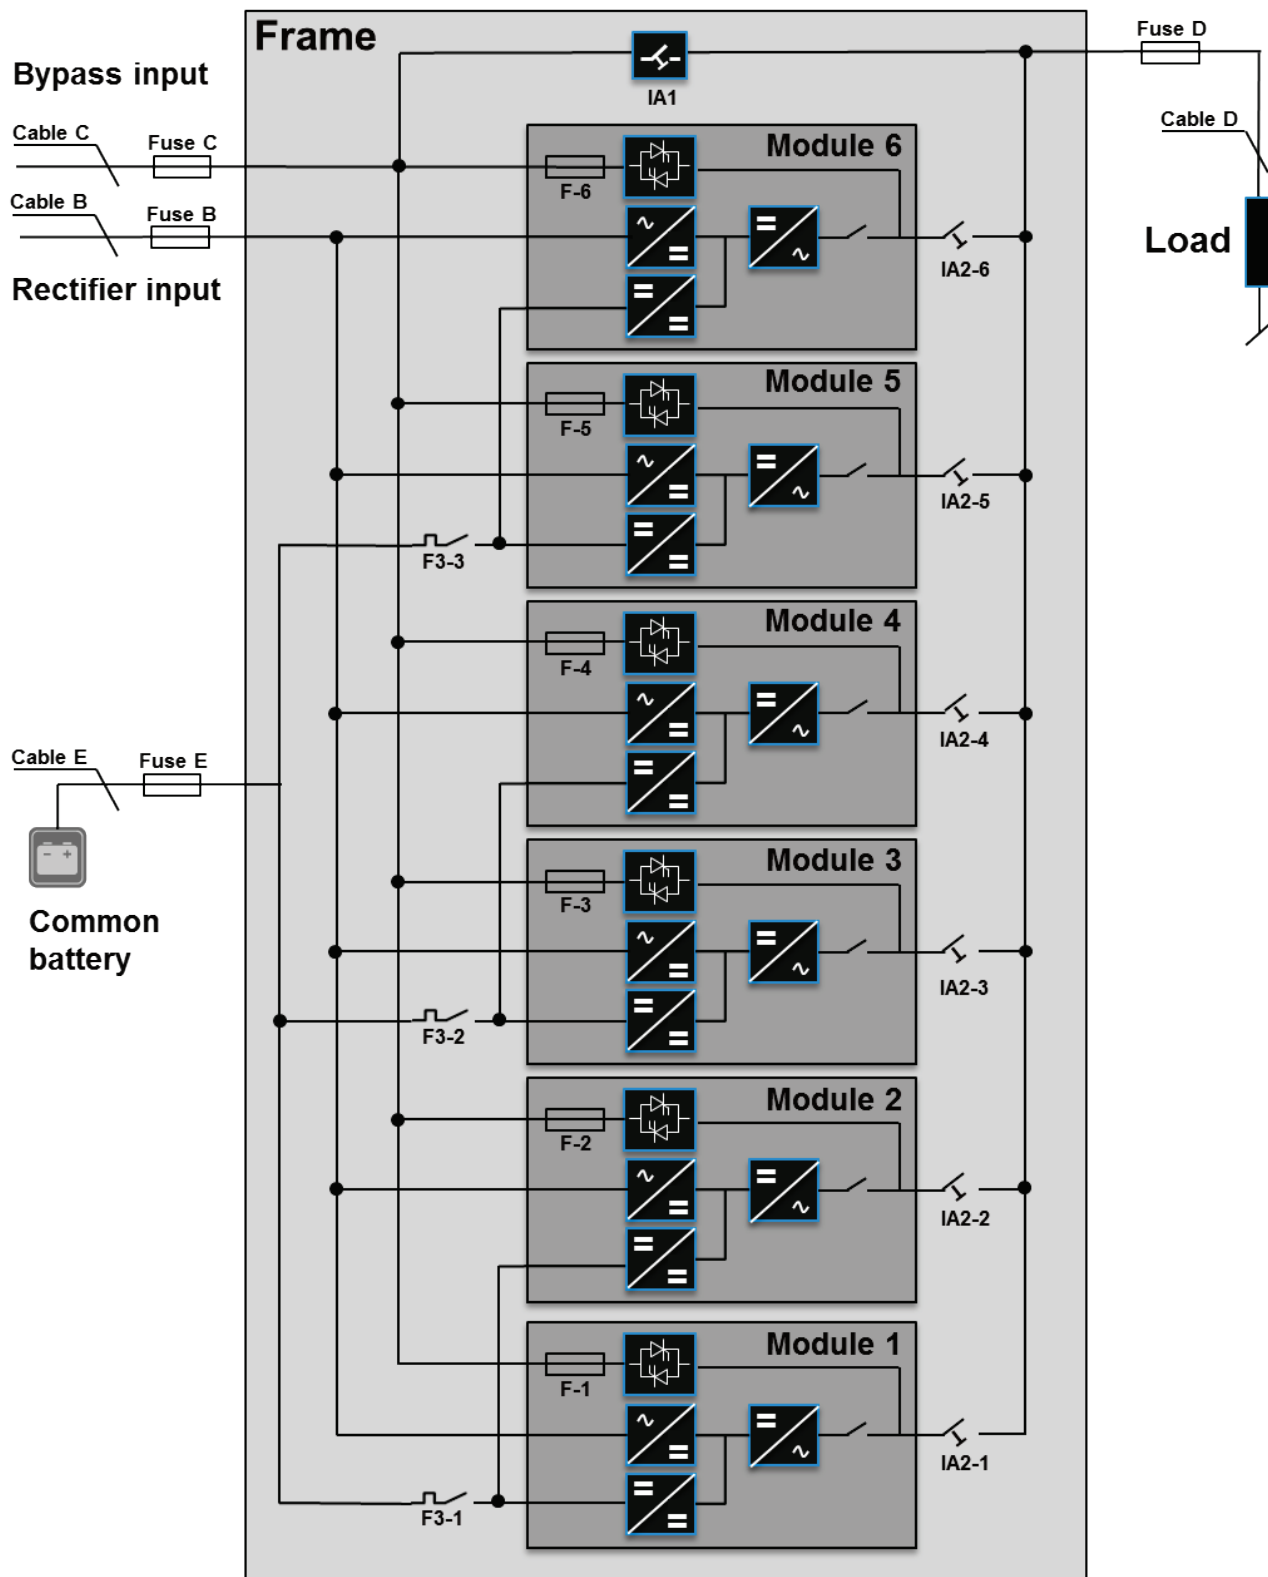



Fig. 8.5.3.1-1: Dual input feed block diagram

8.5.3.2 Cable sections & fuse ratings


Cable sections and fuse ratings recommended according to UL 60950-1. Alternatively, local standards to be respected!



250 Kcmils MINIMUM WIRE GAUGE IS RECOMMENDED

75°C COPPER CONDUCTORS OR HIGHER IS RECOMMENDED

NOTE



TO REDUCE THE RISK OF FIRE, CONNECT ONLY TO A CIRCUIT PROVIDED WITH A MAXIMUM BRANCH CIRCUIT OVERCURRENT PROTECTION IN ACCORDANCE WITH THE BELOW TABLE AND THE NATIONAL ELECTRICAL CODE, ANSI/NFPA 70 AND THE CANADIAN ELECTRICAL CODE, PART I, C22.1

CAUTION

Recommended AC wiring (copper wires) according to current normative, recommended fuse ratings for slow line fuses (gL) or circuit breakers (CB), connection terminal size and max. tightening torque.

| Rated power (kW) | Rectifier input Max. rectifier input current with battery charging 363A at 120V | | Bypass input Max. bypass input current 333A at 120V | | Output Rated output current in normal conditions 333A at 120V | |
|--|---|---|---|--------------------------------------|--|--------------------------------------|
| | Fuse B Type: gL or CB (quantity x A) | Cable B (quantity x Kcmils) | Fuse C Type: gL or CB (quantity x A) | Cable C (quantity x Kcmils) | Fuse D Type: gL or CB (only needed in parallel system) (quantity x A) | Cable D (quantity x Kcmils) |
| 120 | 3 x 450A (3 pole, bolded N) | 3x(2x250) PH + 4x250 N ¹⁾ | 3 x 450A (3 pole, bolded N) | 3x(2x250) PH + 4x250 N + 2x250 PE | 3 x 450A (3 pole, bolded N) | 3x(2x250) PH + 4x250 N + 2x250 PE |
| All connection points are bus-bar, M12. Max. tightening torque 84.8 Nm | | | | | | |

Recommended DC wiring (copper wires) according to current normative, recommended fuse ratings for fast acting fuses (gR) or circuit breakers (CB), connection terminal size and max. tightening torque.

| Common battery | | |
|--|--|--------------------------------|
| Rated power (kW) | Fuse E Type: gR or CB (quantity x A) | Cable E (quantity x Kcmils) |
| 120 | 2x630A (2 pole) | 2x(3x250) + 2x250 PE |
| All connection points are bus-bar, M12. Max. tightening torque 84.8 Nm | | |

¹⁾ Four neutral cables are required for full non-linear load operation only

8.5.4 External battery cabinet

The external battery cabinet is not available.

9 Communication interfaces



ALL THE INPUT/OUTPUT PORTS ARE CLASS 2 (SELV CIRCUITS). PLEASE MAINTAIN SECURITY WHEN CONNECTING TO OTHER DEVICES.

WARNING!

The UPS cabinet is provided with communication card which provides the system information

Communication card (next to the distribution):

- Interlock interface X1 (Interlock function)
- Input Interfaces X3 (Phoenix terminals)
- Output Interfaces : X2 DRY PORTs ,volt-free contacts (Phoenix terminals)
- Smart Port JD1 / RS232 Sub D9 / female: Interface (UPS system to computer)
- USB Interface (UPS system to computer)

On the Interface board are located two LED's:

1. Green LED showing the status of the Interface:
- Fast Blinking: 2 times/sec = Interface is OK
2. Red LED Board Alarm (indicates a possible replacement of the board)

9.1.1 Customer Interface and DRY PORTs

All the input and output interfaces are connected to phoenix terminals (cable 0.5 mm²).

9.1.1.1 Output Interfaces: Terminal blocks X2 (DRY PORTs)

Provision of signals for the automatic and orderly shutdown of servers, AS400 or Automation building systems

9.1.1.2 Input interfaces: Terminal blocks X3

Connection of Remote Shut down facilities, Generator Operation, Customers specials
Refer to the chapter 10.3.1.

9.1.1.3 Interlock interface: Terminal blocks X1

This function allows a secure transfer from inverter (normal operation) to external maintenance bypass and vice-versa. During normal operation the external bypass is locked in position OFF. Only when the UPS is/are transferred to static bypass mode, the lock on the external bypass is released and it possible to switch to position ON. The transfer from maintenance bypass back to normal operation happens exactly the other way around. The release signal is closed (ON) when the maintenance bypass is closed and open (OFF) when the maintenance bypass is open locked.

All Terminals X1-X3 can hold Cable from AWG 24 to AWG 15.

X1 is a dry contact for monitoring an external output switch and can be used as interlock function.

All X2 are potential free contacts and are rated: 30Vdc/2A; 60Vdc/0.7A

All X3 (except X3 5/6 which is a 12VDC source) are inputs, cable max. R 50Ω at 20mA

| Block | Terminal | Contact | Signal | On Display | Function |
|--------|----------|---------|---------------|---------------------------------------|---|
| X3 | X3 / 14 | GND | GND | - | Battery Temperature |
| | X3 / 13 | IN | +3.3VDC | - | (only the optional battery sensor from ABB is compatible) |
| | X3 / 12 | GND | GND | GENERATOR_ OPER_ON | Generator Operation (N.O.) Min. contact load 12V / 1mA |
| | X3 / 11 | IN | +12Vdc | | |
| | X3 / 10 | GND | GND | PARRALEL_SW_OPEN PARRALEL_SW_CLOSE | External Output Breaker (N.O.) Min. contact load 12V / 20mA. |
| | X3 / 9 | IN | +12Vdc | | |
| | X3 / 8 | GND | GND | EXT_MAN_BYP | External Manual Bypass (Ext. IA1) (N.O.) Min. contact load 20mA |
| | X3 / 7 | IN | +12Vdc | | |
| | X3 / 6 | | +12Vdc | - | + 12 VDC source (UPS protected) (Max. 200mA) |
| | X3 / 5 | | GND | - | |
| | X3 / 4 | GND | GND | REMOTE_ SHUTDOWN- | RSD (Remote Shut down) Default setting: disabled. Possibility to enable and set NO or NC via NewSet. |
| | X3 / 3 | IN | +12Vdc | | |
| | X3 / 2 | | - | REMOTE_ SHUTDOWN- | RSD (Remote Shut down) for external switch Max. 250Vac/8A ;30Vdc/8A ;110Vdc/0.3A ;220Vdc/0.12A |
| | X3 / 1 | | - | | |
| X2 | X2 / 18 | | - | - | Common |
| | X2 / 17 | | - | - | Relais AUX |
| | X2 / 16 | | - | - | (function on request, to be defined) |
| | X2 / 15 | | - | COMMON_ALARM | Common |
| | X2 / 14 | | ALARM | No Alarm Condition | |
| | X2 / 13 | | - | Common Alarm (System) | |
| | X2 / 12 | | - | LOAD_ON_MAINS | Common |
| | X2 / 11 | | Message | No Load on Bypass | |
| | X2 / 10 | | - | Load On Bypass (Mains) | |
| | X2 / 9 | | - | BATT_LOW | Common |
| | X2 / 8 | | ALARM | Battery Ok | |
| | X2 / 7 | | - | Battery Low | |
| | X2 / 6 | | - | LOAD_ON_INV | Common |
| | X2 / 5 | | Message | No Load on Inverter | |
| | X2 / 4 | | - | Load on Inverter | |
| | X2 / 3 | | - | MAINS_OK | Common |
| | X2 / 2 | | ALARM | Mains Failure | |
| X2 / 1 | - | | Mains Present | | |
| X1 | X1 / 2 | | - | EXT_MAN_BYP | Interlock Function |
| | X1 / 1 | | - | | Max. 30Vdc/2A; 60Vdc/0.7A (Ext Manual Bypass) / 2AT |

Phoenix Spring Terminals (X1...X2) Connection

9.1.2 JD1 / RS232 smart port computer interface

The **Computer Interface JD1** (4) located on the distribution part is an intelligent RS 232 serial port that allows the UPS system to be connected to a computer. The connector JD1 is a standard D-Type, 9-pin, female.

When installed the **Computer Interface**, the optional WAVEMON software allows the computer to monitor the mains voltage and the UPS system status continuously.

In the event of any changes the computer terminal will display a message.

(For details see our optional Monitoring Package: **WAVEMON**)

9.1.3 USB computer interface

The **Computer Interface USB** (5) located on the distribution part and is in parallel with the intelligent RS 232 serial port JD1.

When installed the **USB Computer Interface** trough, the optional WAVEMON software allows the computer to monitor the mains voltage and the UPS system status continuously.

In the event of any changes the computer terminal will display a message.

(For details see our optional Monitoring Package: **WAVEMON**).

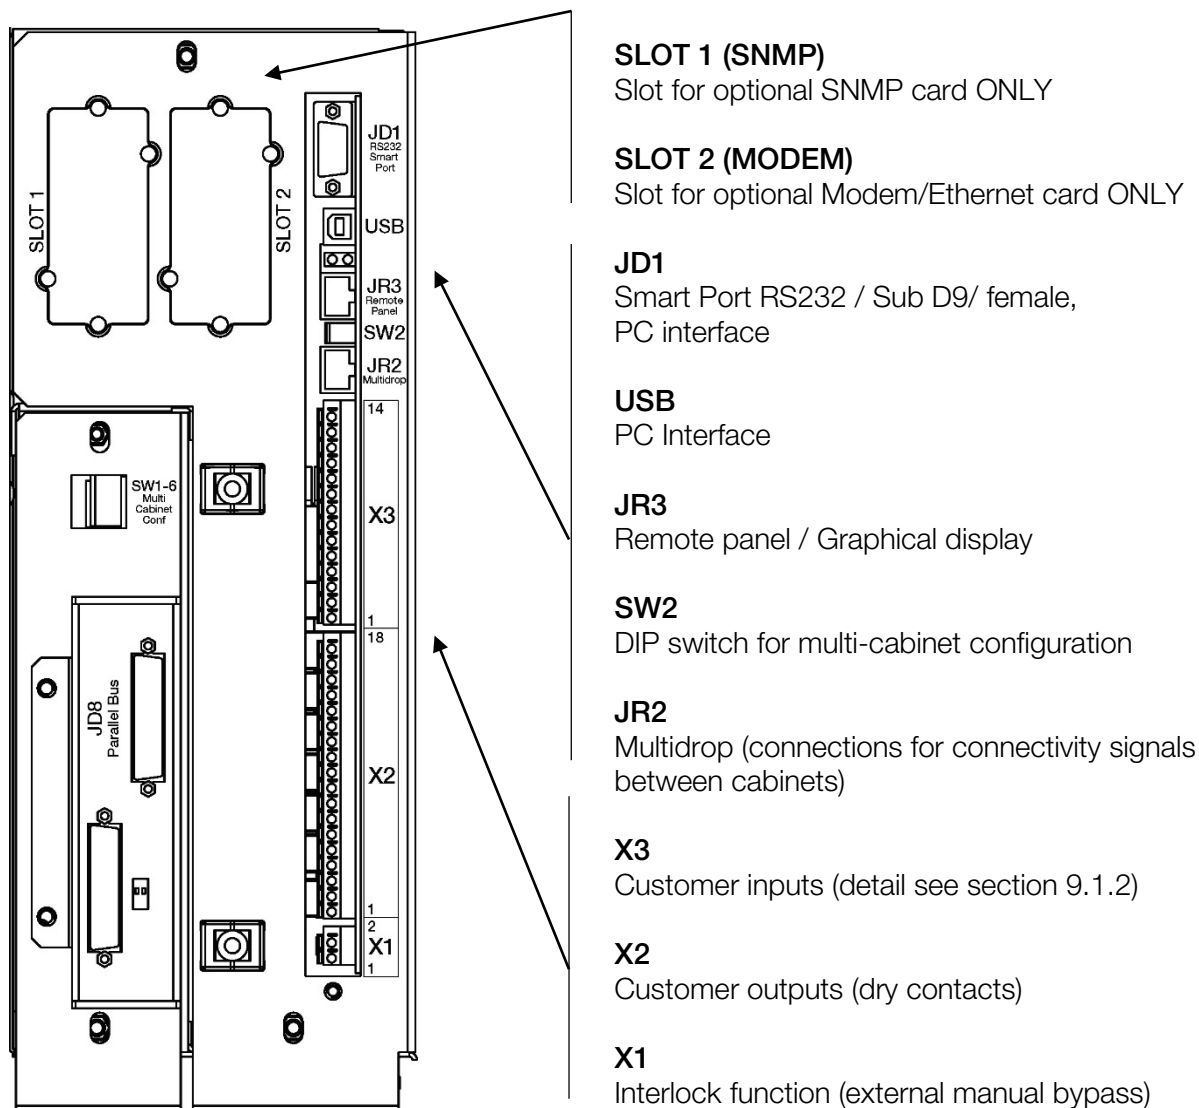


Fig. 9.1.3-1: Distribution Interfaces

10 Commissioning

10.1 LED colors legend

The following table summarizes and explains the meaning of the LED-indicators, colors and behavior.

| Color/behavior | Meaning |
|-----------------------------------|-----------------------------|
| OFF | inactive |
| Green | in operation |
| Flashing green (only for BATTERY) | battery in discharge |
| Red | fault condition |
| Flashing red (only for BATTERY) | battery low or disconnected |

10.2 Start-up procedure



THE OPERATIONS DESCRIBED IN THIS CHAPTER MUST BE PERFORMED BY A SERVICE ENGINEER FROM THE MANUFACTURER OR FROM A AGENT CERTIFIED BY THE MANUFACTURER

WARNING!

Situation of UPS-system before switching it on:

1. Make sure the fuses for the supply of UPS-System in the input distribution board on site are open.
2. Make sure all the input and output cabling has been performed correctly and check the input phase rotation.
3. Verify that the maintenance switch IA1 is open and in position OFF.
4. Verify that all Parallel Isolator Switches IA2-1, IA2-2, IA2-3, IA2-4, IA2-5, IA2-6 are all open (Position OFF).
5. Make sure all the internal battery fuses in the UPS (if any) and in the external battery cabinets are open.
6. Verify that the DIP switch configuration on each frame in the system is correct.

Start up procedure of CONCEPTPOWER DPA:

1. Insert rectifier fuses for the supply of the UPS-system in the input distribution
 - The LED-indicators LINE 1 on UPS-module is lit – green
 - On LCD-display “LOAD OFF, SUPPLY FAILURE” will appear.
2. Check if the parameters are correctly set in all modules. In particular verify:
 - The battery type, the number of blocks/cells, and the autonomy time. Other parameters will be automatically set by the UPS (if no particular battery floating or minimal voltage is required)
 - Check if the battery are connected as «Common» or separate (Common Battery «Yes» or «No»)
 - Verify the setting for output voltage and frequency

- Correctly set the identification number of all modules on the installation (All modules on the same installation must have a different Id. number)

3. Last UPS-Module (in the upper slot of the last frame):

Press both “ON/OFF” main buttons to switch on the UPS. Check if the starting sequence is correctly executed and the UPS switches to Inverter Mode (Inverter led Green) LED-indicator will appear as shown below:

| LED Indicator | Color |
|---------------|------------------------------|
| LINE 1 | Green |
| LINE 2 | Green (if single input feed) |
| BYPASS | OFF |
| INVERTER | Green |
| BATTERY | Flashing Red |

4. Close the relative Bypass fuses or switch, and verify that the “Line 2” led on the keyboard becomes green (dual input feed only)

5. Check command: LOAD TO BYPASS

LED indicator will appear as shown below:

| LED Indicator | Color |
|---------------|--------------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | Green |
| INVERTER | OFF |
| BATTERY | Flashing Red |

6. Check command: LOAD TO INVERTER

Switch the system back to INVERTER operation

LED indicator will appear as shown below:

| LED Indicator | Color |
|---------------|--------------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | OFF |
| INVERTER | Green |
| BATTERY | Flashing Red |

7. Scroll through the menu measurement and check their correctness

8. If all is OK Load-OFF the UPS by means of the two ON-OFF buttons

9. Close now the “parallel isolator” IA2 of the UPS in test and Load-ON again pressing the “ON/OFF” main buttons on the control panel

- Wait until the starting sequence is completed and Check that the message “UPS now is Master” is present on the display
- On output terminal block there is now UPS power
- (The load fuses in output distribution board are still open i.e. the loads are disconnected!).

10. Let this UPS working in Inverter mode and repeat the same sequences of operations with the previous UPS in the installation (proceed with the module on the slot below, or in the previous frame with the module on the highest slot)
 - Verify that the next UPS is now slave. Message “UPS now is Slave” present on the display.
11. Transfer now the load from Inverter to Static Bypass by means of the control panel of this module.
 - Both modules must now switch together from Inverter to Static Bypass mode. Switch back to Inverter mode and verify again that both modules switch on the same time.
12. Continue with the same series of operation with all the UPS modules present on the installation.
 - Verify always that the messages “UPS now is master” and “UPS now is slave” are present on the right time on all UPSs!
 - Verify always that the load transfer from inverter to static bypass and vice versa happens on the same time on all the modules

13. Check battery polarity and voltage.

- If the battery polarity and voltage is correct insert internal (if any) and external battery fuses (breakers).

LED indicator will appear as shown below:

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | OFF |
| INVERTER | Green |
| BATTERY | Green |

14. If possible open the general Mains (Rectifier) fuses or switch and verify that the complete system start working on battery mode for some minutes (depending on the battery autonomy).
 - Then Close the Mains fuses or switch/s and verify that the complete system switch back to normal operation and the battery are charging.
15. Transfer now the load from Inverter to Static Bypass by means of the control panel
16. Close on all frames the “Manual Bypass switch” IA1 (all inverter leds turn to red and buzzers sound)
17. Close now the system “Main External Output Isolator” (the power is now supplied through the “External Maintenance Bypass”, the UPS/s “Internal manual Bypass” and the “Static Bypass” line)
18. Open the “External Maintenance Bypass” (if any) and lock it
 - If the “External Maintenance Bypass” is equipped with an auxiliary switch, its terminals can be connected as a feed back to the UPS Interface board NW22085. In this way the Inverter on all UPS remain locked while the External Maintenance Bypass is closed.
19. Open all the UPS internal “Manual Bypass” IA1
20. Transfer by means of the control panel the load to “Inverter Mode”

THE LOAD IS NOW PROTECTED BY THE CONCEPTPOWER DPA.

10.3 Shut-down procedure



THE OPERATIONS DESCRIBED IN THIS CHAPTER MUST BE PERFORMED BY A SERVICE ENGINEER FROM THE MANUFACTURER OR FROM A AGENT CERTIFIED BY THE MANUFACTURER

WARNING!

The UPS may be shutdown completely, if the load does not need input power for an extended period of time. It may be switched to maintenance bypass mode for service or maintenance purposes, or transferred to the OFF-LINE mode (ECO-mode), if the load does not need the highest degree of protection. The load may be disconnected by means of the two ON/OFF (LOAD-OFF) buttons for security reasons.

Complete Shutdown procedure of CONCEPTPOWER DPA:

Only in case there is no need to supply the load, the UPS system can be completely shutdown. The following procedures can only be executed after the load has completely been de-energized



IN THE CASE THAT THE PARALLEL UPS SYSTEM HAS TO BE TURNED OFF, THEN BOTH ON/OFF BUTTONS ON ALL UPS MODULES HAVE TO BE PUSHED. IN THIS CASE THE POWER SUPPLY TO THE LOAD WILL BE INTERRUPTED

NOTE

1. Verify that the **loads are shutdown** and that there is no need for power supply to the load.
2. Open now the system “Main External Output Isolator” or output fuses/breakers
3. If the loads are all disconnected, press simultaneously both ON/OFF-Buttons on UPS-Control Panel and turn OFF the relative IA2 output breaker on each module.
On the LCD: “LOAD OFF, SUPPLY FAILURE” will appear and the LED-indicator will indicate as shown below:

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | OFF |
| BYPASS | OFF |
| INVERTER | OFF |
| BATTERY | Green |

4. Open battery fuses/breakers on internal (if any) and external battery cabinets or racks.
5. Open the mains fuses/breaker (bypass and rectifier fuses in case of dual input feed configuration) in the building distribution panel.



CAUTION - RISK OF ELECTRIC SHOCK, CAPACITOR STORES HAZARDOUS ENERGY.

MAKE SURE THE INTERNAL DC-CAPACITORS (ELCO) HAVE BEEN DISCHARGED WAITING AT LEAST 5 MINUTES AFTER SHUTDOWN.

CAUTION

THE CONCEPTPOWER DPA IS NOW VOLTAGE FREE.

10.3.1 Remote shutdown

The REMOTE SHUT DOWN **must** use a normally closed contact, which opens to operate the remote shut down sequence.

The remote shutdown on terminal port X3/7.. X3/8 is located at the bottom-front of the frame on communication card with terminal blocks X3. See chapter 9.1.3 for details.

In order to allow removal, maintenance or testing of any remote shut down facility without disturbing the normal operation of the UPS, it is recommended that a terminal block, with linking facilities, be installed between the UPS and the stop button.

1. Use a screened cable with 1 pair (section of wires 0.5 mm²) and maximum length of 100 m.
2. Connect the cable as shown in Fig. 7.2.1-1

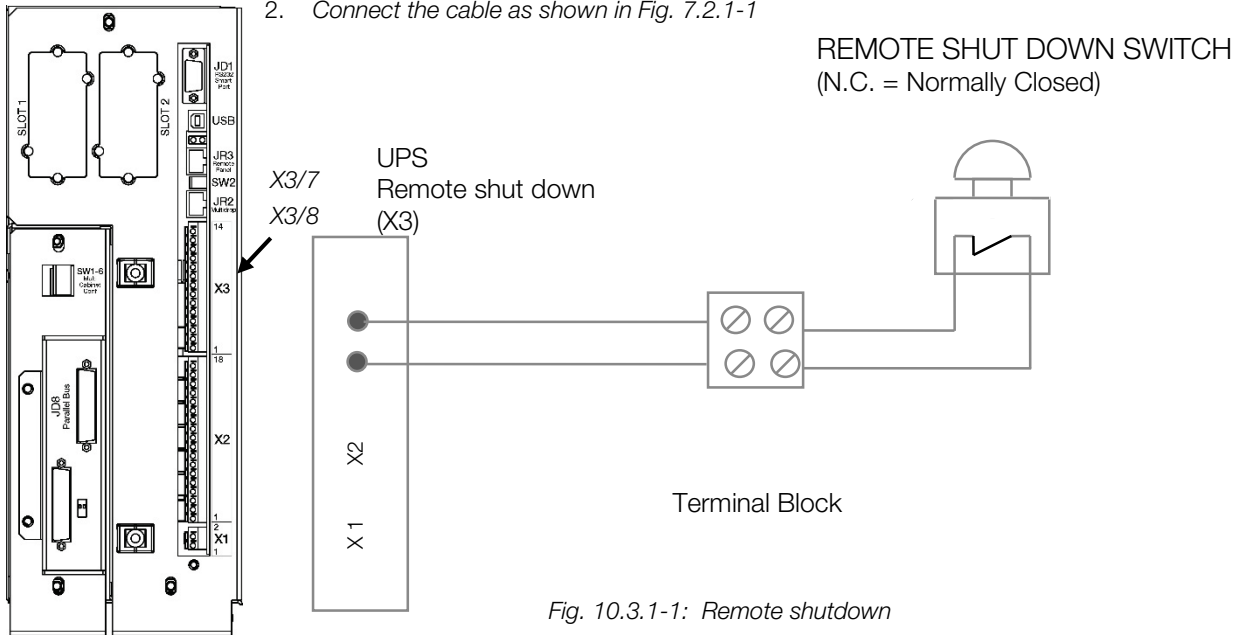


Fig. 10.3.1-1: Remote shutdown

10.3.2 Generator ON facilities

The Generator ON facility must use a normally open contact that closes to indicate that a generator is running and supplying input power to UPS. It is located at the bottom-front of frame on communication card with terminal blocks X2 ...X3. See chapter 9.1.3 for details.

When used, this facility disables the UPS static bypass and prevents the UPS from transferring the load onto the generator power supply.

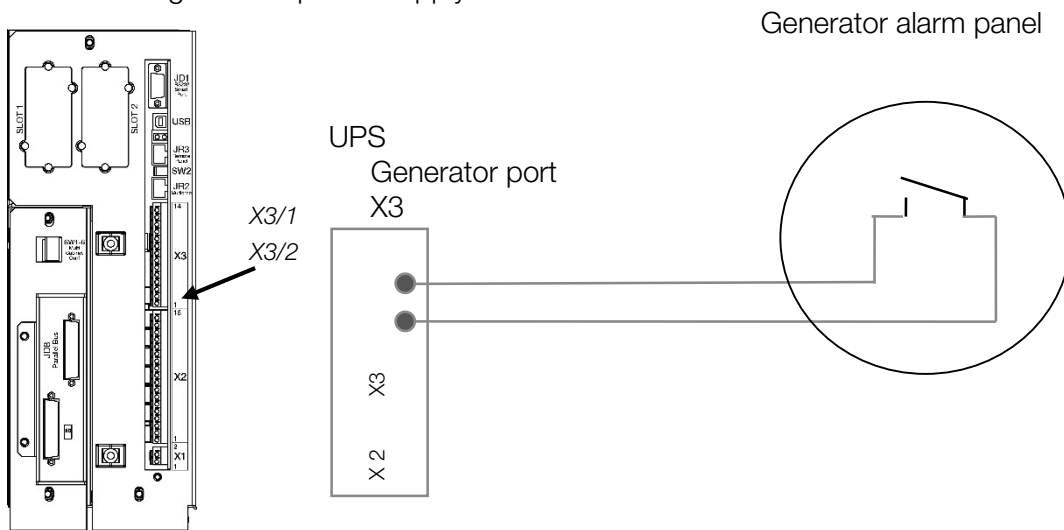


Fig. 10.3.2-1: Generator ON facilities

10.4 Manual bypass

10.4.1 From inverter to bypass

If it is necessary to perform service or maintenance on the UPS it is possible to transfer the UPS to MAINTENANCE BYPASS.



THE OPERATIONS DESCRIBED IN THIS CHAPTER MUST BE PERFORMED BY A SERVICE ENGINEER FROM THE MANUFACTURER OR FROM A AGENT CERTIFIED BY THE MANUFACTURER

WARNING!

Situation of UPS-System before starting the Transfer Procedure to Maintenance Bypass:

The load is protected by Conceptpower DPA running in normal operation. (The UPS-Module is operating on inverter).

- Using LCD panel, select the COMMANDS menu and choose command “LOAD TO BYPASS” and transfer the load to static bypass.
 - Verify if all the modules in the system transfer from inverter to static bypass
 - On LCD panel “LOAD NOT PROTECTED” will appear.
- Close maintenance bypass switch IA1 on all cabinets (position ON).
On LCD: “MANUAL BYP IS CLOSED” will appear and the mimic panel will show:

| LED Indicator | Colour |
|---------------|--------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | Green |
| INVERTER | RED |
| BATTERY | Green |

- Press simultaneously the two ON/OFF buttons on the UPS-control panel (PMD) and turn OFF the relative IA2 output breaker on each module in the system.
On the LCD’s message “LOAD OFF, SUPPLY FAILURE” will appear and the mimic panel will show:

| LED Indicator | Colour |
|---------------|----------------|
| LINE 1 | Green |
| LINE 2 | OFF |
| BYPASS | OFF |
| INVERTER | OFF |
| BATTERY | Flashing Green |

- Open battery fuses/breakers on the internal (if any) and the external battery cabinets or racks.



THE UPS SYSTEM IS STILL POWERED (DANGEROUS VOLTAGE)

THE LOAD IS NOW SUPPLIED BY MAINS AND IS THEREFORE NOT PROTECTED THROUGH THE UPS.

WARNING!

10.4.2 From bypass to inverter

This procedure describes the sequence of operations to be done in order to restart the UPS and restore ON-LINE mode (load on inverter).



THE OPERATIONS DESCRIBED IN THIS CHAPTER MUST BE PERFORMED BY A SERVICE ENGINEER FROM THE MANUFACTURER OR FROM A AGENT CERTIFIED BY THE MANUFACTURER

WARNING!

Situation of UPS-System before starting the Transfer Procedure to ON-LINE mode:

The load is supplied directly by Input Mains power and the UPS is OFF.

1. Close the “parallel isolator” and Load-ON pressing the “ON/OFF” main buttons on the control panel on all the modules in the system.
 - Wait until the starting sequence is completed
 - The mimic on all modules panel will show:

| LED Indicator | Colour |
|---------------|--------------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | Green |
| INVERTER | RED |
| BATTERY | Flashing RED |

2. Close battery fuses/breakers on the internal (if any) and the external battery cabinets or racks. LED indicator will appear as shown below:

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | Green |
| INVERTER | RED |
| BATTERY | Green |

3. Open all the UPS internal “Manual Bypass” IA1
4. Transfer by means of the control panel the load to “Inverter Mode”

THE LOAD IS NOW SUPPLIED BY INVERTER POWER AND IS PROTECTED

10.5 Adding & replacement of a power module

10.5.1 In a single-module system



THE OPERATIONS DESCRIBED IN THIS CHAPTER MUST BE PERFORMED BY A SERVICE ENGINEER FROM THE MANUFACTURER OR FROM A AGENT CERTIFIED BY THE MANUFACTURER

WARNING!

10.5.1.1 How to extract a ups-module in single module systems



THE WEIGHT OF A UPS MODULE CAN REACH 63KG, THEREFORE IT CAN BE LIFTED BY 1 PERSON. WE RECOMMEND TWO PERSONS FOR CARRYING THE MODULE.

POTENTIAL DANGERS:

THE UPS MODULE DUE TO ITS WEIGHT, IF REMOVED INAPPROPRIATELY, CAN CAUSE SERIOUS INJURY OR DAMAGE SHOULD THE MODULE FALL DOWN.

WARNING!

NOTE:

WE RECOMMEND THAT THE MODULES ARE HANDLED BY TWO PERSONS.

SUITABLE LIFTING TOOLS RESPECTIVELY SAFEGUARD PLATFORMS AGAINST FALLING DOWN ARE TO BE PLANNED

If your **CONCEPTPOWER DPA** consists of only one single UPS-module then perform following steps to extract the module:

1. Reset the alarm on faulty Module. The audible noise will stop.
If the alarm condition persists (the LED-indicator ALARM will remain red) it means that there is a fault in the UPS-module.
2. If the load is supplied by the bypass-mode the maintenance bypass (IA1) can be closed by turning it to position "ON".
NOTE: If the load is on inverter, then before closing the maintenance bypass IA1, transfer load to static bypass by means of the command "LOAD TO BYPASS" in submenu COMMANDS.
3. Close maintenance bypass switch IA1 (position ON)
On LCD: "MANUAL BYP IS CLOSED" will appear and the LED-indicator will indicate as shown below:

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | Green |
| INVERTER | RED |
| BATTERY | Green |



THE LOAD IS NOW DIRECTLY SUPPLIED BY MAINS AND IS NOT PROTECTED

NOTE

4. Press both ON/OFF buttons on UPS-module simultaneously;
5. Open battery fuses/breakers on the internal (if any) and the external battery cabinet or rack;
6. Open the output isolator switch IA2.
7. Unscrew the four screws on the front side of the module that are fixing it to the UPS-frame;
8. Pull module only partly horizontally by means of the 2 black handles until the rear connectors are disconnected.




THE LOAD IS NOW DIRECTLY SUPPLIED BY MAINS AND IS NOT PROTECTED.

BEFORE DRAWING THE UPS-MODULE COMPLETELY OUT, WAIT 5 MINUTES UNTIL THE INTERNAL DC-CAPACITORS ARE DISCHARGED.

WARNING!

9. To extract the module completely out, press down the two yellow tabs top-right and top-left of the module (as shown in the figure here below) and then draw the UPS-module out by pulling it out horizontally.

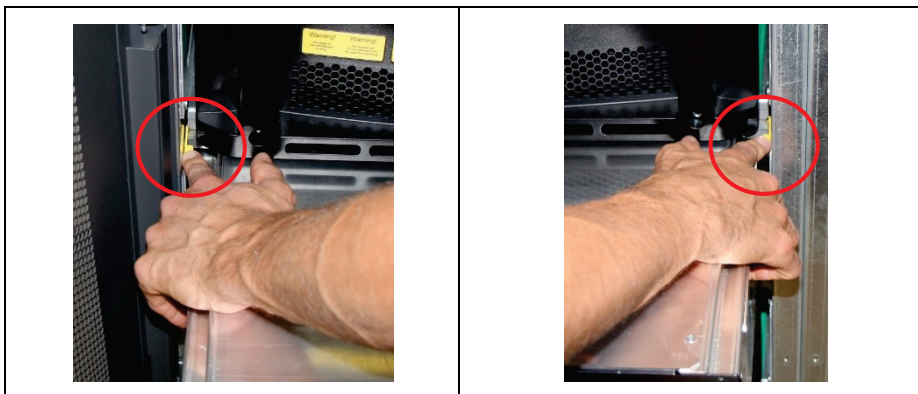

10. Draw UPS-module by pulling it out horizontally:

NOTE: We recommend 2 persons for pulling out the module from the frame. The weight of one module is 63 kg. Insert new UPS-module or cover the opening (UPS-module compartment) with appropriate protection cover immediately and fix with four screws



WHILE THE UPS IS OPERATING IN THE MAINTENANCE BYPASS-MODE, THE LOAD IS NOT PROTECTED BY THE UPS.

NOTE

10.5.1.2 How to fit back a ups-module in single-module-systems

If your **CONCEPTPOWER DPA** consists of only one single UPS-module then perform following steps to fit back the new module:

1. Remove UPS-Module compartment protection cover by unscrewing four screws on the front.
2. Make sure that the parallel switch "IA2" of the slot where the module need to be inserted is OFF
3. Make sure that the "battery breakers" of the slot where the module need to be inserted are OFF
4. Slide two thirds of UPS-Module into dedicated UPS-compartment (make sure not to plug the UPS-module into the rear connector).
Push UPS-module to its final position and push firmly to assure good contact on the rear plugs.

NOTE: We recommend 2 persons for insert the module into the frame. The weight of one module is 63 kg.

5. Tighten the four screws on the front of module with a tighten torque of 6 Nm.
6. Check if the LED LINE1 and LINE2 lit green. If yes, mains voltage is OK;
7. Load-on the module by pushing the two ON/OFF keys at the same time
8. Check if the starting sequence is correctly executed, with the module running in inverter mode at the end
9. Give the command "LOAD TO BYPASS" to switch the module in static bypass mode
 - Check if the command is correctly executed, with the module running in static bypass mode at the end
10. Give the command "LOAD TO INVERTER" to switch the module in inverter mode
 - Check if the command is correctly executed, with the module running in inverter mode at the end
11. Close internal and external battery fuses/breaker (if available);
 - Wait until the BATTERY LED on the module's control panel is green, this means that the batteries are connected and are ok
12. Load-off the module by pushing the two ON/OFF keys at the same time
13. Connect the module to the parallel system by turning ON the parallel switch "IA2"
14. Press simultaneously both "ON/OFF" Buttons to start-up UPS.
LCD panel must display: LED-indicator will appear as shown below:

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | Green |
| INVERTER | RED |
| BATTERY | Green |

15. Open maintenance bypass (IA1) by turning it to position "OFF". The load is now supplied by the static bypass.
16. Transfer load to inverter-mode by means of COMMAND "LOAD TO INVERTER". On LCD: "LOAD PROTECTED" will appear.

THE LOAD IS NOW PROTECTED BY THE CONCEPTPOWER DPA.

10.5.2 In a redundant multi-module system



WARNING!

THE WEIGHT OF A UPS MODULE REACH 63KG, THEREFORE IT IS RECOMMENDED TO BE LIFTED BY TWO PERSONS. THE MODULE SHALL NEVER BE CARRIED BY ONE PERSON ONLY.

MAKE SURE THE INTERNAL DC-CAPACITORS (ELCO) HAVE BEEN DISCHARGED WAITING AT LEAST 5 MINUTES. HOW TO EXTRACT A MODULE IN REDUNDANT MULTI-MODULE SYSTEM

10.5.2.1 How to extract a module in redundant multi-module system

If in a redundant parallel system a UPS-module is faulty, the load will continue to be protected by the operating modules on-line-mode (inverter-mode) and the faulty module may be replaced without having to transfer the load to bypass!

To extract the faulty module from the UPS-Frame in a Redundant Multi- Module Configuration proceed as follows:

1. Identify the faulty Module with the Alarm condition and RESET the Alarm. The audible noise will stop. If the Alarm conditions persists (the LED-Indicator ALARM is red) there is a fault in the UPS-Module.
2. Verify that load is supplied by inverter of the other modules running by checking the LCD indication LOAD PROTECTED. Verify load measures on the operating modules.
3. Turn the faulty module OFF by pressing simultaneously both "ON/OFF" buttons. On the LCD: "LOAD OFF, SUPPLY FAILURE" should appear and the LED-indicator will indicate as shown below:

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | OFF |
| BYPASS | OFF |
| INVERTER | OFF |
| BATTERY | Green |

4. Turn OFF the relative output isolator IA2
5. Remove the four fixation screws and pull the module only partially out, horizontally by means of the 2 black handles until the rear connectors are disconnected.



WARNING!


BEFORE DRAWING THE UPS-MODULE COMPLETELY OUT, WAIT 5 MINUTES UNTIL THE INTERNAL DC-CAPACITORS ARE DISCHARGED



NOTE

WE RECOMMEND 2 PERSONS FOR PULLING OUT THE MODULE FROM THE UPS-FRAME. THE WEIGHT OF A MODULE REACH 63KG.

- To extract the module completely out, press down the two yellow tabs top-right and top-left of the module (as shown in the figure here below) and then draw the UPS-module out by pulling it out horizontally.

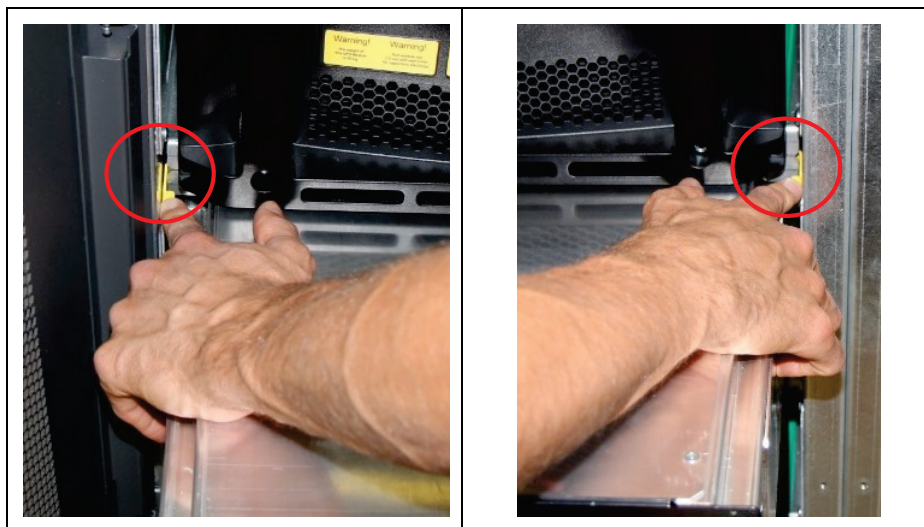

- Screw the protection cover on the empty area left empty by the module with the two fixation screws using a tighten torque of 6 Nm.

10.5.2.2 How to insert a module in a redundant multi module system



BEFORE DRAWING THE UPS-MODULE COMPLETELY OUT, WAIT 5 MINUTES UNTIL THE INTERNAL DC-CAPACITORS ARE DISCHARGED

WARNING!

In a redundant parallel system one module can be re-introduced on its original location without affecting normal system operation. Load will be protected by the other modules running ON-LINE.

Module must be previously set according to system personalization. Please make sure with your nearest service center for correct settings.

- Remove the protection cover by unscrewing the two fixation screws on the front.
- Make sure that the parallel switch “IA2” of the slot where the module need to be inserted is OFF
- Lift the module to its destination position. See above note concerning weights.
- Slide two thirds of UPS module into dedicated compartment (make sure not to plug the UPS-Module into the rear connector).
Push UPS-module to its final position and push strongly to assure good contact on the rear plugs. Tighten the four screws on the front of module;
- Check if LED LINE1 and battery is green. If yes, mains voltage is OK;
On the LCD: “LOAD OFF, SUPPLY FAILURE” will appear and the LED-indicator will indicate as shown below:

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | OFF |
| BYPASS | OFF |
| INVERTER | OFF |
| BATTERY | Green |

6. Press both "ON/OFF" buttons simultaneously to start-up UPS.
 - Check if the starting sequence is correctly executed, with the module running in inverter mode at the end
7. Give the command "LOAD TO BYPASS" to switch the module in static bypass mode
 - Check if the command is correctly executed, with the module running in static bypass mode at the end
8. Give the command "LOAD TO INVERTER" to switch the module in inverter mode
 - Check if the command is correctly executed, with the module running in inverter mode at the end
9. Load-off the module by pushing the two ON/OFF keys at the same time
10. Connect the module to the parallel system by turning ON the parallel switch "IA2"
11. Load-on the module by pushing the two ON/OFF keys at the same time
12. The module will execute the starting procedure and it will run in inverter mode protecting the load in parallel with the other modules in the system. LCD panel must show LOAD PROTECTED indication.

THE LOAD IS NOW PROTECTED BY THE CONCEPTPOWER DPA.

10.5.3 In capacity multi-module system



THE WEIGHT OF A UPS MODULE CAN REACH 63KG, THEREFORE IT IS RECOMMENDED TO BE LIFTED BY 2 PERSONS. THE MODULE SHALL NEVER BE CARRIED BY ONE PERSON ONLY

WARNING!

10.5.3.1 How to extract a module in a capacity multi-module system

If in capacity parallel system a UPS-Module experiences a fault and there is not enough capacity left to protect the load by the remaining operating UPS-Modules, the load will automatically be transferred to static bypass and will continue to be supplied by the mains power supply.

To extract the faulty module from the UPS-frame in a Capacity Multi-Module System proceed as follows:

1. Identify the faulty module with the alarm condition and RESET the Alarm. The audible noise will stop. If the Alarm conditions persists (the LED-indicator alarm is RED) there is a fault in the UPS-module.
2. Verify that the load is on bypass and is supplied by the mains power (bypass-mode or eco-mode) on all UPS-modules (if not please give the command "LOAD TO BYPASS" to switch the module in static bypass mode); in the majority of the events the LED-indicators on control panel of the faulty module will show:

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | Green |
| INVERTER | RED |
| BATTERY | Green |

3. Close maintenance bypass switch IA1 (position ON)
4. On LCD: "MANUAL BYP IS CLOSED" will appear and the LED-indicator will indicate as shown below:

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | Green |
| INVERTER | RED |
| BATTERY | Green |

5. Press both ON/OFF buttons and switch off the IA2 output breakers on ups-module to be replaced;
6. Remove the four fixation screws and slide out the UPS-module (10cm)
This operation will disconnect module by the power connection located on the back of the cabinet.



BEFORE DRAWING THE UPS-MODULE COMPLETELY OUT, WAIT 5 MINUTES UNTIL THE INTERNAL DC-CAPACITORS ARE DISCHARGED

WARNING!

7. Draw ups-module by pulling it out horizontally.
8. Insert new UPS-module or cover the opening (UPS-module compartment) with appropriate protection cover immediately and fix with four screws using a tighten torque of 6 Nm.



CAUTION - RISK OF ELECTRIC SHOCK, CAPACITOR STORES HAZARDOUS ENERGY.

MAKE SURE THE INTERNAL DC-CAPACITORS (ELCO) HAVE BEEN DISCHARGED WAITING AT LEAST 5 MINUTES.

THE LOAD IS NOW DIRECTLY SUPPLIED BY MAINS AND IS NOT PROTECTED.

CAUTION

THE LOAD IS NOW DIRECTLY SUPPLIED BY MAINS AND IS NOT PROTECTED

10.5.3.2 How to fit back a module in a capacity multi-module system

To replace a Faulty Module in a **Capacity Multi-Module System** perform following steps:

1. Make sure that the parallel switch "IA2" of the slot where the module need to be inserted is OFF
2. Remove UPS-Module compartment protection cover by unscrewing two screws on the front. Slide two thirds of UPS-Module into dedicated UPS-compartment (make sure not to plug the UPS-Module into the rear connector).
Push UPS-module to its final position and push strongly to assure good contact on the rear plugs.



WE RECOMMEND 2 PERSONS FOR PULLING OUT THE MODULE FROM THE UPS-FRAME. THE WEIGHT OF A MODULE CAN REACH 63KG.

NOTE

3. Tighten the four screws on the front of module with a tighten torque of 6 Nm;
4. Check if LED LINE1 and battery are green.
On the LCD: "LOAD OFF, SUPPLY FAILURE" will appear and the LED-indicator will indicate as shown below:

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | OFF |
| BYPASS | OFF |
| INVERTER | OFF |
| BATTERY | Green |

5. Press both “ON/OFF” Buttons simultaneously to start-up UPS module.
 - Check if the starting sequence is correctly executed, with the module running in inverter mode at the end
6. Give the command “LOAD TO BYPASS” to switch the module in static bypass mode
 - Check if the command is correctly executed, with the module running in static bypass mode at the end
7. Give the command “LOAD TO INVERTER” to switch the module in inverter mode
 - Check if the command is correctly executed, with the module running in inverter mode at the end
8. Load-off the module by pushing the two ON/OFF keys at the same time
9. Connect the module to the parallel system by turning ON the parallel switch “IA2”
10. Press both “ON/OFF” Buttons simultaneously to start-up UPS module.
11. All modules shall show to be in

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | Green |
| INVERTER | RED |
| BATTERY | Green |

12. Open Maintenance Bypass (IA1) by turning it to position “OFF”. The load is now supplied by the static bypass of the Modules. Check LED-indicators on control panels.
13. Transfer load to Inverter-Mode by means of COMMAND “LOAD TO INVERTER” on any one of control panels. On LCD: “LOAD PROTECTED” will appear and the LED-indicator will indicate as shown below:

| LED Indicator | Color |
|---------------|-------|
| LINE 1 | Green |
| LINE 2 | Green |
| BYPASS | OFF |
| INVERTER | Green |
| BATTERY | Green |

THE LOAD IS NOW PROTECTED BY THE CONCEPTPOWER DPA.

10.6 Multi cabinet configuration (option)

As its name implies, this feature enables to work with more UPS (modules) in parallel for power capacity or redundancy (Up to 5 frames for a total of 30 modules).

This means having a load protected simultaneously by all the UPS on the parallel system with the required current equally shared between them.

To accomplish this, the “Master” UPS Inverter IGBT gate signals and other important information, such as, synchronization, control etc., must be transferred to all UPS working in parallel.

This feature is available as standard so that up to 6 modules can work in parallel inside the same frame without the need to perform any particular operation (just set the correct parallel parameters on each single module).

If more frames are present on a parallel system, the installation of the “parallel cable” between them (through which the mentioned signals are transferred) is also required.

To correctly implement the “Parallel” feature in one or more frames working in parallel (regardless the numbers of installed modules), the following operations must be carried out:

1. Set the 6 Dip switches on the parallel board NW28140
2. Set the 2 Dip switches on the parallel adapter NW4019
3. Connect the parallel cable in case of parallel system (Two or more frames in parallel)

10.6.1 NW28140 configuration

SW1-6 Dip Switches

| | SW1 1 | SW1 2 | SW1 3 | SW1 4 | SW1 5 | SW1 6 | JP1 |
|---------------------|-----------|-----------|-----------|-------|-----------|-----------|----------------------------------|
| First frame | OFF | OFF | OFF | OFF | OFF | ON | ON <i>(See info ⓘ)</i> |
| Other frame | OFF | OFF | OFF | OFF | OFF | OFF | ON <i>(See info ⓘ)</i> |
| Last frame | OFF | OFF | OFF | OFF | ON | OFF | ON <i>(See info ⓘ)</i> |
| Single frame | ON | ON | ON | OFF | ON | ON | ON <i>(See info ⓘ)</i> |



Only **6** Dip switches are mounted on it and the setting for the parallel configuration must be done according to the above table.

- ⓘ The Jumper **JP1** must be always present (inserted) on all boards inside the parallel system (single or more frames working in parallel)

10.6.2 Parallel adapter setting


The parallel adapter NW4019 is required to connect together all frames working in parallel, and must be installed on each of them.

Insert the adapters in to **JD8** of all the parallel boards NW28140 present on the frames and fix them with the two screws (See example below with NW28140).


In case the adapter is installed in one frame working alone (no parallel cable connected) the Dip switches must be set as “Single”.

DIP Switch SW2-2 settings (parallel adapter PCB NW4019)

| | SW 2.1 | SW 2.1 |
|--------------|--------|--------|
| First frame | OFF | ON |
| Other frame | OFF | OFF |
| Last frame | ON | OFF |
| Single frame | ON | ON |

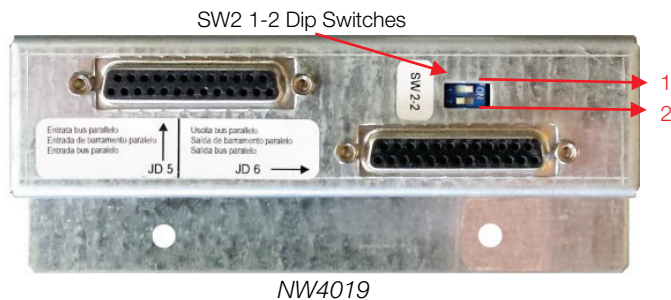

NW4019

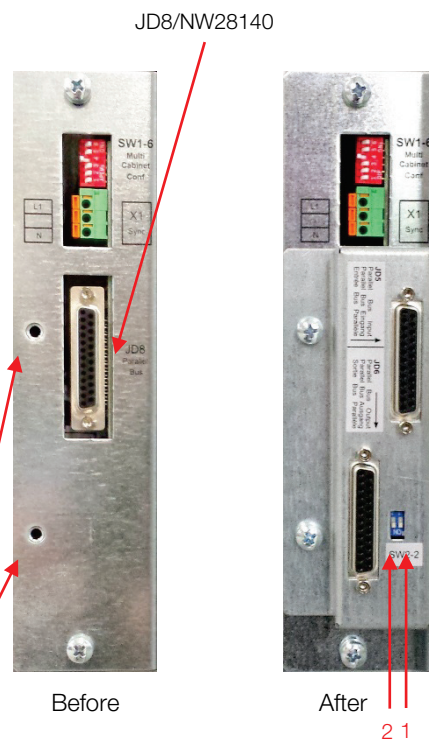

Before


After

Fixing screws

10.6.3 Parallel cable connection

Connect the parallel cable between all frames working in parallel.

1. Start connecting one end of the parallel cable to **JD6** of the parallel adapter NW4019 mounted on the first frame.
① Although the parallel cable is a “straight-thru” (un-crossed) type, it is recommended to connect it according to the labels present on the two ends.
 2. Connect the other end of the parallel cable to **JD5** of the parallel adapter NW4019 mounted on the second frame.
 3. If more frames are present on the parallel system, continue connecting the additional parallel cables on the same way until the last one.
 4. As in the below example, connect the second parallel cable to **JD6** of the parallel adapter NW4019 mounted on the second frame and the other ends to **JD5** of the third frame.
 5. The parallel cables connections ends on **JD5** of the last frame
- ① The module inserted on the lower position of the first frame is the “**Master**” UPS of the complete installation.
(The “**Master**” assignment applies only if the UPS is running in Inverter mode with IA2 closed!)

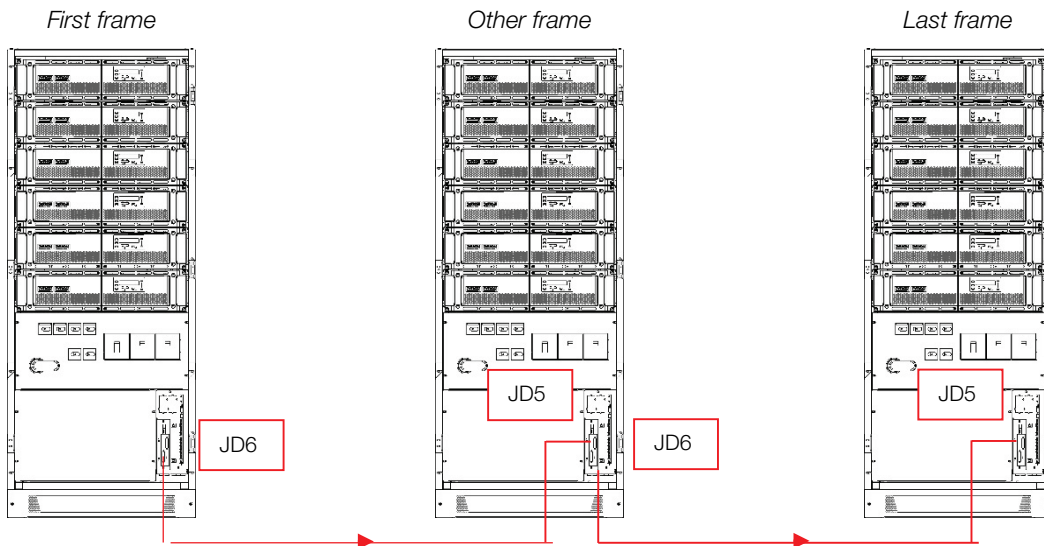

① To complete the parallel installation, the correct “id.” number (P01, P02, P03, etc.) must be assigned to each UPS (module).

10.7 Multidrop configuration

The “Multidrop” connection enables the collection of data/messages of all the UPS in the parallel system in a single point. All data from all single UPS are transferred through the multidrop cable/s to the “**Master**” customer interface board installed inside the master frame (As standard the first UPS on the parallel installation). The collected data are then available for the user directly on the serial connection RS232 of the “**Master**” customer interface board, and transmitted to the SNMP/USHA card if inserted on the relative slot.

Even if the “Multidrop” cable is given with the parallel cable kit, The “Multidrop” feature is completely independent from the “Parallel installation”, its implementation depends exclusively on the customer needs.

To correctly implement the Multidrop feature, the following operation must be carried out on the installation:

- Set the customer interface board in the master frame as **“Master”**
- Set all remaining board/s present in the parallel system as **“Slave”**
- Connect the “Multidrop” cable/s between the different frames in the parallel system

10.7.1 Customer interface board Input-output contacts

When the “Multidrop” feature is implemented, the input/output ports management follow the following rules:

| | CUSTOMER INPUT PORTS (X3) | OUTPUT DRY PORT (X2) | INTERLOCK CASTELL FUNCTION (X1) |
|---------------------|---------------------------|----------------------|---------------------------------|
| Master Board | Enabled | Enabled | Enabled |
| Slave Board | Disabled ¹⁾ | Disabled | Enable ²⁾ |

¹⁾ Exception: “External Output Breaker” (X3 9/10) and “External Manual Bypass” (X3 7/8) are **enabled** because managed directly via hardware
²⁾ The “Interlock Castell Function” is disable in case of NW22085<D with special project **203** (Dry contact “LOAD_ON_MAINS” not active)

All information concerning the input/output ports connection can be found on the UPS user manual

❗ In case it is required the use of the customer interface input or output ports, installed in all UPS of the parallel system, the multidrop feature cannot be implemented!

E.g.: When the “Battery temperature probe” is connected to each single UPS, all customer interface boards must be set as **“Master”**.

10.7.2 Customer interface configuration

1) Verify that the Dip Switches on the board are correctly configured.

| | WITH MULTIDROP | | | NO MULTIDROP |
|----------------------------------|----------------|------------|-----------|--------------|
| | FIRST UPS | MIDDLE UPS | LAST UPS | SINGLE UPS |
| SW2 - 1 | OFF | OFF | OFF | OFF |
| SW2 - 2 (Master/Slave) | OFF | ON | ON | OFF |

On the board NW22085 the **“Master”**, **“Slave”** configuration is done with the Dip switch **“2”**. (The board is **“Master”** when the Dip switch **“2”** is set to **“OFF”** and **“Slave”** when it is set to **“ON”**)

2) Verify that the jumpers on the board are correctly configured. Please note that some jumpers can be ON or OFF also according to the UPS installation (E.g.: Remote shut down button installed or not)

| NW22085 | | | | |
|----------------|---------------|-----------------------------------|--|---|
| JUMPERS ON PCB | JUMPER STATUS | JP2 ON (See details) | JP4 (EPO) OFF (See details) | JP8 (Ext. IA2) OFF (See details) |

Let the jumper **JP2** always present in order to correctly detect the status of the “External Manual Bypass” auxiliary contact (connection on **X3 7/8**)

The jumper **JP4** must be always **OFF** in order to correctly detect the status of the “Remote shutdown button” (EPO function) (connection to **X3 3/4**).

The jumper **JP8** must be removed (**OFF**) in case an **External output breaker** (IA2) is installed and the relative **auxiliary contact** connected to **X3 9/10** on the interface board.

10.7.3 Led Blinking status

The customer interface board NW22085 can operate on the following 4 different modes:

1. **Master** *“Master” board (only the first one on a parallel system with “Multidrop” connection installed) or single frame*
2. **Slave** *“Slave” board/s on a parallel system with “Multidrop” connection installed*
3. **BootLoader** *Operation mode active during customer interface board FIRMWARE upgrade (via RS232 or USB)*
4. **Pass-Through** *Operation mode active during electronic board NW28010 FIRMWARE upgrade via RS232 or USB*


① The NW28010 FIRMWARE upgrade can be carried out directly on the NW22085 only when it is set as “Master” or through the multidrop connection (via the Master board) if it is set as “Slave”

The board operating mode change according to its setting (Jumper or Dip switches) and the installed FIRMWARE version. It can be visually identified by the status of the Green and Red LEDs mounted on it.

| LED | FIRMWARE VERSION LD3 NW22085 | ON/OFF/BLINKING (NR. OF BLINKS PER SECONDS) | LED “OFF” TIME (IN SECONDS) | BOARD MODE |
|-------|---------------------------------|---|--------------------------------|------------------------|
| RED | All | OFF | N.A. | CHECK GREEN LED STATUS |
| RED | All | ON | N.A. | BOARD ERROR |
| GREEN | ≥2.6 | 1 | 1 | MASTER |
| GREEN | ≥2.6 | 2 | 2 | SLAVE |
| GREEN | ≥2.6 | 3 | 3 | BOOTLOADER |
| GREEN | ≥2.6 | Continuous | Fast | PASS-THROUGH |

10.7.4 Multidrop cable connection

1. If more than two frames are in parallel insert the splitter on all the “Middle” units
2. Connect together all the frames using the supplied Multidrop cable respecting the correct cable direction
3. Start inserting the cable ends labelled “**Previous**” on the first frame and the second ends labelled “**Next**” on the second frame
4. Continue on the same way with the remaining cables until the last frame

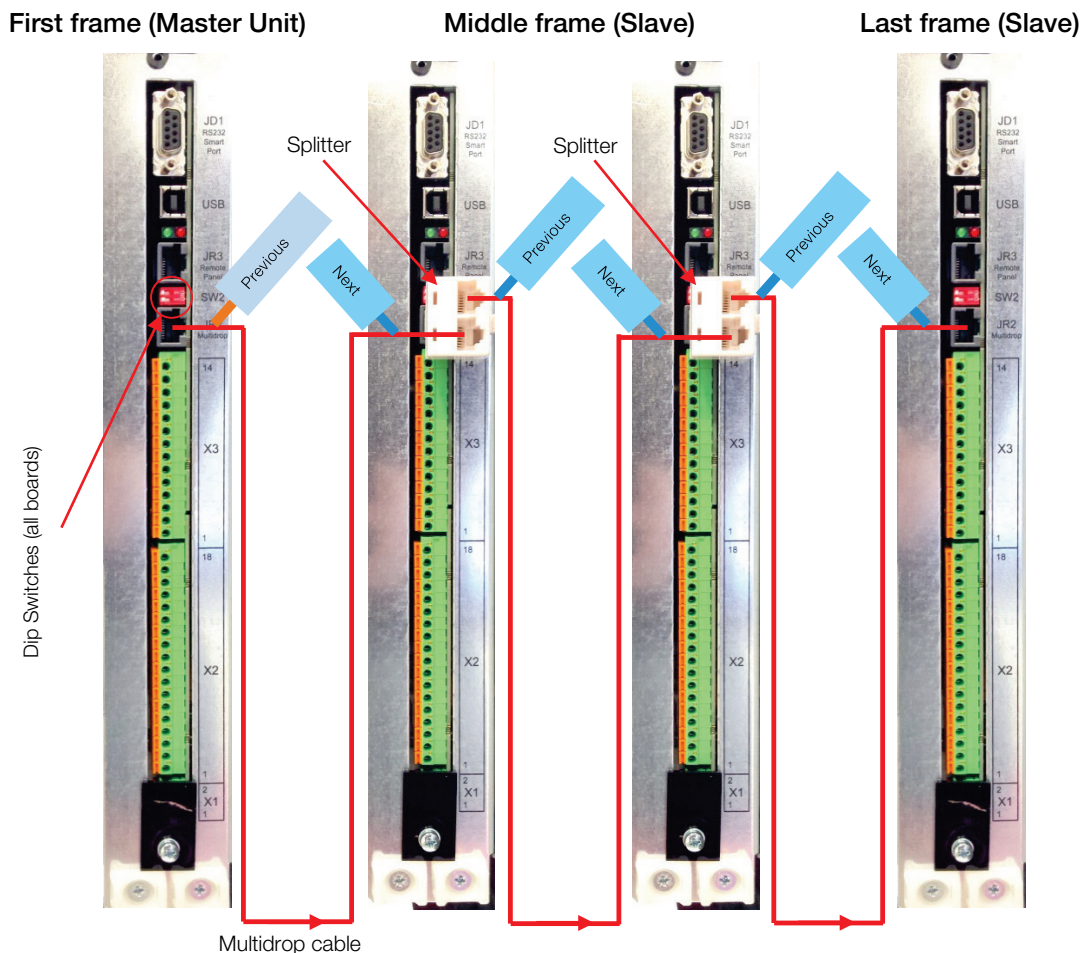

10.7.5 Interface board parameters

The interface boards NW22085 mounted on DPA500 UPS is set on the factory with the default parameters.

Through the NewSet tool, some of these parameters can be adapted to the customer needs. A certified service engineers can easily carry out this operation directly on customer site.

The list of all available parameters is present on a “pmdl” file inside the NewSet tool working directory and it is different for each interface board type. Moreover, with the introduction of the new μ Processor, other specific parameter sets (new “pmdl” file) have been generated for the last boards versions.

On the table below, you can find the list of the most used parameters (with the relative address numbers) which can be modified with the standard NewSet tool license.

Other parameters, available only on special project, can be modified with particular NewSet license that are provided on request directly by ABB after Sales department (the special license have usually a limited validity time).

Parameter file name on NewSet tool directory: NW22085 \geq E “pmdl2287.pds”

| PARAMETERS NAME | PARAMETER ADDRESS NUMBER | | DRY CONTACT | |
|--|--------------------------|--|------------------------|------------|
| | NW22085 \geq E | | NAME | CONNECTION |
| UPS Interface collects system info | 5 | | N.A. | N.A. |
| Input Drycontact Remote shut down polarity | 221 | | Remote Shutdown | X3 3/4 |
| Input Drycontact Customer_1 (Generator operation) polarity | 222 | | Generator Operation | X3 11/12 |
| Input Drycontact External Man Bypass polarity | 223 | | External Manual Bypass | X3 7/8 |

11 Options

11.1 Field installable kits

ABB modular system is provided with several features that allow to easily adapt it to the needed sites conditions. Following the “field installable kits”:

- Additional module
- Parallel Kit
- Network interface cards (SNMP)
- Battery Temperature Sensor
- Synchronization kit
- Elevation kit

Some of the features are design to be installed only during the assembling on the factory and for a safety reasons cannot be added on the field:

- Manual Bypass
- Battery breaker
- Cold start
- TVSS

Please pay attention to mention these options features by placing the order.

11.1.1 Additional Module

An additional module can be easily added on the system by proceeding as described in the chapter 4.4 “Adding & replacement of a power module”.

If everything is OK you can consider the upgrade of the system successful.

11.1.2 Parallel kit

To parallel more than one cabinet together refer to the chapter 10.6 “Multi cabinet configuration”.

11.1.3 Network interface cards (SNMP)




ALL THE INPUT/OUTPUT PORTS ARE CLASS 2 (SELV CIRCUITS). PLEASE MAINTAIN SECURITY WHEN CONNECTING TO OTHER DEVICES.

WARNING!

ABB offers network interface cards to connect ABB UPS system to the network.

The network interface card provides:

- Remote monitoring via Web
- Environmental monitoring
- Extensive alarm handling and dispatching
- Redundant UPS monitoring
- Integration into network or building management system
- Integration into multivendor and multiplatform environments

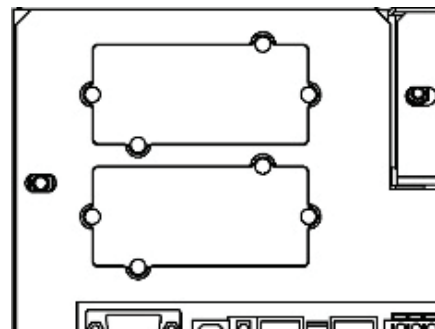

To install the SNMP card please follow the instructions below:

The **Simple Network Management Protocol (SNMP)** is a worldwide-standardized communication-protocol. It is used to monitor any device in the network via simple control language. The UPS-Management Software also provides its data in this SNMP format with its internal software agent. The operating system you are using must support the SNMP protocol. We offer our software with SNMP functionality for Novell, OS/2, all Windows running on INTEL and ALPHA, DEC VMS, Apple. Two types of SNMP interfaces with identical functionality are available: an external SNMP-Adapter (Box) and an internal SNMP-Card. Both can manage a parallel system (N modules) and return either global values - which are consistent for the whole parallel system - or specific values from the single modules.

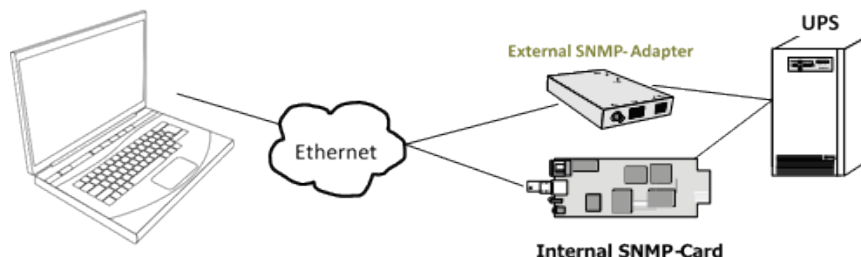


Fig. 11.1.3-1: SNMP

The adapter may be configured via Telnet, HTTP (Web-Browser) or serial connection (Terminal). For normal operation at least one network connection (Ethernet) is required.

The SNMP adapter can be used, utilizing the RCCMD send function, for an automatic network wide shut down or just for informing connected users. The shutdown procedure can be initiated on a low residual battery autonomy time (downtime) or by a countdown timer which is started at the beginning of the alarm. A shut down is therefore possible without extra input from the operator, and is fully software controlled.

The small (125x70 mm) External SNMP adapter comes with following interfaces:



1. RJ-45 connector for 10/100 Base-T (autoswitchable)
2. Serial Port for configuration (COM2) or optional ModBus interface.
3. Error/Link LED for UPS status
4. Aux Port
5. DIP Switch
6. Serial Port to the UPS (COM1)
7. DC Supply (9 VDC or 9-36 VDC supply, depending on model);

Fig. 11.1.3-2: External SNMP Adapter



The Internal SNMP-Card can be inserted into an appropriate extension slot of the **PMC**. This adapter communicates via the serial port of the UPS and makes a direct multiple server shut down possible without additional SNMP management software.

Fig. 11.1.3-3 Internal SNMP Adapter

For detailed information please see Software Manual provided with the PMC-Software CD ROM. **RCCMD - Remote Console Command module** for a multi-server shutdown. This stand-alone software module is designed to receive and execute a command issued by a remote device. Thanks to RCCMD it is possible to execute a shutdown in a heterogeneous multiplatform network. The new release RCCMD2 is an application available for all Operating Systems, analogous to PMC-Software. Our SNMP Interfaces are compatible to RCCMD

11.1.3.1 CS121 Basic

For interfacing the UPS with the network without the need for additional sensors or interfaces. Available in slot and box formats.

Supports the following protocols

SNMP, Modbus TCP, HTTP ModBus TCP, Telnet FPT, SMTP (e-mail)

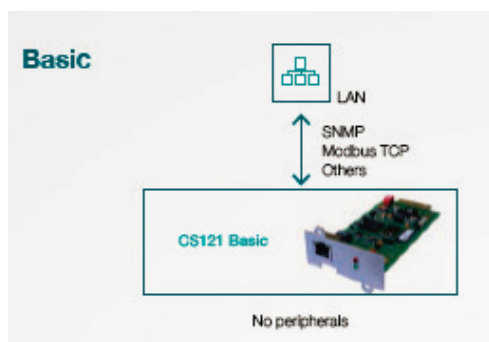


Fig.11.1.3.1-1: CS121 Basic

11.1.3.2 CS121 Advanced

For interfacing UPS with the network and allowing users to connect additional sensors and I / O options either directly to the card or with sensor manager. Available in slot and box formats

Supports the following protocols

HTTP, ModBus TCP, SNMP Telnet FPT, SMTP (e-mail), ModBus RS-485

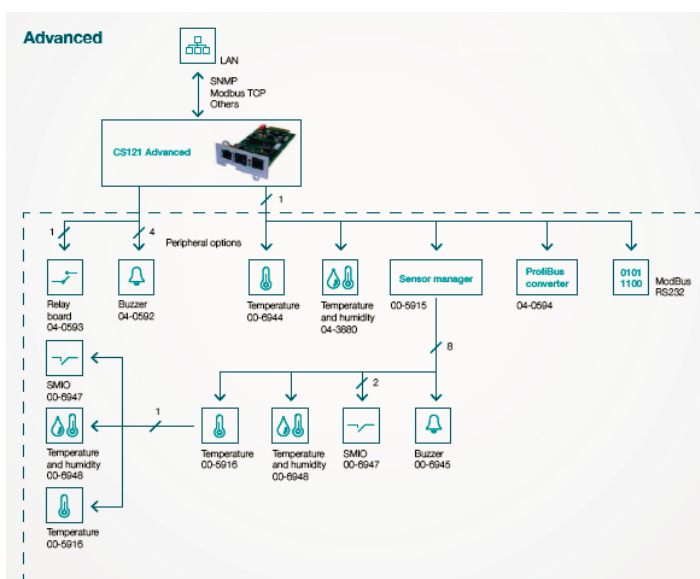


Fig. 11.1.3.2-1: CS121 Advanced

11.1.3.3 CS121 Modbus

For interfacing UPS with the network and the ModBus RS485 with option to connect alarms buzzers or additional relay board. Available in slot and box formats.

Supports the following protocols

HTTP, ModBus TCP ,SNMP Telnet FPT, SMTP (e-mail), ModBus RS-485


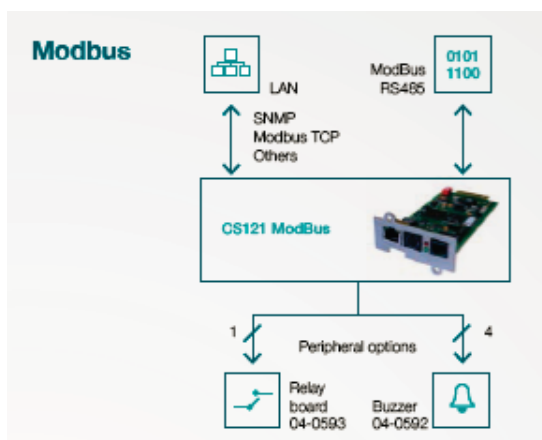



Fig. 11.1.3.3-1: CS121 Advanced

11.1.3.4 Installation of the SNMP board

1. Remove the 4 plastic lids from the unit

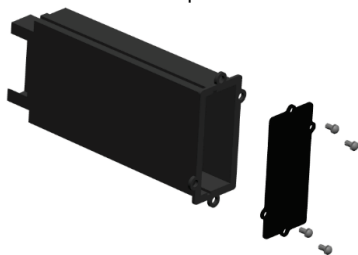

2. Insert the SNMP card inside the slot

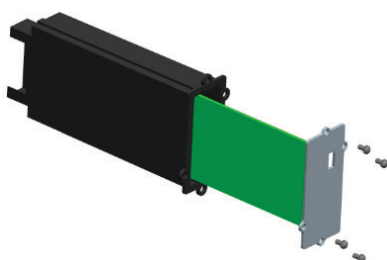

11.1.4 Battery Temperature Sensor


The option Battery Temperature Sensor, if correctly installed has the following two functions:

1. allows the battery temperature to be shown in the menu of the LCD display (see chapter 4.3.1)
2. allows the battery charger to automatically and continuously compensate the charging voltage according to the values as per the table here below.

2.30 V/cell @15°C
Linearly to ...
2.23 V/cell @35°C

11.1.4.1 Installation of the Battery Temperature Probe.

The sensor comes with a 1.8m cable, in case a longer cable is needed, it can be extended up to 15m. First define the position of the sensor, it is recommended to put it where the temperature gets higher (typically it's on the top of a battery cabinet or UPS internal battery (or even battery room)). Then, thread the wire by fixing it along the way and connect the two ends of the cable by plugging them into the customer interface (see 9.1.3) on the pin X3/13 and X3/14. The polarity does not matter (not important which end is connected at X3/13 and which at X3/14).

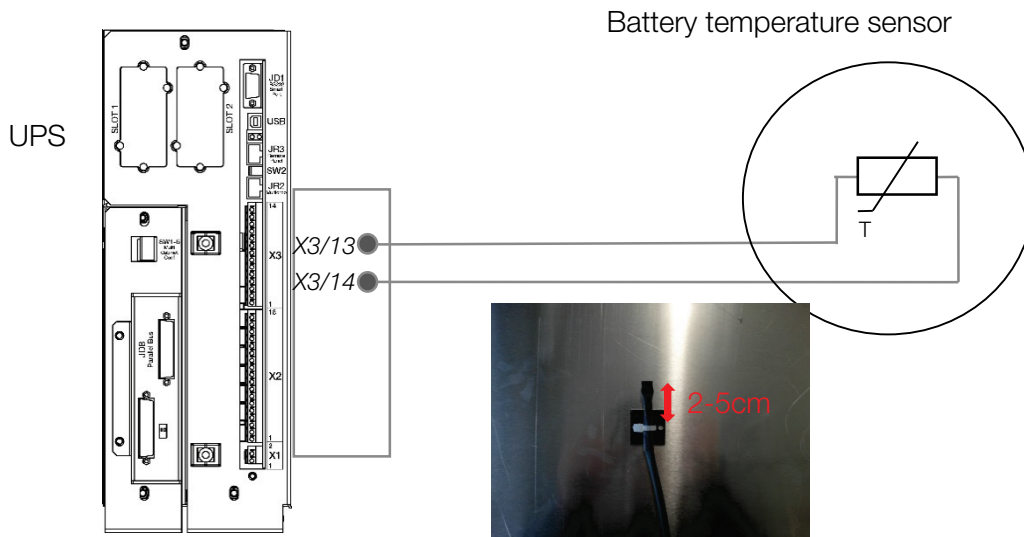

THE BATTERY TEMPERATURE PROBE IS A CLASS 2 DEVICE (SELV CIRCUITS). PLEASE ROUTE THE CABLE TO MAINTAIN A MINIMUM OF 6MM FROM PRIMARY CIRCUITS.

WARNING!



ONLY THE OPTIONAL BATTERY SENSOR FROM ABB IS COMPATIBLE

THE ADHESIVE OF THE BATTERY SENSOR IS SUITABLE FOR USE ON ALUMINUM, STAINLESS STEEL AND ENAMELED STEEL ONLY

THE EQUIPMENT IS PROVIDED WITHOUT INPUT AND OUTPUT BREAKERS, A READILY ACCESSIBLE DISCONNECT DEVICE SHALL BE INCORPORATED EXTERNAL TO THE EQUIPMENT.


NOTE

11.1.5 Synchronization kit

This option allows to synchronize the output voltage from two or more UPS systems. The system is provided with 3 x different synchronization possibilities by which on each solution a special FIRMWARE has to be installed:


1. With dedicated synchronization cables which allows to synchronize up to 3 x different cabinets or groups of cabinet together in a maximum distance of 100m. The needed cable has to be ordered separately.

Example of installation method 1

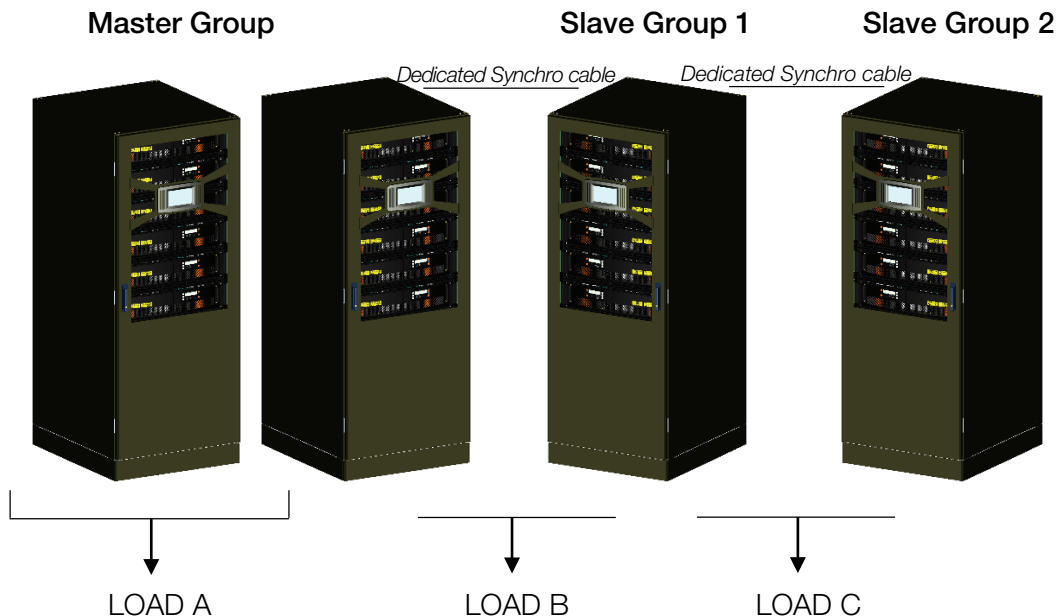


2. Without dedicated cables but the customer have to provide a twisted cable of $2 \times 0.2\text{mm}^2 - 1.5\text{mm}^2$. This solution offers the possibility to synchronize the output of a CP120 slave group to the output of the master

Example of installation method 2

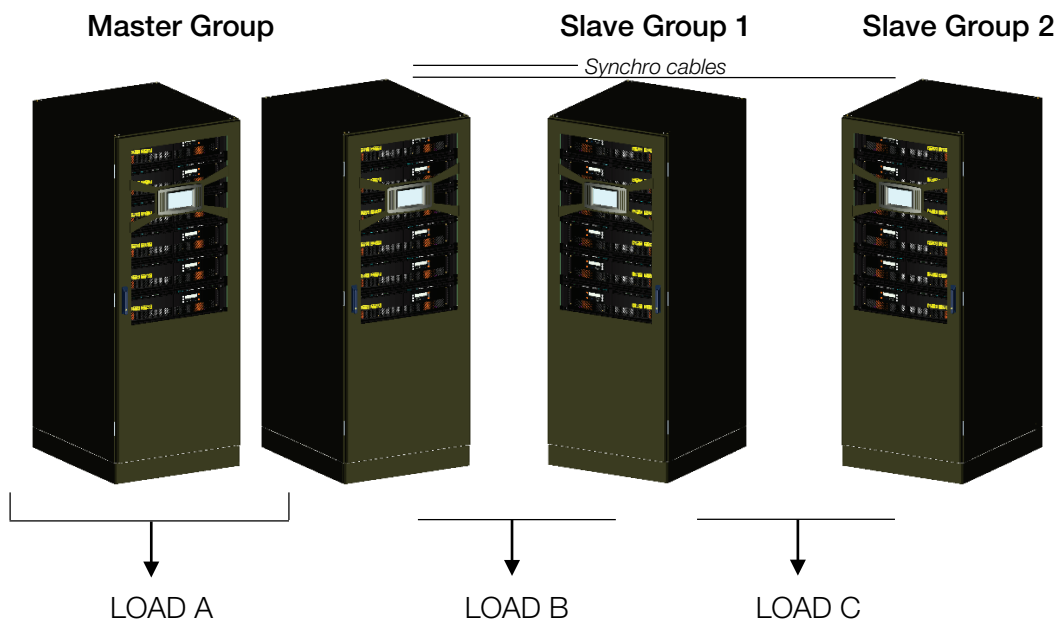

- Based on method 2, the system is also able to synchronize the outputs to whichever grid with voltages within the range of 208V to 480V (both phase to phase and phase to neutral configuration are possible)

Example of installation

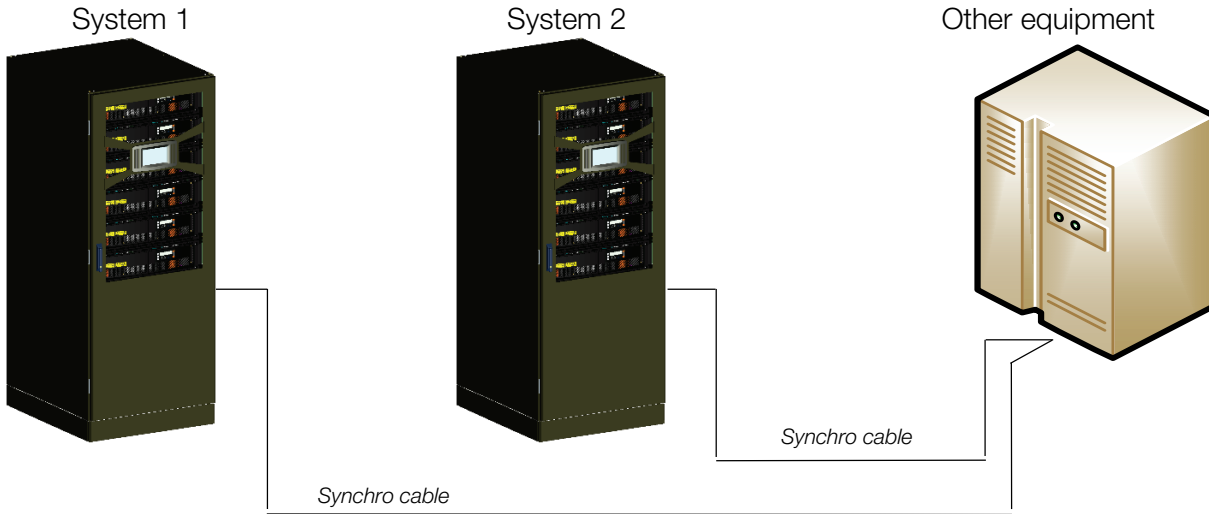


11.1.6 Synchronization kit method 1

This procedure describes the sequence of operations to be done in order to install the synchronization kit. The kit contains the following items:

- Synchronization cable
- Installation manual

1. Make sure that the UPS system is equipped with the correct Synchro kit firmware version
2. Set all the modules as **“Master group”** by means of the control panel (Set-UP service -> UPS model)
3. Check the functionality of each individual UPS system following the commissioning procedure (chapter 10.1)
4. Turn off all the modules following the shut down procedure (chapter 10.2)
5. Connect the Synchro cable between the UPS system as shown in the following illustration:

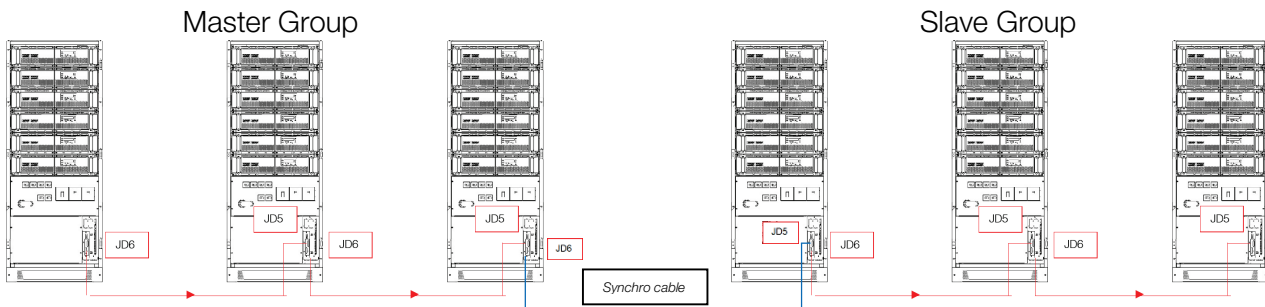


6. Set all the modules in the slave groups as **“Slave group”** by means of the control panel
7. Start up the “Master Group” following the commissioning procedure (chapter 10.1)
8. Start up all the “Slave Group” following the commissioning procedure (chapter 10.1)

9. Check the output phase synchronization measuring the voltage across the phase of each groups as described below:
 - Verify that the voltage between output L1 of the **“Master group”** and output L1 of all the **“Slave group”** is less than **5Vac**.
 - Verify that the voltage between output L2 of the **“Master group”** and output L2 of all the **“Slave group”** is less than **5Vac**.
 - Verify that the voltage between output L1 of the **“Master group”** and output L1 of all the **“Slave group”** is less than **5Vac**.

11.1.7 Synchronization kit method 2

This procedure describes the sequence of operations to be done in order to synchronize the outputs among different UPSs groups.

1. Make sure that the UPS system is equipped with the correct Synchro kit firmware version
2. Set all the modules as **“Master group”** by means of the control panel (Set-UP service -> UPS model)
3. Check the functionality of each individual UPS system following the commissioning procedure (chapter 10.1)
4. Turn off all the modules following the shut down procedure (chapter 10.2)
5. Using a twisted cable of $2 \times 0.2\text{mm}^2 - 1.5\text{mm}^2$ and a 1A fuse connect the output phase L1 and N of the master group to the input terminals X3 of the slaves as shown in the below illustration:

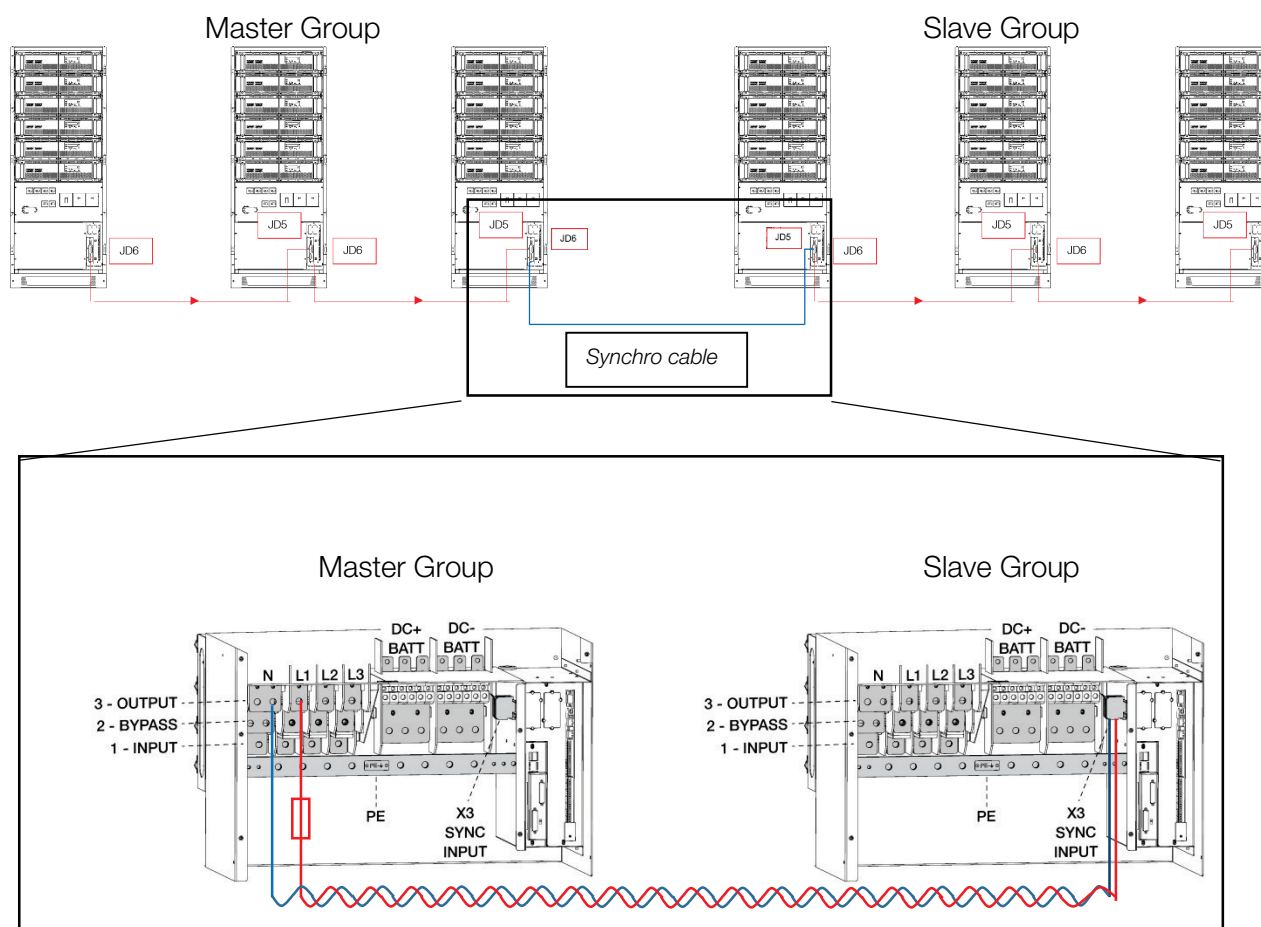



THE TWISTED CABLE OF $2 \times 0.2\text{mm}^2 - 1.5\text{mm}^2$ IS NOT PROVIDED IN THE KIT.

INSTALLATION SHALL COMPLY WITH THE *NATIONAL ELECTRICAL CODE*, ANSI/NFPA 70 AND THE *CANADIAN ELECTRICAL CODE, PART I, C22.1*


NOTE

6. Set all the modules in the slave system as “**Slave group**” by means of the control panel
7. Start up the “Master Group” following the commissioning procedure (chapter 10.1)
8. Start up all the “Slave Group” following the commissioning procedure (chapter 10.1)
9. Check the output phase synchronization measuring the voltage across the phase of each groups as described below:
 - Verify that the voltage between output L1 of the “**Master group**” and output L1 of all the “**Slave group**” is less than **5Vac**.
 - Verify that the voltage between output L2 of the “**Master group**” and output L2 of all the “**Slave group**” is less than **5Vac**.
 - Verify that the voltage between output L1 of the “**Master group**” and output L1 of all the “**Slave group**” is less than **5Vac**.

11.1.8 Synchronization kit method 3

This procedure describes the sequence of operations to be done in order to synchronize the outputs of different UPSs groups to whichever grid.

1. Make sure that the UPS system is equipped with the correct Synchro kit firmware version
2. Set all the modules as **“Master group”** by means of the control panel (Set-UP service -> UPS model)
3. Check the functionality of each individual UPS system following the commissioning procedure (chapter 10.1)
4. Turn off all the modules following the shut down procedure (chapter 10.2)
5. Using a twisted cable of $2 \times 0.2\text{mm}^2 - 1.5\text{mm}^2$ and a 1A fuse connect the phase L1 and N of the grid to synchronize with the input terminals X3 of the UPS systems as shown in the below illustration:

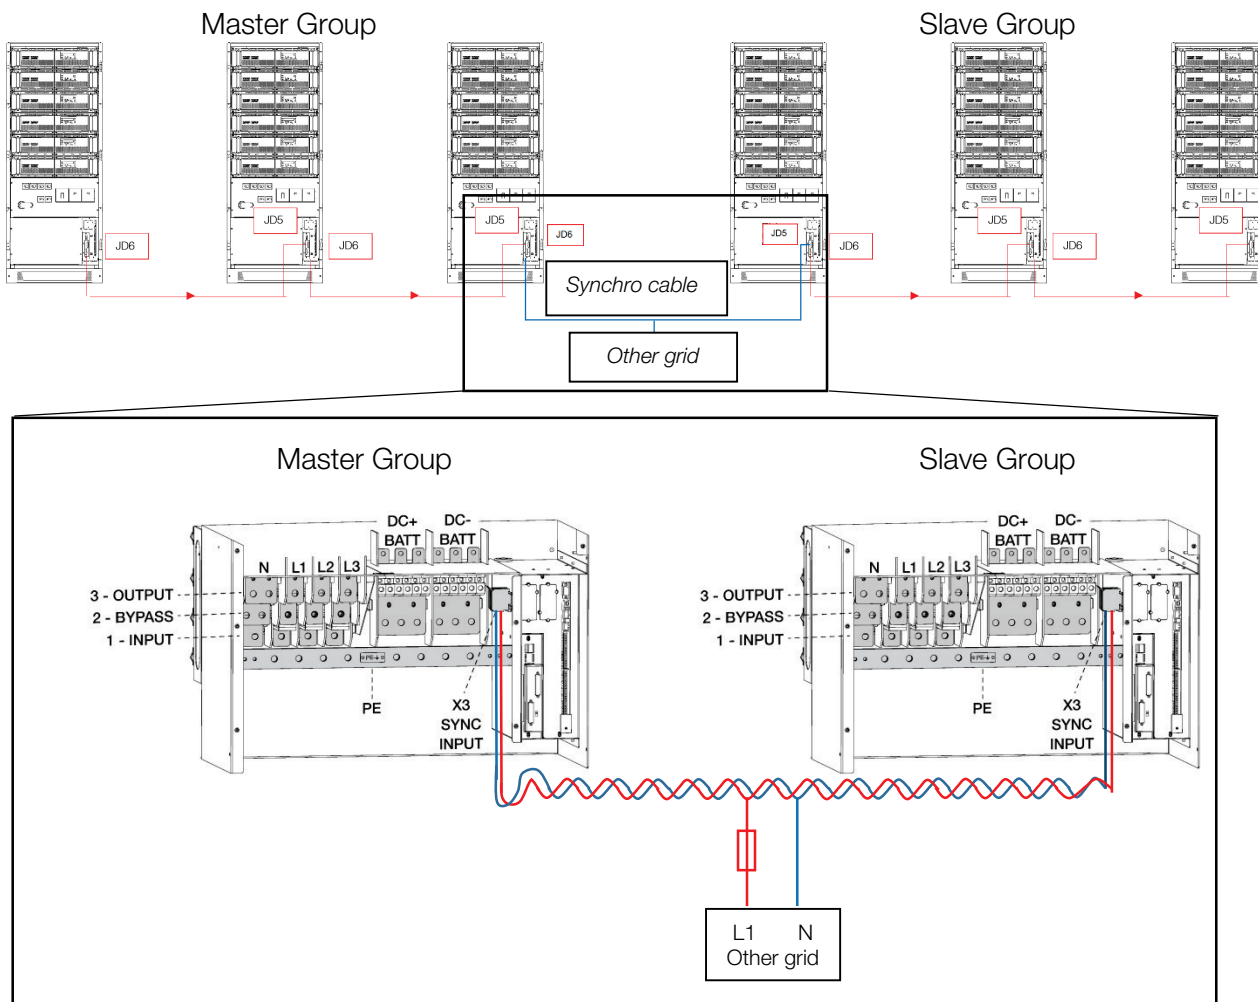



THE TWISTED CABLE OF 2 x 0.2mm² – 1.5mm² IS NOT PROVIDED IN THE KIT.

INSTALLATION SHALL COMPLY WITH THE *NATIONAL ELECTRICAL CODE*, ANSI/NFPA 70 AND THE *CANADIAN ELECTRICAL CODE, PART I, C22.1*

NOTE

6. Set all the modules in the slave system as “**Slave group**” by means of the control panel
7. Start up the “Master Group” following the commissioning procedure (chapter 10.1)
8. Start up all the “Slave Group” following the commissioning procedure (chapter 10.1)
9. Check the output phase synchronization measuring the voltage across the phase of each groups as described below:
 - Verify that the voltage between output L1 of the “**Master group**” and output L1 of all the “**Slave group**” is less than **5Vac**.
 - Verify that the voltage between output L2 of the “**Master group**” and output L2 of all the “**Slave group**” is less than **5Vac**.
 - Verify that the voltage between output L1 of the “**Master group**” and output L1 of all the “**Slave group**” is less than **5Vac**.

12 Revision History

| Revision number | Chapter | Description | Date |
|-----------------|---------|--|-------------|
| A | N/A | First release | 04.03.2016 |
| B | All | In the entire manual we have separated the two units (CP120/240 UL). Now we have a dedicated manual per model | 06.04.2016 |
| | 2.2 | Corrected the dimension values of the unit | 06.04.20016 |
| | 3 | Corrected the dimension and weight values of the unit | 06.04.2016 |
| | 3.2 | Corrected the dimension and weight values of the unit | 06.04.2016 |
| | 3.3.2 | Corrected the Battery Circuit Breaker reference from F4 to F3 | 06.04.2016 |
| | 8.5.1 | Corrected the fuse reference in F3 on the picture, and switch the picture with the correct one of the single input feed. | 06.04.2016 |
| | 8.5.2 | Corrected the fuse reference in F3 on the picture, and switch the picture with the correct one of the dual input feed. | 06.04.2016 |
| | 8.5.3.2 | Added the Cable sections & fuse ratings for the dual input feed configuration | 06.04.2016 |

13 Attachments

13.1 Technical data sheet

Contact us

www.abb.com/ups
ric.sales@us.abb.com


© Copyright ABB. All rights reserved.
Specification subjects to change without notice.



Technical data sheet

Conceptpower DPA 120 UL

208V 20 – 120kW

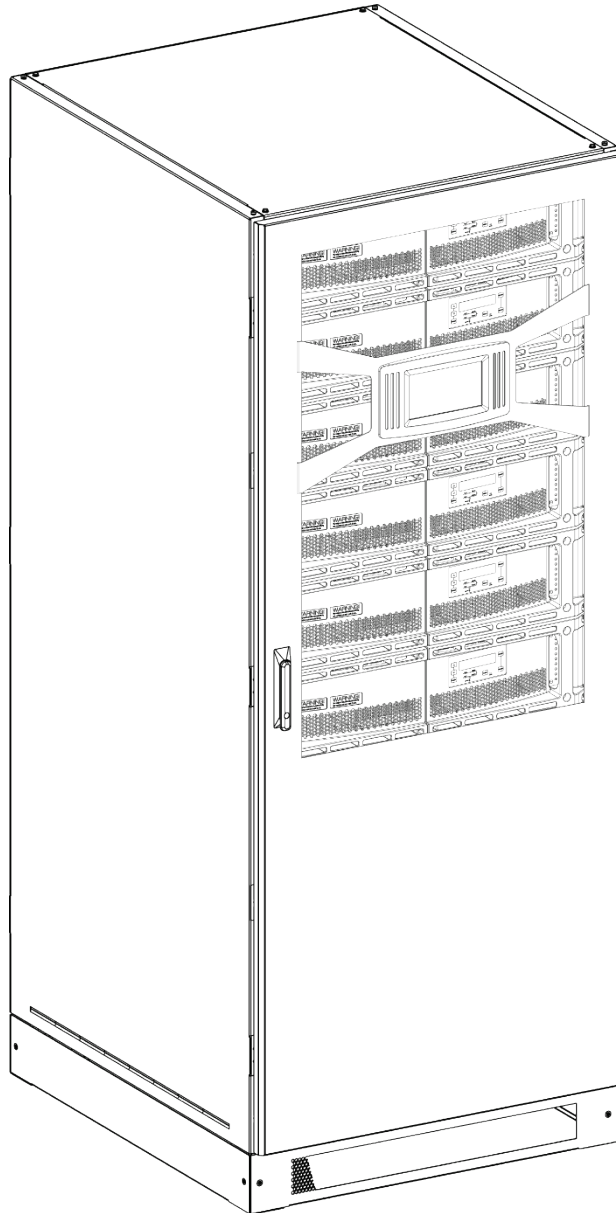

Document information

File name : TDS_ABB_CP_DPA_120_UL_REV-A.docx
UPS model : Conceptpower DPA 120 UL
Date of issue : 11.04.2016
Article number : N/A
Document number : 4NWD003251
Revision : A

Revision history

| Revision number | Chapter | Description | Date |
|-----------------|---------|----------------|------------|
| A | N/A | First release. | 11.04.2016 |

Contents

| | | |
|-----------|---|-----------|
| 1 | System description | 4 |
| 1.1 | True modularity up to 600 kW | 4 |
| 1.2 | True parallel architecture..... | 4 |
| 1.3 | Key Features of Conceptpower DPA 120 UL UPS..... | 4 |
| 2 | General characteristics..... | 5 |
| 3 | Input characteristics | 7 |
| 4 | Output characteristics | 8 |
| 5 | Battery characteristics..... | 9 |
| 6 | User interface - Communication..... | 10 |
| 6.1 | System graphical display | 10 |
| 6.2 | DPA module display | 11 |
| 6.3 | Mimic Diagram | 11 |
| 7 | Customer interfaces..... | 11 |
| 7.1 | Customer inputs dry ports: Terminal blocks X3 / 3-14..... | 11 |
| 7.2 | Outputs dry ports: Terminal blocks X2 + X3 / 1-2..... | 11 |
| 7.3 | Interlock castell function: Terminal block X1 | 11 |
| 8 | Options | 13 |
| 9 | UPS location..... | 14 |
| 10 | Heat dissipation per module with nonlinear load | 15 |
| 11 | Single input feed and separate batteries configuration | 16 |
| 11.1 | Block diagram | 16 |
| 11.2 | Cable sections & fuse ratings | 16 |
| 12 | Dual input feed and common battery configuration..... | 17 |
| 12.1 | Block diagram | 17 |
| 12.2 | Cable sections & fuse ratings | 17 |

1 System description

ABB's Conceptpower DPA 120 UL UPS is a high-power, modular and transformer-less UPS system for organizations who need to maximize uptime. The UPS is built using true online double conversion technology and provides low cost of ownership.

1.1 True modularity up to 600 kW

Now you can have a UPS sized to exactly fit your needs: the Conceptpower DPA 120 UL UPS is the only modular UPS on the market that can easily be scaled up to 600kW of clean, reliable power. This scalability means that there is no need to over-specify the original configuration as power modules can simply be added, as needed, in the future

1.2 True parallel architecture

Reliability and availability are ensured by the Conceptpower DPA 120 UL UPS's proven Decentralized Parallel Architecture (DPA™). Each module contains all the hardware and software required for full system operation, they share no common components. Each UPS module has its own independent static bypass, rectifier, inverter, logic control, control panel, battery charger and batteries. With all the critical components duplicated and distributed between individual units, potential single points of failure are eliminated.

1.3 Key Features of Conceptpower DPA 120 UL UPS

- 20 kW rated power module
- 120 kW rated power in single frame
- Extended power range: from 20 kW to 600 kW
- Unity output power factor (kVA = kW)
- Double conversion efficiency up to 94.0 %
- Efficiency in eco-mode \geq 98 %
- Online Swap Modularity (OSM)
- Online serviceability
- Built-in back-feed protection (standard)
- Graphical display on system level
- DPA displays in each module


This technical datasheet (TDS) provides all technical specification required by IEC 62040-3 and ANSI/UL 1778 5th Ed., providing mechanical, electrical and environmental characteristics. It can be used for tendering and end-user requirements. CONCEPTPOWER DPA 120 UL UPS is designed to respond to the actual UPS standards.

2 General characteristics

Frame

Conceptpower DPA 120 UL

Conceptpower DPA 120 UL - Frame

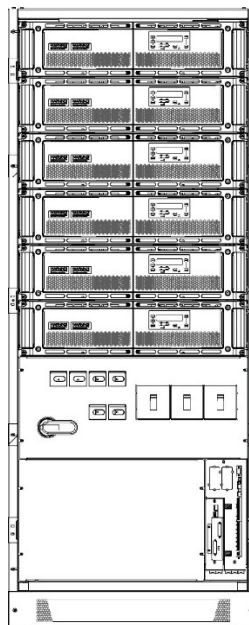

Power, rated:

- Apparent *kVA* 120

- Active *kW* 120

Power, range *kW* 20 - 600

UPS type: On-line, transformer-less, modular, decentralized parallel architecture

Parallel capability: Up to 5 frames

Battery: Not included

Performance classification: VFI-SS-111

Mechanical

Dimensions (width × height × depth) *mm* 791 x 1975 x 923

Mass, approx. (120kW system, with 6 modules) *kg* 665

Acoustic noise (acc. to IEC 62040-3)¹:

- In normal mode (at ≤25°C)
at 100% / 50% Load *dBA* Available later

- In battery mode (at ≤25°C)
at 100% / 50% Load *dBA* Available later

Safety

Access: operator/restricted

Degree of protection against hazards and water ingress: NEMA 1 / IP 20

Electromagnetic compatibility

Compliant:

- Emission UPS Cat / Immunity UPS Cat C3 / C3

Environmental

| | | |
|--|----|-----------|
| Storage temperature range | °C | -25 - +70 |
| Operative temperature range | °C | 0 - +40 |
| Relative humidity range (non-condensing) | % | ≤ 95 |
| Max. altitude without de-rating | m | 1000 |

Additional and usual information

Connection: 5 wires, 3 phase + N + PE

Cable entry: Bottom

Accessibility: Frontal only


Color: Powder coat MIDNIGHT BLACK Wrinkle

Color code: Rohm & Haas #12-7001

Module

Conceptpower DPA 120 UL

Conceptpower DPA 120 UL - UPS

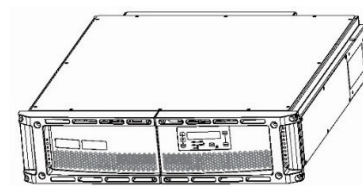

Power, rated:

| | | |
|------------|-----|----|
| - Apparent | kVA | 20 |
| - Active | kW | 20 |

UPS type: On-line, transformer-less, modular, decentralized parallel architecture

Parallel capability: Up to 6 frames

Battery: Not included

Performance classification: VFI-SS-111

Mechanical

| | | |
|-------------------------------------|----|-------------|
| Dimensions (width × height × depth) | mm | 710x178x750 |
| Mass, approx. | kg | 60 |

Additional and usual information

Back feed protection: Included

Color: (RAL 9005)

3 Input characteristics

| Type | | Frame | Module |
|---|-----|---|--------|
| Power, rated | kW | 120 | 20 |
| Voltage (steady-state, r.m.s), rated: | VAC | 3 x 208 / 120V + N | |
| - Tolerance, referred to 208/120V (booster off) | % | -15% / +10% | |
| - Operative ranges, referred to 208/120V (booster on) | % | -15 / + 10 at <100% load -20 / + 10 at <80% load, -30 / + 10 at <60% load | |
| Frequency, rated: | Hz | 50/60 | |
| - Tolerance, referred to 50Hz | % | -30 / +40 | |
| Current (r.m.s), rated (with battery charged and input 208/120V): | A | 360 | 60 |
| - Maximum (with battery charging and input 208/120V) | A | 363 | 61 |
| Total harmonic distortion (THDi) ¹⁾ | % | 4 | |
| In-rush current | % | < 100% of rated current | |
| Power factor | | 0.99 @ 100% load | |
| Rated short-time withstand current (I _{cw}) | kA | 5 | NA |
| AC power distribution system: TN-S, TN-C, TN-C-S, TT | | | |
| Note: in static bypass mode or eco-mode TN-C and TN-C-S can cause PE current to rise above 5% of phase currents | | | |
| Phases required | | 3 | |
| Neutral required | | Yes | |

¹⁾ Measured with MAIN THDu < 3% @ full load and rated input output voltage; ±0.3 tolerance may apply

Additional and usual information

Connection: 5 wires, 3 phase + N + PE

Cable entry: Bottom

Accessibility: Frontal only

Walk In/Soft start: Yes

Back feed protection: Yes

4 Output characteristics

| Type | | Frame | Module |
|--|-------------|--|------------|
| Power, rated | <i>kW</i> | 120 | 20 |
| AC power distribution system: TN-S, TN-C, TN-C-S, TT | | | |
| Available phases | | 3 | |
| Neutral available | | yes | |
| Voltage (steady state, r.m.s.), rated | <i>VAC</i> | 3 x 208 / 120V + N | |
| Variation in normal mode | % | ± 2.5 | |
| Total harmonic distortion (THDu), 100% load, normal mode: | | | |
| - Linear | % | < 2.0 | |
| - Non-linear | % | < 4.0 | |
| (according to IEC 62040-3) | | | |
| Total harmonic distortion, 100 % load, battery mode: | | | |
| - Linear | % | < 2.0 | |
| - Non-linear | % | < 4.0 | |
| (according to IEC 62040-3) | | | |
| Voltage unbalance and phase displacement, 100 % load unbalance | ° | 0 | |
| Voltage transient and recovery time, 100% step load: | | | |
| - Linear | % | ± 4 | |
| - Non-linear | % | ± 4 | |
| (according to IEC 62040-3) | | | |
| Transfer normal mode --> battery mode | % | 0 | |
| Frequency (steady-state), rated: | <i>Hz</i> | 50/60 | |
| - Variation in normal mode (frq. Synchronized with mains) | % | ± 2 / ± 4 | |
| - Variation in battery mode (free-running) | % | ± 0.1 | |
| Max synch phase error (referred to a 360° cycle) | ° | <2 | |
| Max slew-rate | <i>Hz/s</i> | 1 | |
| Nominal current (In), r.m.s. rated | <i>A</i> | 333 | 56 |
| Overload on inverter | <i>min</i> | 0.5 @ 150% load, 5 @ 125% load, 20 @ 110% load | |
| Fault clearing capability normal mode and battery mode for 100ms | <i>A</i> | 1008 (3xIn) | 168 (3xIn) |
| Load power factor, rated | | 1 | |
| Displacement (permissible lead-lag range) | %, s | (all range) 0 | |

Double conversion efficiency with linear load:

| | | |
|-------------|---|--------------------|
| - 100% load | % | 93.5 ¹⁾ |
| - 75% load | % | 93.9 ¹⁾ |
| - 50% load | % | 94.0 ¹⁾ |
| - 25% load | % | 93.0 ¹⁾ |

Eco-mode efficiency with linear load % ≥ 98

Crest – Factor (Load supported) 3:1

¹⁾ Tolerance of +/- 0,2% may apply

Static bypass

Type: Automatic, static switch in each module

Transfer times:

| | | |
|---------------------|-----------|----|
| - inverter → bypass | <i>ms</i> | <1 |
| - bypass → inverter | | <5 |
| - in eco-mode | | <6 |

Rated current A 333 56

Fault clearing capability (bypass mode) for 20 ms A 10xIn 10xIn

Overload current on bypass mode (< 25°C) *min* continuously @ 110% load

Maintenance bypass: optional on the frame

Bypass protection fuse or circuit breaker rating A, *gL* 3x70
fuse

5 Battery characteristics


| | | |
|---|------------|--|
| Technology | | VRLA, vented lead-acid, NiCd |
| Number of 12 V blocks | | 25 - 35 |
| Number of 1.2 V NiCd cells | | 250 - 350 |
| Battery charger | | Decentralized, each module has its own charger |
| Max. current charger capability | A | 24 |
| Max. power charger capability | <i>kW</i> | 12 |
| Floating voltage (VRLA / NiCd) | <i>VDC</i> | 2.25 / 1.40 |
| End of discharge voltage (VRLA / NiCd) | | 1.65 / 1.05 |
| R.m.s. ripple current (percentage of the battery capacity) | % | 2 |
| Temperature compensation | | Optional |
| Battery test | | Automatic and periodic battery test (selectable) |

6 User interface - Communication

| | |
|---|--|
| System Display | 7" touchscreen display (one per frame) |
| DPA display (or module display) | 2 x 20 character LCD display (one per module) |
| MIMIC diagram | LED-indicator, 5x green/red LEDS (one per module) |
| RS232 on Sub-D9 port RS232 on USB port | For monitoring and integration in network management |
| Customer Interfaces Inputs DRY PORT | 1 Remote Shut down [EMERGENCY OFF (Normally closed)] 1 GEN-ON (Normally open) 1 Programmable Customer's Inputs (Normally open) 1 Temp. Sensor for Battery Control |
| Customer Interfaces Outputs DRY PORT | 6 voltage free contacts For remote signaling and automatic computer shutdown |
| RS485 on RJ45 port [OPTIONAL] | Remote monitoring system with remote panel (graphical display) |
| RS485 on RJ45 port [OPTIONAL] | For multi-drop purpose |
| Slot for SNMP [OPTIONAL] | SNMP card For monitoring and integration in network management |

6.1 System graphical display

The user-friendly touchscreen graphical display on the system level offers the opportunity to directly monitor the system status as well as the status of each individual module. The graphical display additionally provides all measurements (at module and system level) and the user can transfer from the inverter to bypass and vice-versa. All other commands must be performed on the DPA display. With both displays in place (module and system level), the UPS offers full user friendliness without making compromises on robustness.

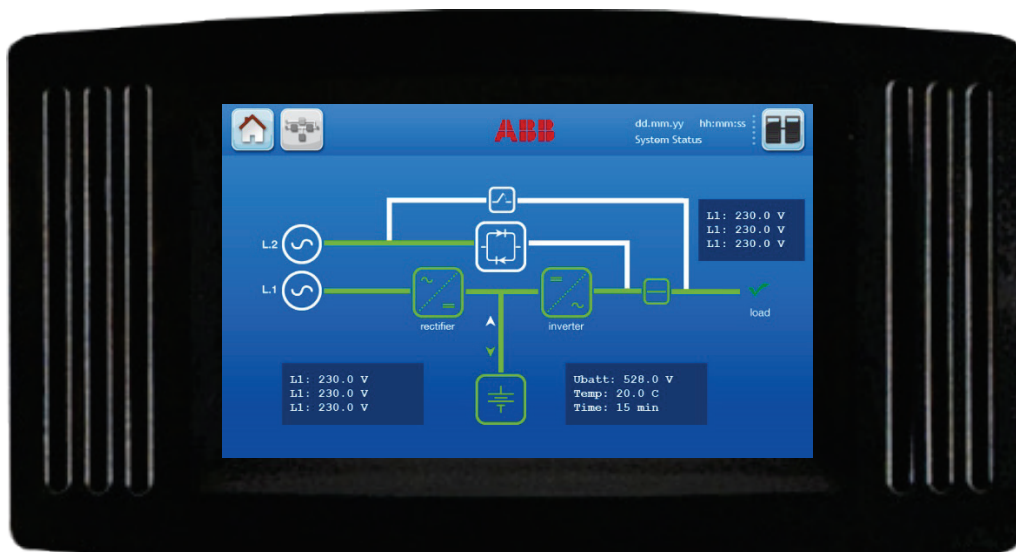


6.2 DPA module display

The 2 x 20 character LCD simplifies the communication with the UPS. The menu driven LCD enables the access to the EVENT REGISTER, or to monitor the input and output U, I, f, P, Autonomy Time and other Measurement's, to perform commands like start-up and shut-down of INVERTER or load transfer from INVERTER to BYPASS and vice-versa and finally it serves for the DIAGNOSIS (SERVICE MODE) for adjustments and testing (for more details see the USER MANUAL).

6.3 Mimic Diagram

The mimic diagram serves to give the general status of the UPS. The LED-indicators show the power flow status and in the event of mains failure or load transfer from inverter to bypass and vice-versa the corresponding LED-indicators will change colour from green (normal) to red (warning). The LED's LINE 1 (rectifier) and LINE 2 (bypass) indicate the availability of the mains power supply. The LED's INVERTER and BYPASS if green indicate which of the two are supplying power to the critical load. When the LED-indicator BATTERY is lit it means that the battery due to mains failure is supplying the load. The LED-indicator ALARM is a visual indication of any internal or external alarm condition. At the same time the audible alarm will be activated.

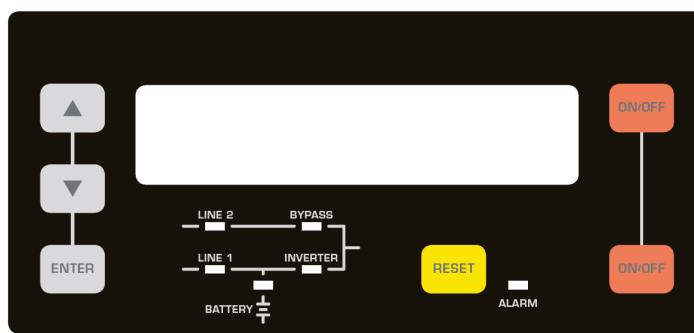

7 Customer interfaces

7.1 Customer inputs dry ports: Terminal blocks X3 / 3-14

Connection of Remote Shut down facilities, Generator Operation, Customers specials (*refer to the user manual*).

7.2 Outputs dry ports: Terminal blocks X2 + X3 / 1-2

Provision of signals for the automatic and orderly shutdown of servers, AS400 or Automation building systems

7.3 Interlock castell function: Terminal block X1







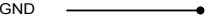

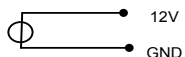
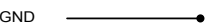

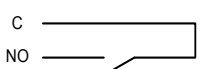
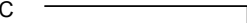





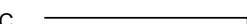
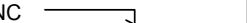
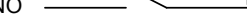





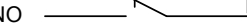
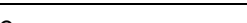

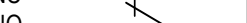
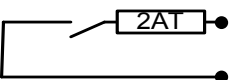
This function allows a secure transfer from inverter (normal operation) to external maintenance bypass and vice-versa. During normal operation the external bypass is locked in position OFF. Only when the UPS is/are transferred to static bypass mode, the lock on the external bypass is released and it possible to switch to position ON. The transfer from maintenance bypass back to normal operation happens exactly the other way around. The release signal is a closed contact when the maintenance bypass is free and an open contact when locked.

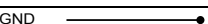All Terminals X1-X3 can hold Cable from AWG 24 to AWG 15.

X1 is a dry contact for monitoring an external output switch and can be used as interlock function.

All X2 are potential free contacts and are rated: 30Vdc/2A; 60Vdc/0.7A

All X3 (except X3 5/6 which is a 12VDC source) are inputs, cable max. R 50Ω at 20mA
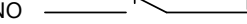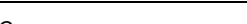
| Block | Terminal | Contact | Signal | On Display | Function |
|-------|----------|--|---------|---------------------------------------|---|
| X3 | X3 / 14 | GND  | GND | - | Battery Temperature |
| | X3 / 13 | IN  | +3.3VDC | - | (only the optional battery sensor from ABB is compatible) |
| | X3 / 12 | GND  | GND | GENERATOR_ OPER_ON | Generator Operation (N.O.) Min. contact load 12V / 1mA |
| | X3 / 11 | IN  | +12Vdc | | |
| | X3 / 10 | GND  | GND | PARRALEL_SW_OPEN PARRALEL_SW_CLOSE | External Output Breaker (N.O.) Min. contact load 12V / 20mA. |
| | X3 / 9 | IN  | +12Vdc | | |
| | X3 / 8 | GND  | GND | EXT_MAN_BYP | External Manual Bypass (Ext. IA1) (N.O.) Min. contact load 20mA |
| | X3 / 7 | IN  | +12Vdc | | |
| | X3 / 6 |  | +12Vdc | - | + 12 VDC source (UPS protected) (Max. 200mA) |
| | X3 / 5 | | GND | - | |
| | X3 / 4 | GND  | GND | REMOTE_SHUTDOWN- | RSD (Remote Shut down) Default setting: disabled. Possibility to enable and set NO or NC via NewSet. |
| | X3 / 3 | IN  | +12Vdc | | |
| | X3 / 2 |  | - | REMOTE_SHUTDOWN- | RSD (Remote Shut down) for external switch Max. 250Vac/8A ;30Vdc/8A ;110Vdc/0.3A ;220Vdc/0.12A |
| | X3 / 1 | | - | | |
| X2 | X2 / 18 | C  | - | - | Common |
| | X2 / 17 | NC  | - | - | Relais AUX (function on request, to be defined) |
| | X2 / 16 | NO  | - | - | |
| | X2 / 15 | C  | | COMMON_ALARM | Common |
| | X2 / 14 | NC  | ALARM | | No Alarm Condition |
| | X2 / 13 | NO  | | | Common Alarm (System) |
| | X2 / 12 | C  | | LOAD_ON_MAINS | Common |
| | X2 / 11 | NC  | Message | | No Load on Bypass |
| | X2 / 10 | NO  | | | Load On Bypass (Mains) |
| | X2 / 9 | C  | | BATT_LOW | Common |
| | X2 / 8 | NC  | ALARM | | Battery Ok |
| | X2 / 7 | NO  | | | Battery Low |
| | X2 / 6 | C  | | LOAD_ON_INV | Common |
| | X2 / 5 | NC  | Message | | No Load on Inverter |
| | X2 / 4 | NO  | | | Load on Inverter |
| | X2 / 3 | C  | | MAINS_OK | Common |
| | X2 / 2 | NC  | ALARM | | Mains Failure |
| | X2 / 1 | NO  | | | Mains Present |
| X1 | X1 / 2 |  | - | EXT_MAN_BYP | Interlock Function Max. 30Vdc/2A; 60Vdc/0.7A (Ext Manual Bypass) / 2AT |
| | X1 / 1 | | - | | |

Phoenix Spring Terminals (X1...X2) Connection

8 Options

| ARTICLE | DESCRIPTION | DETAIL |
|---|--|--|
| PRODUCT OPTIONS OR FEATURES – MODULE | | |
| 4NWP101921R0001 | Cold start DPA Module UL | Available for 20kW and 40kW modules |
| 4NWP102254R0001 | Sync Feature CP DPA 120-240 mod. - SP102 | Available for 20kW and 40kW modules |
| PRODUCT OPTIONS OR FEATURES – ELECTRONICS & SOFTWARE | | |
| 00-2907 | Parallel adapter | For 1 UPS frame. |
| 04-3630 | Parallel Cable Kit 5m | Includes multidrop cable. |
| 04-3631 | Parallel Cable Kit 10m | Includes multidrop cable. |
| 04-3632 | Parallel Cable Kit 15m | Includes multidrop cable. |
| 04-3633 | Parallel Cable Kit 20m | Includes multidrop cable. |
| 04-3634 | Parallel Cable Kit 25m | Includes multidrop cable. |
| 4NWP101937R0001 | Maintenance Bypass Switch | 3-phase switch, rated 400A 600VAC. Factory mounted only. |
| 4NWP101929R0001 | Battery Breaker for CP DPA 120UL | Factory mounted only. |
| 4NWP101946R0001 | Transient Voltage Surge Suppressor 120V | Factory mounted only. |
| PRODUCT OPTIONS OR FEATURES – EXTERNAL BATTERIES | | |
| 00-3563 | Temperature probe for batteries | Cable length 1.3m. |
| PACKAGING | | |
| 4NWP100585R0001 | Carton box for 1 module of 710x178x750mm | Only needed if modules are shipped outside the racks. Stackable up to 2. |
| 4NWP101978R0001 | Sea freight case CP DPA 120-240 UL | |
| DOCUMENTATION | | |
| 00-2976 | Certificate of origin | Legalized invoice is also available. |
| 04-0160 | Duplicate of the commissioning report | |
| 04-0161 | Duplicate of archived commissioning rep. | |
| OTHER | | |
| 4NWP102309R0001 | 1y. extra warranty for 1 20-40kW module | Available for 20kW and 40kW modules |

9 UPS location

The minimum needed clearances to allow proper airflow on the UPS system and to allow proper service and maintenance shall be respected as reported below:

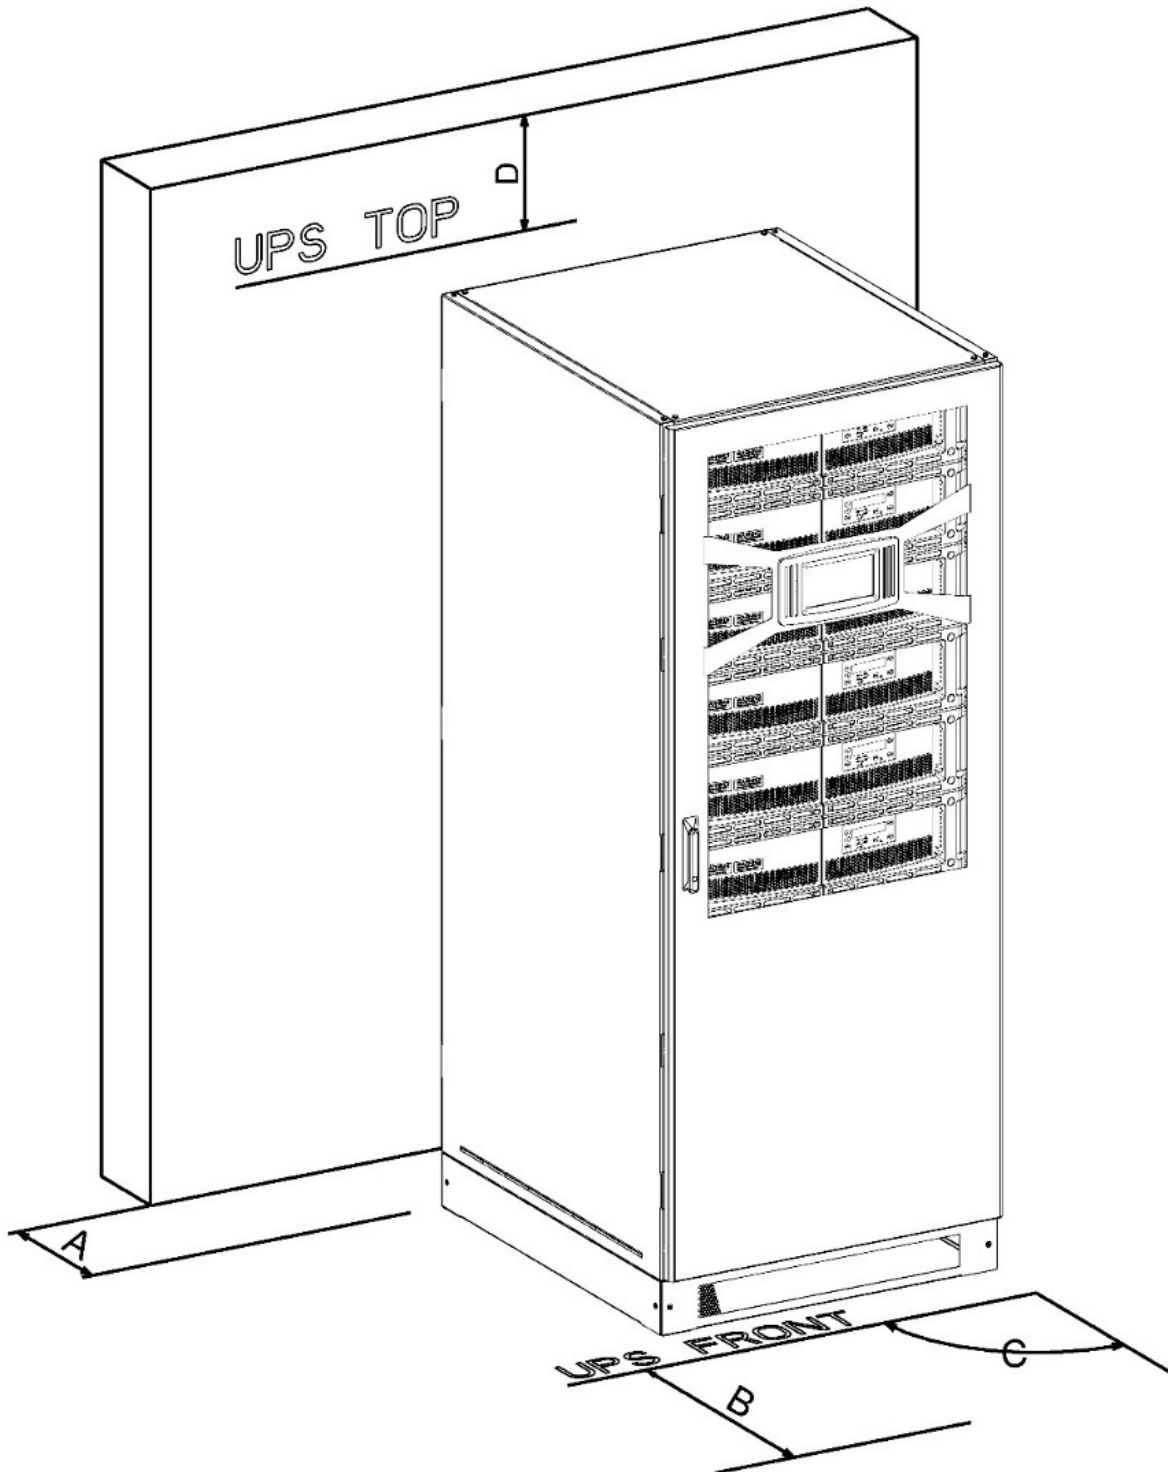


Fig. 8.3-1: UPS and battery location (Clearances)

| | | |
|---|---|---------|
| A | Back clearance for ventilation (forced air outlet) | 300 mm |
| B | Front clearance needed to allow a correct door opening | 1000 mm |
| C | Maximum door opening angle | 115° |
| D | Top Clearance (<i>Top clearance is only needed if there is no side clearance</i>) | 400 mm |


10 Heat dissipation per module with nonlinear load

| Number of modules | | 1 | 2 | 3 | 4 | 5 | 6 |
|--|------------------------|------|-------|-------|-------|-------|-------|
| UPS power rating | <i>kW</i> | 20 | 40 | 60 | 80 | 100 | 120 |
| Heat dissipation with 100% linear load | <i>W</i> | 1390 | 2780 | 4170 | 5561 | 6950 | 8340 |
| | <i>BTU</i> | 4743 | 9485 | 14229 | 18970 | 23715 | 28458 |
| Heat dissipation with 100% non-linear load (according to IEC 62040-3) | <i>W</i> | 1600 | 3200 | 4800 | 6400 | 8000 | 9600 |
| | <i>BTU</i> | 5460 | 10920 | 16380 | 21840 | 27300 | 32760 |
| Airflow (25° - 30°C) with 100% non-linear load (according to IEC 62040-3) | <i>m³/h</i> | 690 | 1380 | 2070 | 2760 | 3450 | 4140 |
| Heat dissipation without load | <i>W</i> | 200 | 400 | 600 | 800 | 1'000 | 1'200 |

11 Single input feed and separate batteries configuration

Cable sections and fuse ratings recommended. Alternatively, local standards to be respected

11.1 Block diagram

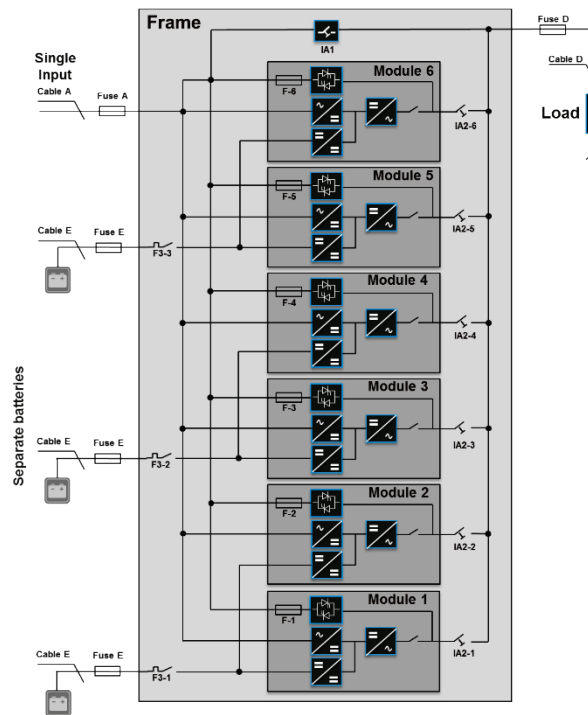

11.2 Cable sections & fuse ratings

Recommended AC wiring (copper wires) according to current normative, recommended fuse ratings for slow line fuses (gL) or circuit breakers (CB), connection terminal size and max. tightening torque.

| Rated power (kW) | Single input Max. rectifier input current with charging batt. 363A at 120V | | Output Rated output current in normal conditions 333A at 120V | |
|--|--|--|---|--------------------------------------|
| | Fuse A Type: gL or CB (quantity x A) | Cable A (quantity x Kcmils) | Fuse D Type: gL or CB (only needed in parallel system) (quantity x Kcmils) | Cable D (quantity x Kcmils) |
| 120 | 3 x 450A (3 pole, bolded N) | 3x(2x250) PH + 4x250 N ¹⁾ + 2x250 PE | 3 x 450A (3 pole, bolded N) | 3x(2x250) PH + 4x250 N + 2x250 PE |
| All connection points are bus-bar, M12. Max. tightening torque 84.8 Nm | | | | |

Recommended DC wiring (copper wires) according to current normative, recommended fuse ratings for fast acting fuses (gR) or circuit breakers (CB), connection terminal size and max. tightening torque.


| Separate batteries | | |
|--|--|-----------------------------|
| Rated power (kW) | Fuse E Type: gR or CB (quantity x A) | Cable E (quantity x AWG) |
| 20 (one module) | 3 x 125A (3 pole) | 2x(1x1) + 1x1 PE |
| All connection points are terminal blocks, Max. tightening torque 5 Nm | | |

¹⁾ Four neutral cables are required for full non-linear load operation only

12 Dual input feed and common battery configuration

Cable sections and fuse ratings recommended. Alternatively, local standards to be respected

12.1 Block diagram

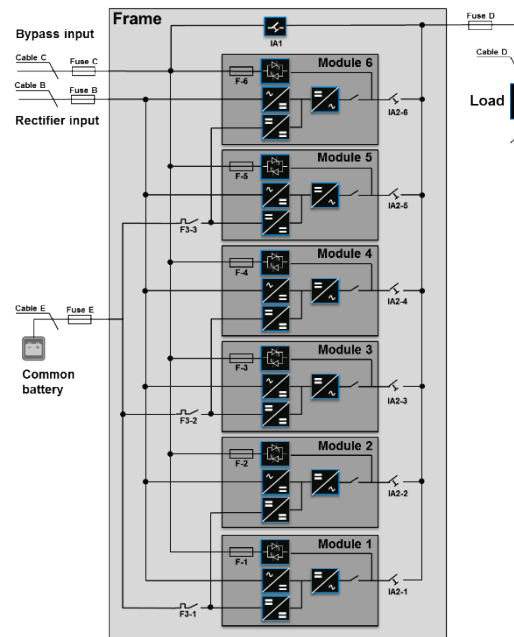

12.2 Cable sections & fuse ratings

Recommended AC wiring (copper wires) according to current normative, recommended fuse ratings for slow line fuses (gL) or circuit breakers (CB), connection terminal size and max. tightening torque.

| Rated power (kW) | Rectifier input Max. rectifier input current with battery charging 363A at 120V | | Bypass input Max. bypass input current 333A at 120V | | Output Rated output current in normal conditions 333A at 120V | |
|--|---|---|---|--------------------------------------|--|--------------------------------------|
| | Fuse B Type: gL or CB (quantity x A) | Cable B (quantity x Kcmils) | Fuse C Type: gL or CB (quantity x A) | Cable C (quantity x Kcmils) | Fuse D Type: gL or CB (only needed in parallel system) (quantity x A) | Cable D (quantity x Kcmils) |
| 120 | 3 x 450A (3 pole, bolded N) | 3x(2x250) PH + 4x250 N ¹⁾ | 3 x 450A (3 pole, bolded N) | 3x(2x250) PH + 4x250 N + 2x250 PE | 3 x 450A (3 pole, bolded N) | 3x(2x250) PH + 4x250 N + 2x250 PE |
| All connection points are bus-bar, M12. Max. tightening torque 84.8 Nm | | | | | | |

Recommended DC wiring (copper wires) according to current normative, recommended fuse ratings for fast acting fuses (gR) or circuit breakers (CB), connection terminal size and max. tightening torque.

| Common battery | | |
|--|--|--------------------------------|
| Rated power (kW) | Fuse E Type: gR or CB (quantity x A) | Cable E (quantity x Kcmils) |
| 120 | 2x630A (2 pole) | 2x(3x250) + 2x250 PE |
| All connection points are bus-bar, M12. Max. tightening torque 84.8 Nm | | |

¹⁾ Four neutral cables are required for full non-linear load operation only

Contact us

www.abb.com/ups
ric.sales@us.abb.com

© Copyright ABB. All rights reserved.
Specification subjects to change without notice.

