


TABLE A STANDARD PILOT DEVICES	TABLE B OIL-TIGHT PILOT DEVICES
<b>START-STOP</b> 	<b>START-STOP</b> 
<b>PUSHBUTTONS</b> 	<b>PUSHBUTTONS</b> 
( OMIT WIRE "B" ) <b>2 POSITION SELECTOR SWITCH</b> 	( OMIT WIRE "B" ) <b>2 POSITION SELECTOR SWITCH</b> 
( OMIT WIRE "B" ) <b>3 POSITION SELECTOR SWITCH</b> 	( OMIT WIRE "B" ) <b>3 POSITION SELECTOR SWITCH</b> 

USE 75°C COPPER CONDUCTORS ONLY, FOR FIELD WIRING.

-NOMENCLATURE-  
M-LINE CONTACTOR  
I-INDICATING LIGHT  
FU-FUSE  
X-INDICATES CONTACT CLOSED

	LINE	LOAD
TORQUE LINE AND LOAD TERMINALS AS SHOWN AT RIGHT	CR305 20 LB-IN	20 LB-IN
	CR307 AS MARKED	20 LB-IN
	CR308 35 LB-IN	20 LB-IN
	CR387 AS MARKED	20 LB-IN

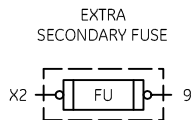


FOR CSA - GND KIT  
1/2-IN CONDUIT 55-213403G001  
3/4-IN CONDUIT 55-213403G002

NOTE: REFER TO THE NATIONAL ELECTRICAL CODE. ADDITIONAL CONTROL CIRCUIT OVER-CURRENT PROTECTION MAY BE REQUIRED.





FOR 1-PHASE OPERATION - CHANGE CONNECTION OF WIRE "A" FROM L2 TO L3. CONNECT LINE TO L1 AND L3 AND LOAD TO T1 AND T3.

FOR CONTACTOR WITHOUT DISCONNECT MEANS - WIRE LINE DIRECT TO L1, L2 AND L3 ON CONTACTOR.

FOR EXTRA AUXILIARY CONTACTS- A MAXIMUM OF 4 CONTACTS MAY BE ADDED AT POSITIONS T,U,W,X,Y & Z FOR SIZE 0 & 1 ONLY.

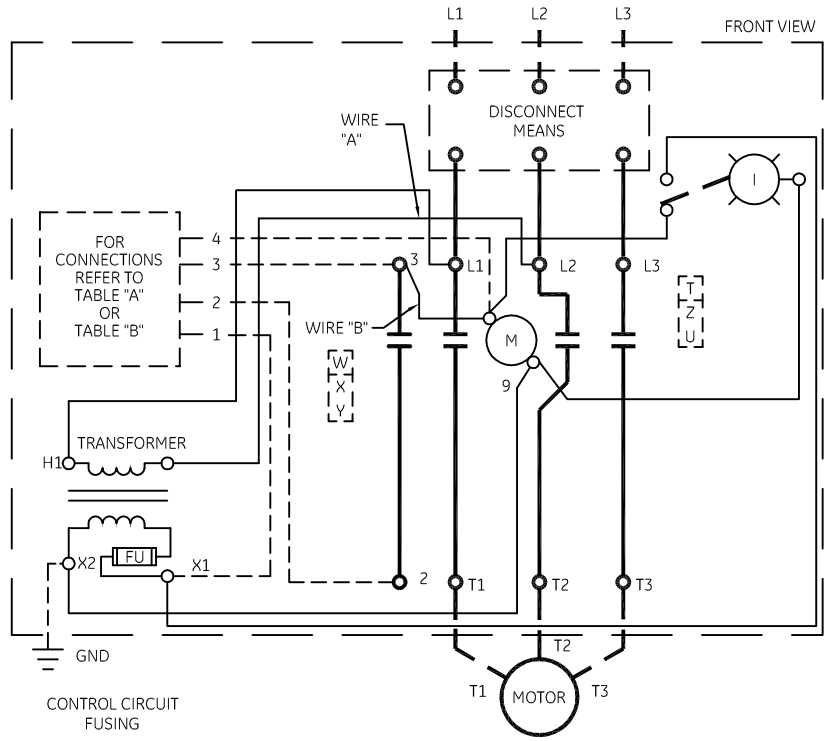

CONTROL CIRCUIT FUSING

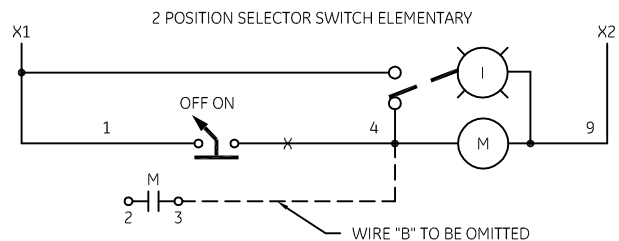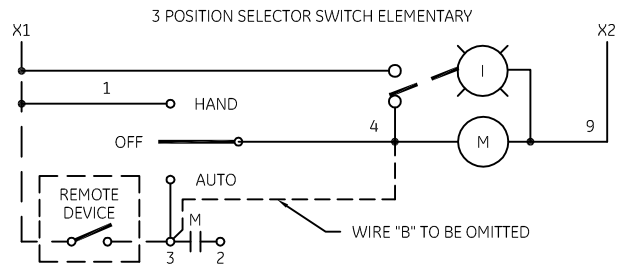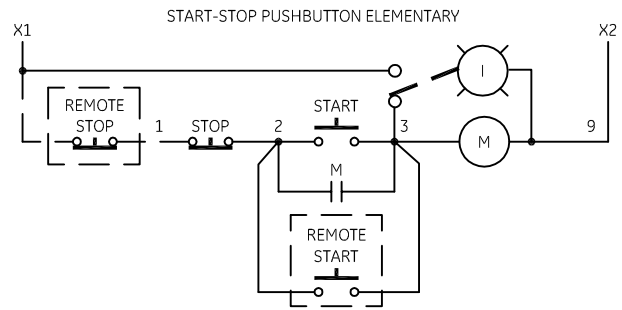

imagination at work

WIRING DIAGRAM  
FVNR SIZE 00, 0 & 1

AN #	THIRD ANGLE PROJECTION	SHEET #	DWG NO.	DATE	REV
09-9111		1 OF 1	55-200273	08/13/2009	3